


Casio W201-1AV

Casio Men's W201-1AV Alarm Chronograph Watch User Manual

Model: W201-1AV

INTRODUCTION

This manual provides detailed instructions for the proper use, setup, and maintenance of your Casio Men's W201-1AV Alarm Chronograph Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

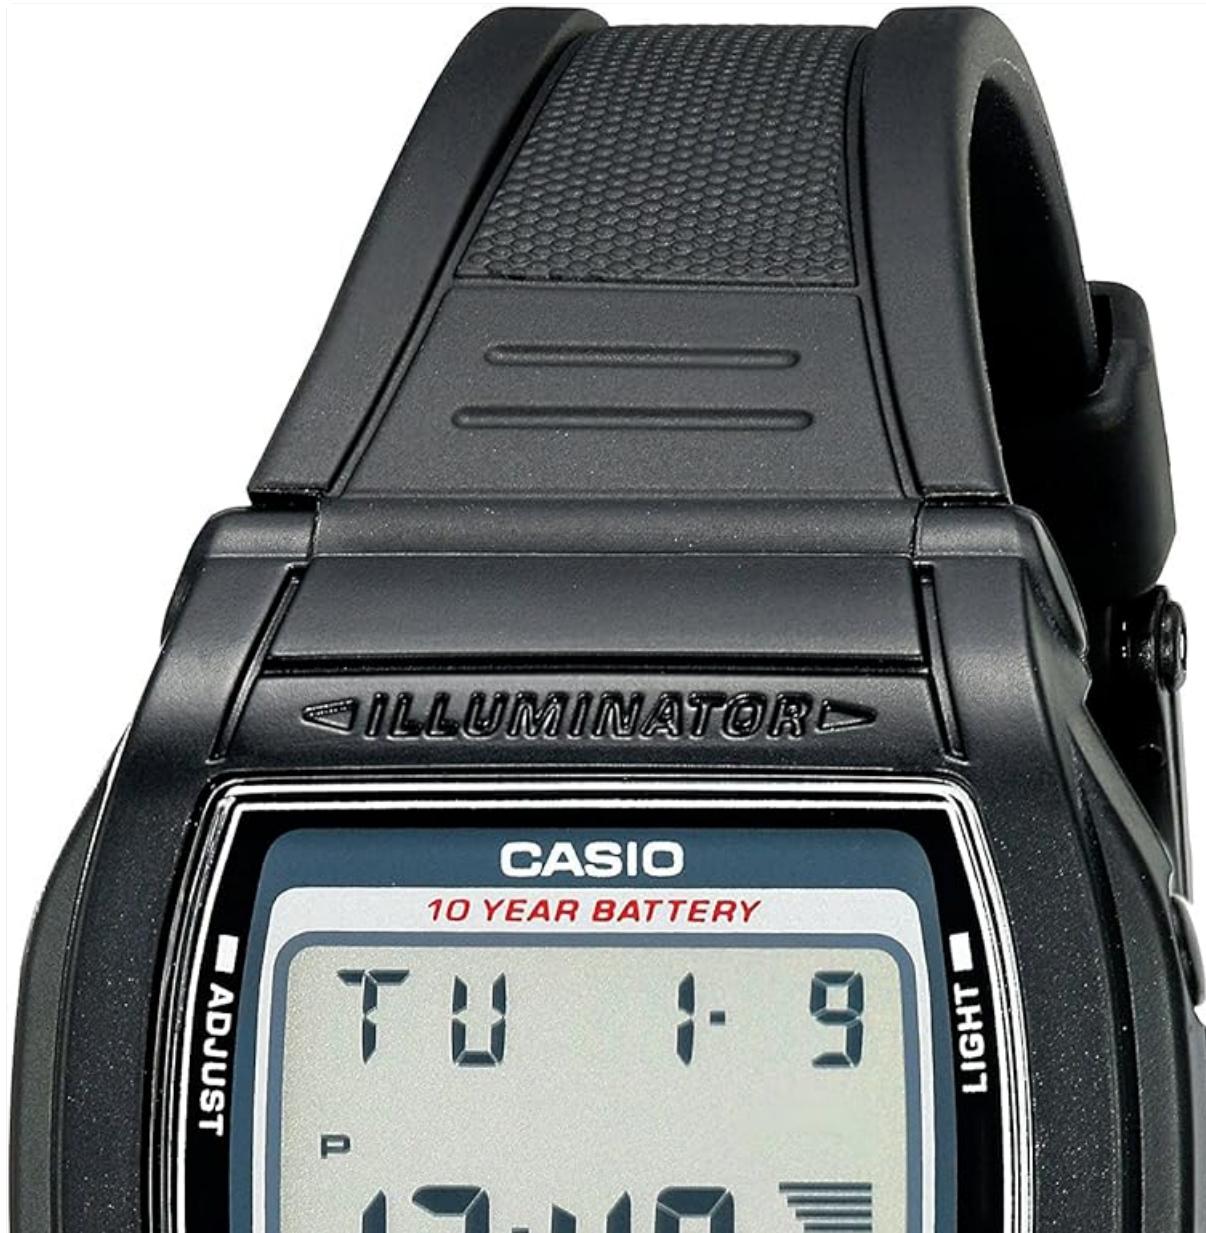

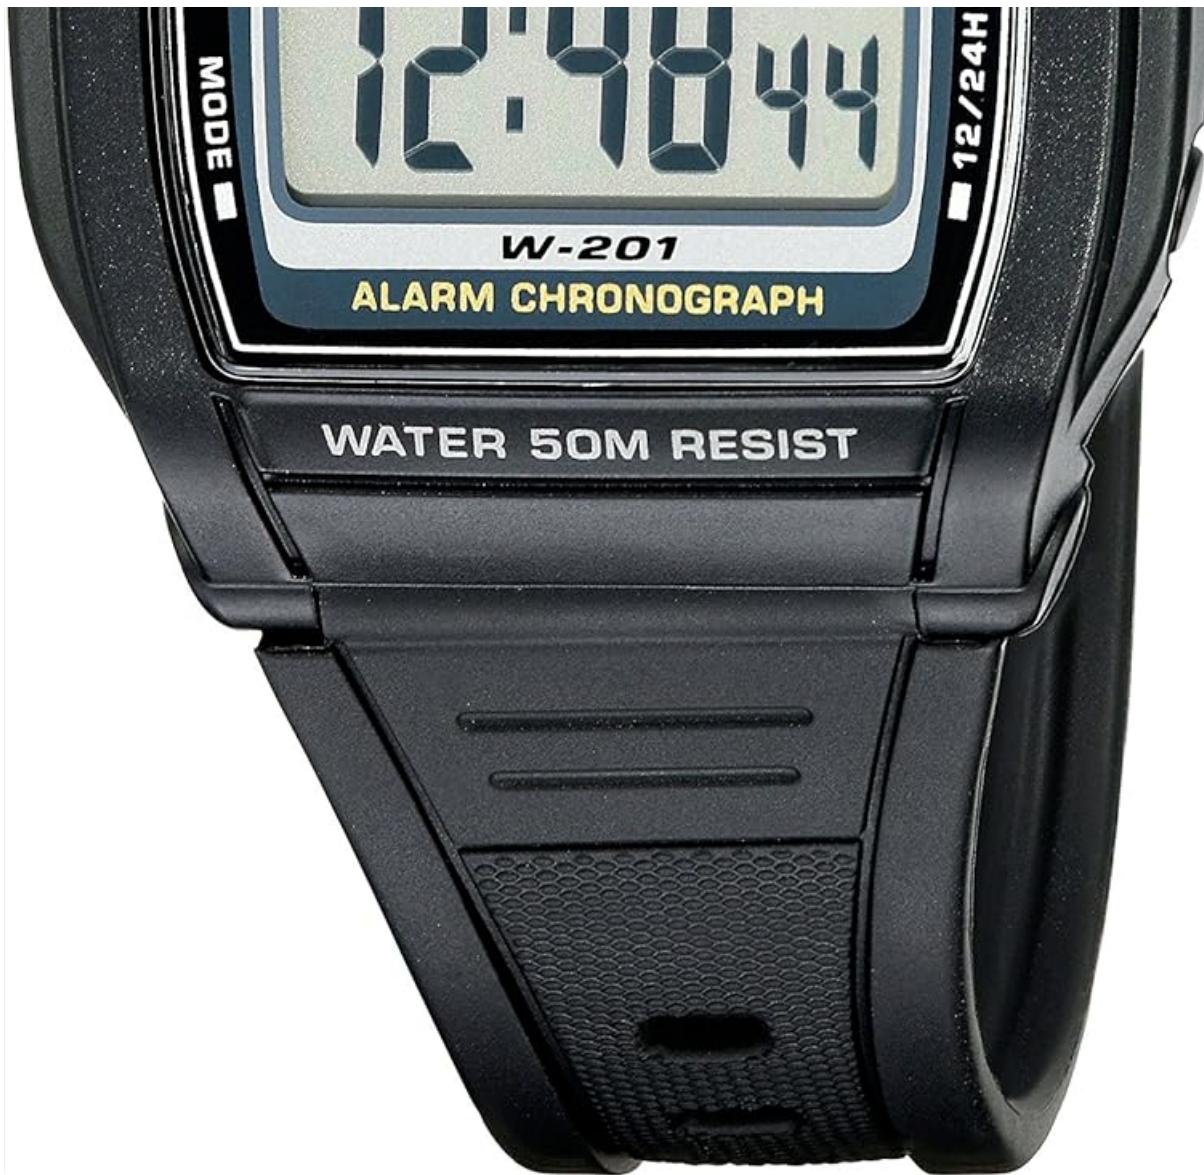


Figure 1: Front view of the Casio W201-1AV Alarm Chronograph Watch, displaying the digital time, date, and various function indicators. The watch features a black resin case and strap.

SETUP

Before using your watch, it is important to set the correct time and date. Your watch comes with a pre-installed battery (1 LR44 battery).

Setting the Time and Date

1. In the Timekeeping Mode, press the **ADJUST** button (top left) until the seconds digits start to flash. This indicates the setting mode.
2. Press the **MODE** button (bottom left) to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day.
3. Use the **LIGHT** button (top right) to increase the flashing number or the **12/24H** button (bottom right) to decrease it. For seconds, pressing the **LIGHT** button resets them to 00.
4. Once all settings are correct, press the **ADJUST** button to exit the setting mode.

12/24-Hour Format

In the Timekeeping Mode, press the **12/24H** button to toggle between 12-hour and 24-hour time formats.

OPERATING INSTRUCTIONS

Your Casio W201-1AV watch offers several useful functions accessible via the **MODE** button.

Mode Navigation

Press the **MODE** button to cycle through the following modes:

- **Timekeeping Mode:** Displays current time, day, and date.
- **Alarm Mode:** Set and activate daily alarms.
- **Stopwatch Mode:** Measure elapsed time.
- **Dual Time Mode:** View time in a different time zone.

Using the Alarm

1. From Timekeeping Mode, press **MODE** until you reach the Alarm Mode ("AL" or an alarm icon).
2. Press **ADJUST** to make the hour digits flash.
3. Use **LIGHT** and **12/24H** buttons to set the desired alarm hour and minute.
4. Press **ADJUST** to confirm and exit.
5. In Alarm Mode, press **LIGHT** to toggle the alarm ON/OFF. An alarm indicator will appear when active.
6. Press **12/24H** to toggle the hourly time signal ON/OFF.

Using the Stopwatch

1. From Timekeeping Mode, press **MODE** until you reach the Stopwatch Mode ("ST" or stopwatch icon).
2. Press **LIGHT** to start and stop the stopwatch.
3. Press **ADJUST** to reset the stopwatch to zero.

Using the Illuminator (LED Light)

Press the **LIGHT** button (top right) in any mode to illuminate the display for easy viewing in low light conditions. The light features an afterglow function.



Figure 2: The Casio W201-1AV watch worn on a wrist, demonstrating its practical size and fit for daily use.

MAINTENANCE

Proper care will extend the life and maintain the appearance of your Casio watch.

Cleaning

- Wipe the watch with a soft, dry cloth to remove dirt and moisture.
- For resin bands, you can use a mild soap solution and a soft brush, then rinse thoroughly with water and dry completely.

- Avoid using chemical cleaners or solvents, as they may damage the watch's materials.

Water Resistance

Your watch is water-resistant to 50 meters (165 feet). This means it is suitable for everyday use, showering, and swimming in shallow water. However, it is **not** suitable for diving or snorkeling. Do not operate buttons while the watch is wet or submerged.

Battery Replacement

The watch is powered by one LR44 battery, designed for approximately 10 years of operation. When the display becomes dim or functions become erratic, it is time to replace the battery. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

TROUBLESHOOTING

If you encounter issues with your watch, refer to the following common problems and solutions:

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Buttons are unresponsive:** Ensure the watch is not in a special mode that locks buttons. If wet, dry the watch thoroughly. If the issue persists, a reset may be required (refer to advanced manual or contact support).
- **Time is incorrect:** Re-set the time and date as per the "Setting the Time and Date" section. Ensure 12/24-hour format is set correctly.
- **Alarm does not sound:** Ensure the alarm is activated in Alarm Mode. Check volume settings if applicable (this model does not have volume control, but a general tip).

For issues not covered here, please contact Casio customer support.

SPECIFICATIONS

Feature	Specification
Model Number	W201-1AV
Case Diameter	36 mm
Product Dimensions	4.8 x 3.2 x 2.3 inches (packaging); 2.08 ounces (watch weight)
Water Resistance	50 meters (165 feet)
Battery Type	1 x LR44 (included)
Approx. Battery Life	10 years
Crystal Material	Mineral
Case/Band Material	Resin
Movement	Quartz



Figure 3: The packaging box for the Casio W201-1AV watch, featuring the Casio logo.

WARRANTY AND SUPPORT

Your Casio W201-1AV Alarm Chronograph Watch is backed by a 1-year limited manufacturer's warranty. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or further assistance, please visit the official Casio website or contact their customer service department. Keep your proof of purchase for warranty validation.

You can find more information and support resources on the [Casio Store on Amazon](#).

© 2024 Casio. All rights reserved.

Related Documents

	<p>Casio BG-152 Watch User Manual - Module 2177</p> <p>Comprehensive user manual for the Casio BG-152 watch, module 2177. Provides detailed instructions on operation, features, water resistance, settings, and maintenance.</p>
	<p>CASIO BG-300D (Module 1455) User Manual: Features, Operation, and Specifications</p> <p>Comprehensive user guide for the CASIO BG-300D digital watch (Module 1455). Covers water resistance, alarm functions, stopwatch, time setting, precautions, and technical specifications.</p>
	<p>Casio LAW-21 Модуль 2789: Руководство пользователя и характеристики</p> <p>Полное руководство пользователя для часов Casio LAW-21 (Модуль 2789). Содержит инструкции по эксплуатации, уходу, описания режимов работы (текущее время, мировое время, таймер, секундомер, будильник) и технические характеристики.</p>
	<p>CASIO PRW-1200 Watch User Manual: Features, Operation, and Specifications</p> <p>Comprehensive user manual for the CASIO PRW-1200 watch (Module 3043), detailing its features, modes, operation, and technical specifications. Learn about timekeeping, world time, stopwatch, timer, alarm, compass, barometer, thermometer, altimeter, and power saving.</p>