

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Aurora](#) /
- › [Aurora 806-B 88 LG Fountain Pen User Manual](#)

Aurora 806-B

Aurora 806-B 88 LG Fountain Pen User Manual

Model: 806-B

INTRODUCTION

Welcome to the world of fine writing with your new Aurora 806-B 88 LG Fountain Pen. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your fountain pen, ensuring a long-lasting and enjoyable writing experience. Please read through these instructions carefully before first use.

PRODUCT OVERVIEW



Image: The Aurora 806-B 88 LG Fountain Pen, featuring a black barrel, a silver-colored chrome cap, and a broad nib. The pen is shown uncapped, revealing the intricate design of the nib.

SETUP

Before using your fountain pen for the first time, it needs to be filled with ink. Your Aurora 806-B 88 LG Fountain Pen typically uses a piston-filling mechanism or can accommodate ink cartridges/converters, depending on the specific model variant. This manual assumes a piston-filling mechanism.

Ink Filling Procedure (Piston Filler)

- 1. Prepare the Pen:** Remove the cap and unscrew the barrel from the section to expose the piston knob.
- 2. Submerge Nib:** Dip the entire nib and a portion of the section into a bottle of fountain pen ink. Ensure the ink level covers the breather hole on the nib.
- 3. Draw Ink:** Slowly turn the piston knob counter-clockwise until the piston is fully extended (all air is expelled). Then, slowly turn the piston knob clockwise to draw ink into the reservoir. Avoid drawing ink too quickly, as this can create air bubbles.
- 4. Expel Air (Optional):** Turn the piston knob slightly counter-clockwise to expel a few drops of ink back into the bottle. This helps to remove any trapped air bubbles and ensures a full fill.

5. **Clean Excess Ink:** Carefully wipe any excess ink from the nib and section with a soft, lint-free cloth or tissue.
6. **Reassemble:** Screw the barrel back onto the section. Your pen is now ready for use.

OPERATING

Using your Aurora fountain pen is a delightful experience. Proper handling ensures smooth ink flow and comfortable writing.

Writing Posture and Grip

- Hold the pen comfortably between your thumb and index finger, resting it on your middle finger.
- Maintain a relaxed grip; excessive pressure is not required with a fountain pen.
- Angle the nib to the paper at approximately 45 degrees for optimal ink flow and line variation.
- Allow the ink to flow naturally; do not press down hard as you would with a ballpoint pen.

Capping and Uncapping

- To uncap, gently pull the cap straight off. Avoid twisting if it's a snap-on cap.
- To cap, align the cap and push it firmly until it clicks or seats securely. This prevents the nib from drying out.

MAINTENANCE

Regular cleaning and proper storage are crucial for the longevity and performance of your fountain pen.

Routine Cleaning

1. **Empty Ink:** If the pen contains ink, expel it back into the bottle or flush it out.
2. **Flush with Water:** Fill a glass with clean, cool water. Submerge the nib and section, then repeatedly draw water into the pen and expel it until the water runs clear.
3. **Dry:** Gently blot the nib and feed with a lint-free cloth. Allow the pen to air dry completely, nib down, for several hours or overnight before refilling or storing.

Note: For best results, clean your pen when changing ink colors or if it will be unused for an extended period (more than a week).

Storage

- Always store your fountain pen capped to prevent the nib from drying.
- Store horizontally or nib-up to prevent ink from pooling in the cap.
- Keep away from direct sunlight, extreme temperatures, and high humidity.

TROUBLESHOOTING

Most common issues with fountain pens can be resolved with simple steps.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Ink flow is inconsistent or stops	Dried ink in nib/feed, low ink level, wrong ink type, or paper fibers clogging.	Clean the pen thoroughly. Check ink level. Ensure you are using fountain pen ink. Try different paper.
Pen skips or scratches	Nib misalignment, dried ink, or writing angle.	Clean the nib. Adjust writing angle. If nib is misaligned, seek professional repair.
Ink leaks from nib or section	Overfilling, loose components, or temperature changes.	Do not overfill. Ensure all parts are securely tightened. Avoid extreme temperature fluctuations.

SPECIFICATIONS

- Model:** Aurora 806-B 88 LG Fountain Pen
- Manufacturer Part Number:** a03806
- Brand:** Aurora
- Color:** Black
- Material:** Chrome (Cap)
- Point Type:** Broad Nib
- Ink Color:** Black (Default)
- Closure:** Snap Cap
- Item Weight:** Approximately 3.01 pounds (Note: This weight seems unusually high for a pen and may refer to shipping weight or packaging.)

WARRANTY AND SUPPORT


Aurora stands behind the quality of its products. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Aurora website. For technical support or service inquiries, please contact Aurora customer service through their official channels.

You can find more information and contact details on the [Aurora Brand Store on Amazon](#).

© 2023 Aurora. All rights reserved.

Related Documents - 806-B






AURORA



Shredder User Manual

AU120MB

[Aurora AU120MB Paper Shredder User Manual - Operation, Maintenance, and Troubleshooting](#)
Comprehensive user manual for the Aurora AU120MB paper shredder, covering installation, operation, maintenance, troubleshooting, and warranty information. Learn how to safely and effectively use your Aurora shredder.

	<p>Aurora Public Safety Official and First Responder Interaction Plan: Toyota Sienna Hybrid</p> <p>This guide provides essential information for public safety officials and first responders on interacting with Aurora's self-driving Toyota Sienna Hybrid vehicles, covering identification, operational procedures, emergency response, and towing.</p>
	<p>Aurora AU-R6CWSBF LED Downlight: Installation Guide and Specifications</p> <p>This document provides installation instructions for the Aurora AU-R6CWSBF LED downlight. It details safety precautions, wiring, wattage and colour temperature selection, and environmental disposal information. Ensure proper installation by a qualified electrician for optimal performance and safety.</p>
	<p>Aurora AU870MA Shredder Troubleshooting Guide: Paper Jams and Overheating</p> <p>Troubleshooting guide for the Aurora AU870MA 8-Sheet Micro-Cut Paper Shredder, covering solutions for paper jams, miss-feeding, fast-feeding, over-filled baskets, and overheating issues.</p>
	<p>Aurora EN-FLC Series High Power LED Floodlights Installation Guide & Warranty</p> <p>Installation guide and warranty information for Aurora EN-FLC Series High Power LED Floodlights (models EN-FLC30, EN-FLC50, EN-FLC80, EN-FLC100, EN-FLC150, EN-FLC200). Details include electrical specs, safety, mounting, wiring, IP65 rating, Class I, and a 5-year guarantee. Covers environmental WEEE compliance.</p>
	<p>Aurora AU200MA Paper Shredder User Manual</p> <p>User manual for the Aurora AU200MA paper shredder, providing detailed instructions on safety, installation, operation, maintenance, and troubleshooting for optimal performance and longevity.</p>