

[Manuals.plus](#) /

› [Xtreme Technologies](#) /

› Xtreme Technologies Xlink BT Bluetooth Gateway User Manual

Xtreme Technologies BT

Xtreme Technologies Xlink BT Bluetooth Gateway User Manual

Model: BT

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

The Xtreme Technologies Xlink BT Bluetooth Gateway allows you to integrate your mobile phone service with your existing home or office corded and cordless telephone systems. This device enables you to make and receive cellular calls using your traditional landline phones, eliminating the need to search for your mobile phone within your premises. It leverages your mobile phone's service plan, including features like unlimited calling and free long distance, without any additional monthly fees.



Figure 1: Xlink BT Bluetooth Gateway. This image shows the front and side of the black Xlink BT device, featuring the 'XLink' logo and two indicator lights (green and red) on the right side. Three blue buttons are visible on the top edge.

Key features include:

- Answer cell phone calls on home telephones.
- Connects up to three cell phones to regular home telephones simultaneously.
- Wireless connectivity: The Xlink automatically connects to paired cell phones when they are within range.

2. SETUP

Follow these steps to set up your Xlink BT Bluetooth Gateway:

1. **Power Connection:** Connect the provided power adapter to the Xlink BT device and plug it into a standard electrical outlet. The device will power on automatically.
2. **Telephone Connection:** Disconnect your existing home or office telephone system's main line from the wall jack. Plug this telephone line directly into the designated phone jack on the back of the Xlink BT Gateway. The Xlink BT supports multiple standard telephones connected to your system.
3. **Mobile Phone Pairing:**
 - Ensure your mobile phone's Bluetooth function is enabled.
 - Place your mobile phone near the Xlink BT Gateway.
 - On your mobile phone, search for available Bluetooth devices. The Xlink BT should appear in the list (often named "Xlink BT" or similar).
 - Select the Xlink BT to initiate pairing. If prompted for a passcode, enter "0000" (four zeros).
 - Once paired, your mobile phone will connect to the Xlink BT. The device can connect to up to three different mobile phones simultaneously.
4. **Placement:** Position the Xlink BT Gateway in a central location within your home or office where your mobile phone typically has good reception. This ensures optimal call quality and reliable connection.

3. OPERATION

Using your Xlink BT Bluetooth Gateway is straightforward:

- **Receiving Calls:** When a call comes in on your paired mobile phone, all connected home telephones will ring. Simply pick up any connected home telephone to answer the call.
- **Making Calls:** To make an outgoing call, pick up any connected home telephone and dial the number as you normally would. The call will be routed through your paired mobile phone's service plan.
- **Voice Recognition Dialing:** For hands-free dialing, pick up a connected home telephone and press "##" (pound key twice). This will typically activate your mobile phone's voice recognition system, allowing you to speak commands or dial contacts by name.
- **Automatic Connection:** The Xlink BT will automatically connect to your paired mobile phone(s) whenever they are within Bluetooth range. Ensure your mobile phone's Bluetooth is active.

4. MAINTENANCE

The Xlink BT Bluetooth Gateway requires minimal maintenance:

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the device. Do not use liquid cleaners or abrasive materials.
- **Environment:** Keep the device in a dry environment, away from direct sunlight, excessive heat, and moisture.
- **Firmware Updates:** Periodically check the Xtreme Technologies website for any available firmware updates for your Xlink BT model. Follow the instructions provided with the update carefully.

5. TROUBLESHOOTING

If you encounter issues with your Xlink BT Gateway, refer to the following common solutions:

Problem	Possible Cause	Solution
No dial tone on home phones.	Xlink BT is not powered on or not connected correctly.	Ensure the power adapter is securely plugged in and the phone line from your home system is connected to the Xlink BT.
Cannot make or receive calls.	Mobile phone not paired or out of Bluetooth range.	Verify your mobile phone's Bluetooth is active and it is paired with the Xlink BT. Keep your mobile phone within close proximity to the Xlink BT.
Static or poor call quality.	Mobile phone is too far from the Xlink BT or interference.	Move your mobile phone closer to the Xlink BT. Ensure there are no large obstructions or other interfering electronic devices nearby.
Home phones give a busy signal.	Temporary connection issue or power interruption.	Perform a soft reset of the Xlink BT by unplugging its power adapter for 10 seconds, then plugging it back in.
Difficulty pairing multiple Xlink BT devices (e.g., in different locations).	Bluetooth device memory conflict on the mobile phone.	If using multiple Xlink BT units with the same mobile phone, you may need to "forget" or remove the previously paired Xlink BT from your phone's Bluetooth settings before pairing with a new unit.

6. SPECIFICATIONS

Feature	Detail
Brand	Xtreme Technologies
Model Number	BT
Hardware Interface	Bluetooth
Color	Black
Compatible Devices	Smartphone
Data Link Protocol	Bluetooth
Item Weight	5.12 ounces
Manufacturer	Xtreme Technologies
Unit Count	1.00 Count

7. WARRANTY & SUPPORT

Warranty: The Xtreme Technologies Xlink BT Bluetooth Gateway comes with a 1-year limited warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Support: For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Xtreme

Technologies customer support. Refer to the official Xtreme Technologies website for the most current contact information.

© 2023 Xtreme Technologies. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question