

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic DECT 6.0 Expandable Digital Cordless Answering System User Manual](#)

## Panasonic KX-TG9341T

# Panasonic DECT 6.0 Expandable Digital Cordless Answering System

Model: KX-TG9341T

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your Panasonic DECT 6.0 Expandable Digital Cordless Answering System, model KX-TG9341T. This system features DECT 6.0 technology for enhanced sound quality and range, an all-digital answering machine, Talking Caller ID, and the ability to expand with up to six handsets.



Image: The Panasonic KX-TG9341T cordless phone system, showing the black base unit with a keypad and control buttons, and a black cordless handset docked in its cradle. The handset display shows a contact name and number.

## SETUP

---

### 1. Unpacking and Component Check

Verify that all components are present in the package:

- Base Unit (KX-TG9341T)
- Cordless Handset

- AC Power Adapter
- Telephone Line Cord
- Rechargeable AAA Batteries (2 included)
- Belt Clip (optional accessory)

## 2. Battery Installation

1. Open the battery compartment cover on the back of the cordless handset.
2. Insert the two supplied AAA rechargeable batteries, observing the correct polarity (+ and -).
3. Close the battery compartment cover securely.
4. Place the handset on the base unit to charge for at least 7 hours before initial use. The charge indicator on the handset will illuminate.

## 3. Connecting the Base Unit

1. Connect the AC power adapter to the DC IN jack on the base unit, then plug the adapter into a standard electrical outlet.
2. Connect one end of the telephone line cord to the LINE jack on the base unit.
3. Connect the other end of the telephone line cord to a single-line telephone wall jack.
4. Ensure all connections are secure.

## 4. Handset Registration (for additional handsets)

Your system can be expanded with up to 6 handsets. To register an additional handset:

1. Place the unregistered handset on the base unit.
2. On the base unit, press and hold the **LOCATOR/INTERCOM** button for approximately 5 seconds until the registration tone sounds.
3. On the handset, press the **OK** button (or follow on-screen prompts) to begin registration.
4. Once registered, the handset will display its assigned number (e.g., Handset 2).

# OPERATING INSTRUCTIONS

---

## 1. Basic Call Functions

- **Making a Call:** Dial the phone number using the keypad, then press the **TALK** button on the handset or the **SPHONE** button on the base unit.
- **Answering a Call:** When the phone rings, press the **TALK** button on the handset or the **SPHONE** button on the base unit.
- **Ending a Call:** Press the **OFF** button on the handset or place the handset back on the base unit. On the base unit, press the **SPHONE** button again.
- **Speakerphone:** During a call, press the **SPHONE** button on the handset or base unit to activate the speakerphone. Press again to return to the earpiece.
- **Redial:** Press the **REDIAL** button to view the last 5 dialed numbers. Select a number and press **TALK** to call.
- **Hold:** During a call, press the **HOLD** button to put the call on hold. Press **TALK** again to resume.

## 2. Answering System

The KX-TG9341T features an all-digital answering machine.

- **Playing Messages:** Press the **PLAY/STOP** button on the base unit or access the answering system menu on the handset.
- **Recording Greeting:** Access the answering system menu to record your personalized outgoing message.
- **Talking Caller ID:** When a call comes in, the base unit and handset will announce the caller's name or number if it is stored in your phonebook or provided by your caller ID service.
- **Talking Alarm Clock/Battery Alert:** The system can announce alarm times and low battery alerts verbally.

### 3. Phonebook

The system includes a 50-station shared phonebook.

- **Adding Entries:** Navigate to the phonebook menu on the handset, select 'Add New Entry', and enter the name and number.
- **Searching Entries:** Use the navigation buttons to scroll through entries or enter the first letter of the name.
- **Dialing from Phonebook:** Select the desired entry and press **TALK**.

### 4. Call Block and Night Mode

- **Call Block:** Add unwanted numbers to a block list to prevent them from ringing your phone. Access this feature through the handset menu.
- **Night Mode:** Set specific time periods during which the phone will not ring, allowing for undisturbed sleep. Calls will still be recorded by the answering machine.

### 5. Intercom

If you have multiple handsets, you can use the intercom feature to communicate between them.

- Press the **INTERCOM** button on the handset or base unit, then select the desired handset to call.

## MAINTENANCE

---

### 1. Cleaning

Wipe the phone's exterior with a soft, damp cloth. Avoid using abrasive cleaners or solvents.

### 2. Battery Care

- Use only the specified rechargeable AAA batteries.
- If the handset will not be used for an extended period, remove the batteries to prevent leakage.
- Battery life may decrease over time. Replace batteries when performance significantly degrades.

## TROUBLESHOOTING

---

If you experience issues with your phone system, try the following solutions:

Problem	Solution
No dial tone	Ensure the telephone line cord is securely connected to both the base unit and the wall jack. Check if the AC power adapter is properly connected.
Cannot make/receive calls	Check if the handset batteries are charged. Ensure the handset is registered to the base unit. Verify your telephone line service is active.
Poor sound quality/static	Move closer to the base unit. Avoid placing the base unit near other electronic devices that may cause interference (e.g., microwaves, Wi-Fi routers).
Answering machine not recording messages	Check if the answering machine is turned ON. Ensure there is sufficient recording time available.
Handset display is blank	Place the handset on the base unit to charge the batteries. If the issue persists, the batteries may need replacement.

## SPECIFICATIONS

Feature	Detail
Model Number	KX-TG9341T
Product Dimensions	5.4 x 6 x 5.7 inches
Item Weight	1.9 pounds
Batteries	2 AAA batteries required (included)
Telephone Type	Cordless
Answering System Type	Digital
Expandability	Up to 6 handsets
Phonebook Capacity	50-Station shared phonebook
Color	Gunmetallic
Compatible Devices	KX-TGA930

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Panasonic support website. You can also contact Panasonic customer service directly for assistance with

product registration, troubleshooting, or service inquiries.

Online Support: [na.panasonic.com/us/support](https://na.panasonic.com/us/support)