

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price Big Action Dig N' Ride Instruction Manual

Fisher-Price 8228

Fisher-Price Big Action Dig N' Ride Instruction Manual

Model: 8228

1. IMPORTANT SAFETY INFORMATION

Please read all instructions before assembly and use. Keep this manual for future reference.

- **WARNING:** Adult assembly is required.
- **WARNING:** Adult supervision is required at all times during use.
- Recommended for children aged 18 months to 4 years.
- For indoor use only.
- Keep small parts away from children before and during assembly.
- Ensure all fasteners are secure before allowing a child to use the product.

2. WHAT'S IN THE BOX

Verify that all components are present before beginning assembly.

- Fisher-Price Big Action Dig N' Ride (main body)
- Digging Arm with Bucket
- 3 AA Batteries (included)



Image: The Fisher-Price Big Action Dig N' Ride shown in its original retail box, indicating the product as it appears when unboxed.

3. ASSEMBLY INSTRUCTIONS

The Fisher-Price Big Action Dig N' Ride requires minimal assembly and no tools.

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Attach Digging Arm:** Align the digging arm with the designated slot on the front of the main ride-on body. Push firmly until it clicks securely into place.
3. **Install Batteries:** Locate the battery compartment, typically under the seat or on the dashboard. Open the compartment, insert the 3 AA batteries (included) ensuring correct polarity (+/-), and close the compartment cover.
4. **Final Check:** Before first use, ensure the digging arm is firmly attached and the battery compartment is securely closed.



Image: A front-angled view of the assembled Fisher-Price Big Action Dig N' Ride, highlighting the main body and digging arm.

4. OPERATING INSTRUCTIONS

This ride-on toy is designed for imaginative play and developing motor skills.

- **Riding:** The child sits on the seat and uses their feet to propel the ride-on forward or backward.
- **Digging Arm Control:** Use the red handles on the digging arm to raise, lower, and extend the arm for realistic digging actions.
- **Electronic Sounds:** Press the buttons on the dashboard to activate realistic electronic construction sounds.
- **Steering:** The steering wheel is for imaginative play and does not control the direction of the wheels.



Image: A young child sitting on the Fisher-Price Big Action Dig N' Ride, demonstrating its use for active play.

5. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your ride-on toy.

- **Cleaning:** Wipe the ride-on with a damp cloth and mild soap. Do not use abrasive cleaners. Do not immerse the product in water.
- **Storage:** Store the ride-on in a dry, cool place away from direct sunlight when not in use.
- **Battery Replacement:** Replace batteries when electronic sounds become faint or stop working. Always use new AA batteries and dispose of old batteries responsibly.
- **Inspection:** Periodically check for any loose parts, cracks, or damage. Tighten any loose fasteners. Discontinue use if significant damage is found.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No electronic sounds	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with new AA batteries.
Digging arm is stiff or difficult to move	Minor friction or obstruction.	Ensure no foreign objects are obstructing the mechanism. Apply gentle, consistent force.

7. SPECIFICATIONS

Brand:	Fisher-Price
Model Number:	8228
Item Type:	Dig N' Ride
Age Range:	18 months to 4 years
Material:	Plastic
Power Source:	Battery Powered
Batteries:	3 AA batteries (included)
Operation Mode:	Manual
Item Weight:	11.2 pounds
Item Dimensions (L x W x H):	21.75 x 34 x 13.25 inches
Indoor/Outdoor Usage:	Indoor

8. WARRANTY AND SUPPORT

Warranty Information: No specific manufacturer warranty information is provided for this product in the available data.

Customer Support: For further assistance or inquiries, please contact Fisher-Price customer service through their official website or contact channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question