

[Manuals.plus](#) /

› [Epson](#) /

› Epson Perfection V200 Photo USB 4800x9600dpi Flatbed Scanner User Manual

Epson B11B188011

Epson Perfection V200 Photo USB 4800x9600dpi Flatbed Scanner User Manual

Model: B11B188011

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Epson Perfection V200 Photo scanner. The Epson Perfection V200 Photo is a versatile flatbed scanner designed for scanning photos, film, and documents with high resolution and clarity. It features automatic scanning, a 4800 dpi resolution, and a convenient high-rise lid, making it suitable for various scanning projects including archiving, creating enlargements from film, and restoring faded photos.

2. SAFETY INFORMATION

WARNING: The solder used in this product contains lead, a chemical known to the State of California to cause birth defects and other reproductive harm. Please wash hands after handling internal components and circuit boards and avoid inhalation of fumes if heating the solder.

Always ensure the scanner is placed on a stable, flat surface. Do not block ventilation openings. Use only the power adapter supplied with the scanner. Keep the scanner away from water or excessive moisture. Disconnect the power cord from the electrical outlet before cleaning or if the scanner will not be used for an extended period.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Epson Perfection V200 Photo Scanner Unit
- AC Adapter
- USB Cable
- Software CD-ROM (may include drivers, Epson Scan, ArcSoft PhotoImpression, ABBYY FineReader Sprint Plus OCR)
- Film Holder (for 35mm film strips and mounted slides)



Image: The Epson Perfection V200 Photo scanner shown with its included power adapter and USB cable, essential for operation.

4. SETUP

1. **Unpack the Scanner:** Carefully remove the scanner and all accessories from the packaging. Remove any protective tape or packing materials from the scanner unit, especially from the scanner lid and glass platen.
2. **Install Software:** Before connecting the scanner to your computer, install the necessary software from the included CD-ROM or download the latest drivers and utilities from the official Epson support website. Follow the on-screen instructions during installation.
3. **Connect and Turn On:** Connect the AC adapter to the scanner and then to a power outlet. Connect the USB cable from the scanner to an available USB port on your computer. Once connected, turn on the scanner using the power button. Your computer should detect the new hardware.

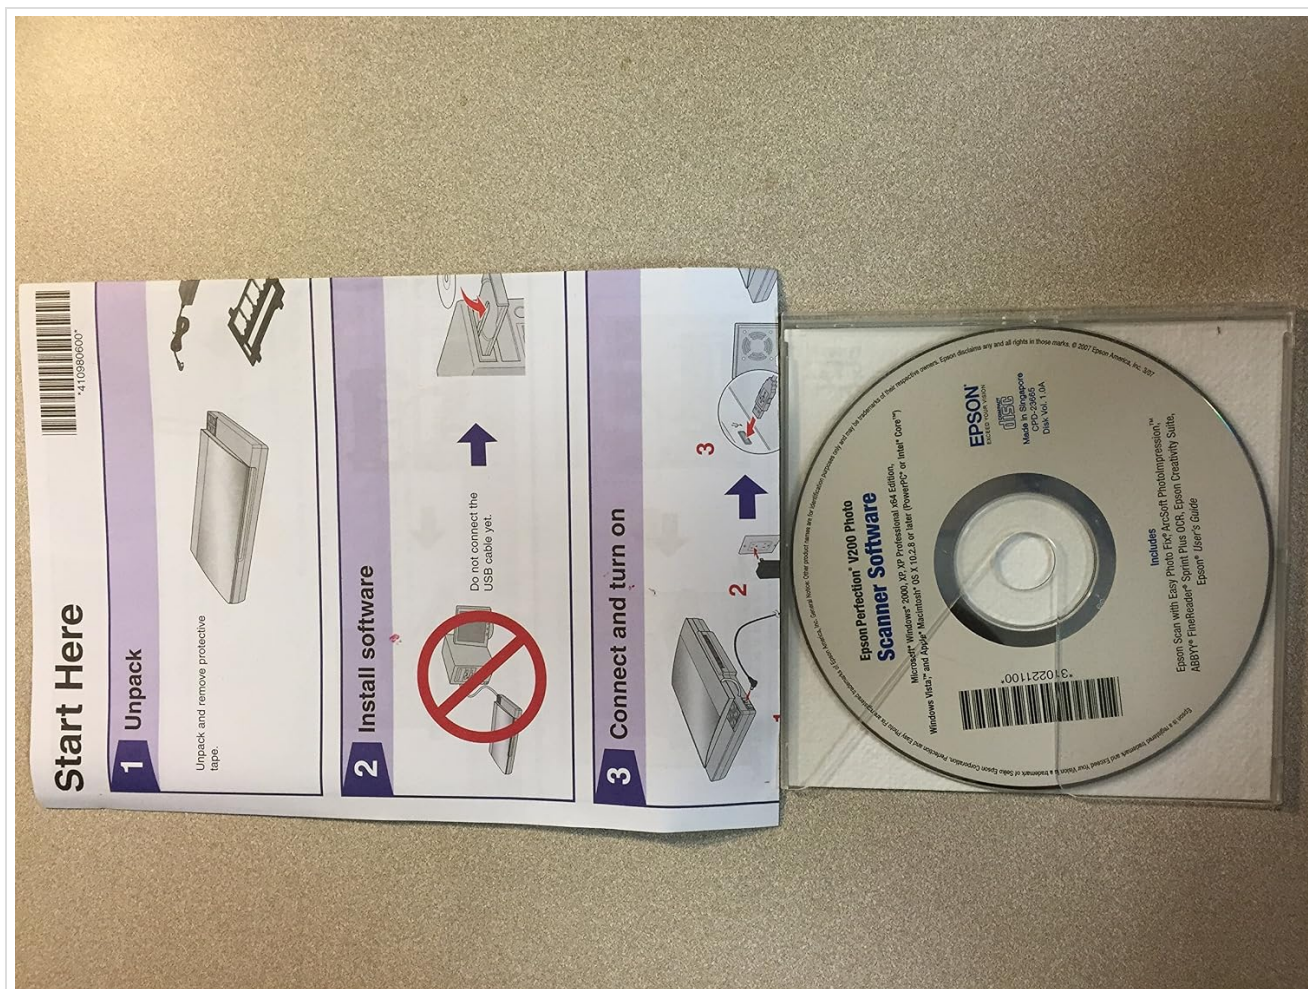


Image: A quick setup guide illustrating the steps to unpack, install software, and connect the scanner, alongside the software installation CD.

5. OPERATING INSTRUCTIONS

5.1 Scanning Documents and Photos

1. Place the document or photo face-down on the scanner glass, aligning it with the corner guide.
2. Close the scanner lid.
3. Open the Epson Scan software on your computer.
4. Select the appropriate scanning mode (e.g., Home Mode, Professional Mode) and document type (e.g., Photo, Document).
5. Adjust settings such as resolution, color correction, and destination (e.g., save to file, email).
6. Click the 'Scan' button to begin the scanning process.

5.2 Scanning Film and Slides

The Epson Perfection V200 Photo includes a built-in Transparency Unit for scanning film and slides. Use the provided film holder to properly position your film strips or mounted slides.

1. Open the scanner lid and remove the document mat from the inside of the lid to expose the Transparency Unit.
2. Place your 35mm film strips or up to four mounted slides into the film holder.
3. Place the film holder onto the scanner glass, aligning it with the guides.
4. Close the scanner lid.

5. In the Epson Scan software, select 'Film' as the Document Type and choose your desired settings (e.g., resolution up to 9600 dpi for film, Digital ICE Technology for dust/scratch removal).
6. Preview and then scan your film or slides. The software can save individual images from a single scan of multiple slides/frames.

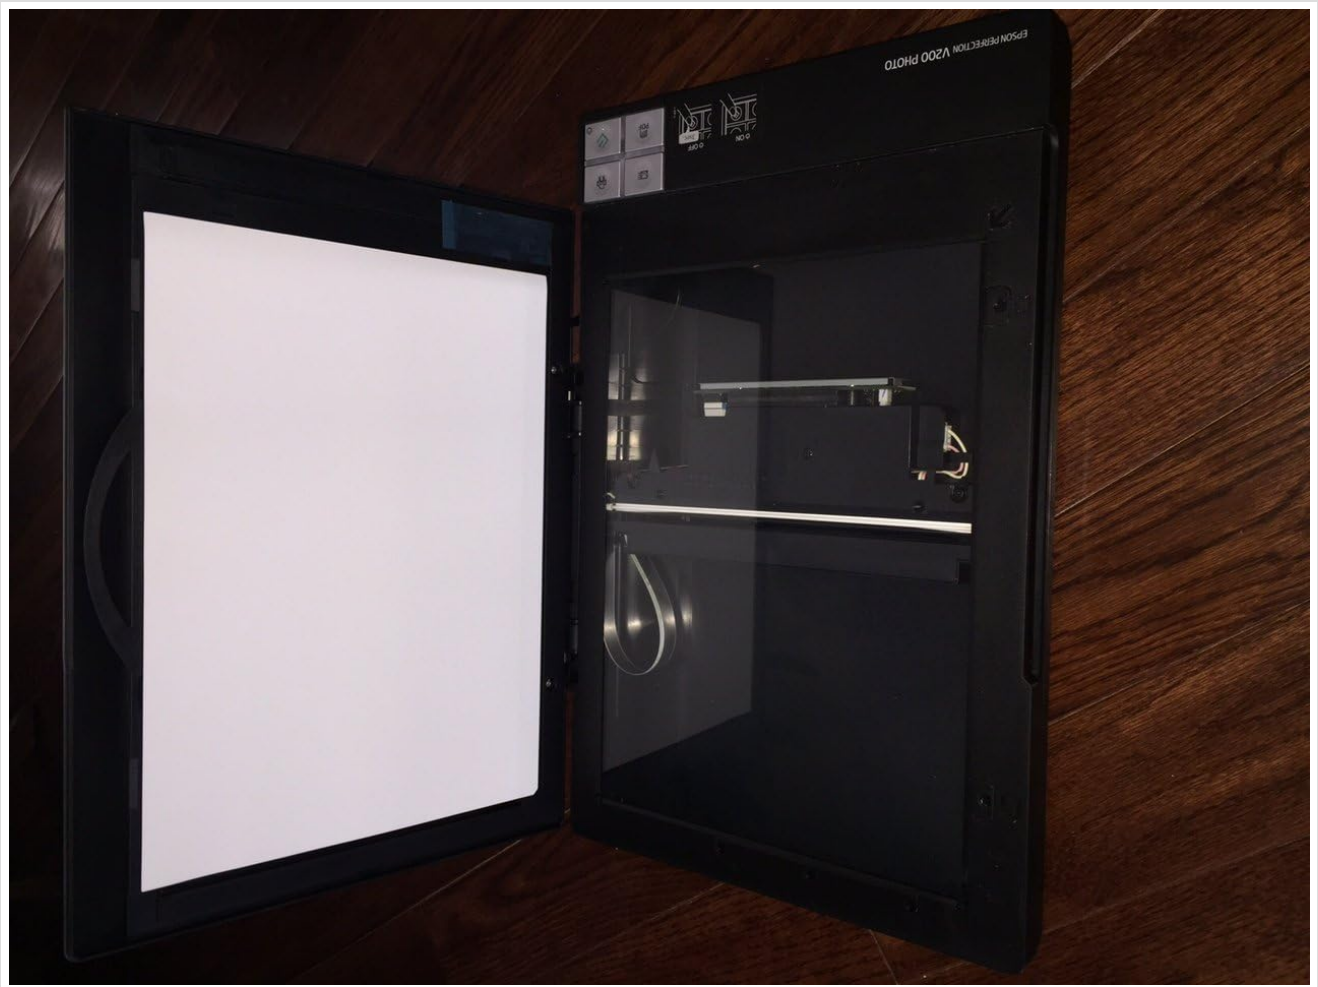


Image: The Epson Perfection V200 Photo scanner with its lid open, revealing the flatbed scanning surface and the integrated transparency unit for film and slide scanning.

6. MAINTENANCE

To ensure optimal performance and longevity of your scanner, regular maintenance is recommended:

- **Cleaning the Scanner Glass:** Use a soft, lint-free cloth lightly dampened with a mild glass cleaner (non-abrasive) to clean the scanner glass. Do not spray cleaner directly onto the glass.
- **Cleaning the Scanner Exterior:** Wipe the exterior of the scanner with a soft, dry cloth. Avoid using strong detergents or abrasive cleaners.
- **Dust Removal:** Periodically use a can of compressed air to remove dust from the scanner's ventilation slots.
- **Software Updates:** Check the Epson support website regularly for updated drivers and software to ensure compatibility and access to the latest features.

7. TROUBLESHOOTING

If you encounter issues with your scanner, try the following steps:

- **Scanner Not Detected:** Ensure the USB cable is securely connected to both the scanner and the computer. Verify the power adapter is properly connected and the scanner is turned on. Try connecting to a different USB

port.

- **Scanning Issues (Poor Quality, Lines):** Clean the scanner glass thoroughly. Ensure the document or film is placed correctly on the platen or in the film holder. Check scanning software settings for appropriate resolution and image enhancements.
- **Software Errors:** Restart your computer and the scanner. Reinstall the scanner software if errors persist. Ensure your operating system is up to date.
- **Scanner Not Powering On:** Check the power cord connection to both the scanner and the electrical outlet. Try a different power outlet.

For more detailed troubleshooting, refer to the comprehensive help documentation within the Epson Scan software or visit the Epson support website.

8. SPECIFICATIONS

Feature	Specification
Product Dimensions	2.2"D x 16.9"W x 2.2"H (5.6 cm x 42.9 cm x 5.6 cm)
Item Weight	2.98 pounds (1.35 kg)
Optical Resolution	4800 dpi x 9600 dpi
Color Depth	48 Bits
Scanner Type	Flatbed, Film
Media Type Supported	Negatives, Slide, Photo, Documents
Connectivity Technology	USB
Max Supported Media Size	8.5 in x 11.7 in (21.6 cm x 29.7 cm)
Wattage	16.5 watts
Model Number	B11B188011
Manufacturer	EPSON AMERICA INC
Date First Available	August 10, 2008

9. WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the warranty card included with your scanner or visit the official Epson website. Epson provides customer support and resources for product registration, driver downloads, and troubleshooting.

Epson Support Website: www.epson.com/support

It is recommended to register your product to receive updates and support notifications.