

[manuals.plus](#) /

- › [Transformers](#) /
- › [Transformers Robot Heroes Autobot Jazz VS. Decepticon Frenzy Instruction Manual](#)

Transformers 83356

Transformers Robot Heroes Autobot Jazz VS. Decepticon Frenzy Instruction Manual

Model: 83356

INTRODUCTION

This manual provides essential information for the proper handling, setup, and care of your Transformers Robot Heroes Autobot Jazz and Decepticon Frenzy figures. These mini action figures are designed for display and imaginative play. Please read these instructions carefully to ensure a satisfying experience.

PRODUCT OVERVIEW

The Transformers Robot Heroes set includes two mini action figures: Autobot Jazz and Decepticon Frenzy. Each figure is a non-transforming, stylized representation of its character, designed for durability and display.



Image: The Transformers Robot Heroes set, featuring Autobot Jazz and Decepticon Frenzy in their original packaging. The figures are visible through a clear plastic window, showcasing their detailed sculpts and vibrant colors. The packaging displays the Transformers logo and character names.

SETUP

- Unboxing:** Carefully remove the figures from their packaging. Retain packaging for future reference or storage if desired.
- Inspection:** Inspect both Autobot Jazz and Decepticon Frenzy figures for any visible damage or manufacturing defects. If any issues are found, refer to the Warranty and Support section.
- Placement:** Place the figures on a stable, flat surface for display, or prepare them for play.

OPERATING INSTRUCTIONS

These figures are designed for posing and imaginative play. They do not transform.

- Posing:** Gently manipulate the articulated joints (if present) on each figure to achieve desired poses. Avoid excessive force to prevent damage.

- **Play:** Engage in imaginative play scenarios. These figures are suitable for children aged 5 and up.
- **Display:** Position figures on shelves, desks, or other display areas. Ensure they are stable to prevent falling.

Maintenance

- **Cleaning:** To clean the figures, gently wipe them with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store figures in a cool, dry place away from direct sunlight and extreme temperatures to prevent discoloration or material degradation.
- **Handling:** Handle figures with care. Avoid dropping them or applying excessive pressure to small parts.

Troubleshooting

- **Loose Joints:** If a joint becomes slightly loose over time, it may be a normal result of play. For minor looseness, a small amount of clear nail polish or a similar non-damaging adhesive applied to the joint and allowed to dry can sometimes improve tightness.
- **Stuck Joints:** If a joint is stiff, gently try to move it. Do not force it. Applying a small amount of silicone-based lubricant (not oil-based) can sometimes help, but use sparingly.
- **Missing Parts:** These figures are sold as a complete set. If any parts appear to be missing upon unboxing, please contact customer support.

Specifications

- **Product Dimensions:** 6.18 x 6.18 x 2.01 inches (packaged)
- **Item Weight:** 2.4 ounces
- **Model Number:** 83356
- **Manufacturer:** Hasbro
- **Recommended Age:** 5 years and up

Warranty and Support

This product is covered by the manufacturer's standard warranty against defects in materials and workmanship. For specific warranty details, please refer to the information provided on the product packaging or contact Hasbro customer service directly.

For technical support, replacement parts, or any other inquiries, please visit the official Transformers brand website or contact Hasbro customer support. Keep your purchase receipt as proof of purchase.