

Accenta A400

Accenta Traps Drums A400 Portable Acoustic Drum Set User Manual

Model: A400

1. INTRODUCTION

The Accenta Traps Drums A400 is a portable acoustic drum kit designed to offer the feel and sound of a traditional drum set with enhanced portability. It features high-quality, durable A.B.S. construction, fitted with Remo heads and steel counter hoops, allowing for traditional multi-screw tuning. This design also supports the use of pads for silent practice. The robust rack system, constructed from substantial steel tubing, ensures stability during play. The A400 can be configured for both left- and right-handed drummers using the provided tough ABS multifunctional joints. Its strong rack, equipped with four large rubber feet, prevents movement during use, contributing to improved playability.

2. PACKAGE CONTENTS

Please verify that all components listed below are included in your package. If any items are missing or damaged, please contact customer support.

- 5-Piece Portable Drum Set (Bass Drum, Snare Drum, High-Tom, Low-Tom, Floor Tom)
- Rack Mounting System (Steel Tubing and ABS Joints)
- Hi-Hat Stand
- Bass Drum Pedal
- Tuning Key
- Drumsticks
- Four Large Rubber Feet for Rack Stability

Note: Cymbals are not included with this drum set and must be purchased separately.



Bass Drum : 20 インチ



Snare Drum : 12 インチ



High-Tom : 10 インチ



Low-Tom : 12 インチ



Floor Tom : 14 インチ



シンバル・アーム ※シンバルは付属致しません。

Image 2.1: Individual drum components including Bass Drum, Snare Drum, High-Tom, Low-Tom, and Floor Tom.



ハイハット・スタンド

※シンバルは付属致しません。



バスドラム・ペダル



チューニングキー



ドラムスティック

Image 2.2: Included accessories: Hi-Hat Stand, Bass Drum Pedal, Tuning Key, and Drumsticks.

3. SETUP INSTRUCTIONS

Follow these steps to assemble your Accenta Traps Drums A400 kit. It is recommended to assemble the kit in the area where it will be used.

1. **Unpack Components:** Carefully remove all drums, rack tubing, joints, and hardware from the packaging.
2. **Assemble the Rack System:**

- Connect the steel tubing sections using the supplied ABS multifunctional joints. Ensure all connections are secure.
- Attach the four large rubber feet to the base of the rack system for stability.
- Configure the rack to your preferred left- or right-handed playing setup.

3. **Mount the Drums:**

- Attach the Bass Drum, Snare Drum, High-Tom, Low-Tom, and Floor Tom to the rack system using the provided clamps and mounts.
- Adjust the position and angle of each drum for comfortable playing. Ensure all drum mounts are tightened securely to prevent movement during play.

4. **Install Hi-Hat Stand and Bass Drum Pedal:**

- Place the Hi-Hat Stand in a comfortable position relative to the snare drum.
- Attach the Bass Drum Pedal to the Bass Drum. Adjust the beater angle and spring tension as desired.

5. **Add Cymbals (Sold Separately):** If you have cymbals, attach them to the cymbal arms on the rack system or to separate cymbal stands.

6. **Final Adjustments:** Sit at the kit and make any final adjustments to drum and cymbal positions, angles, and heights to suit your playing style.



Image 3.1: The Accenta Traps Drums A400 Portable Acoustic Drum Set fully assembled.



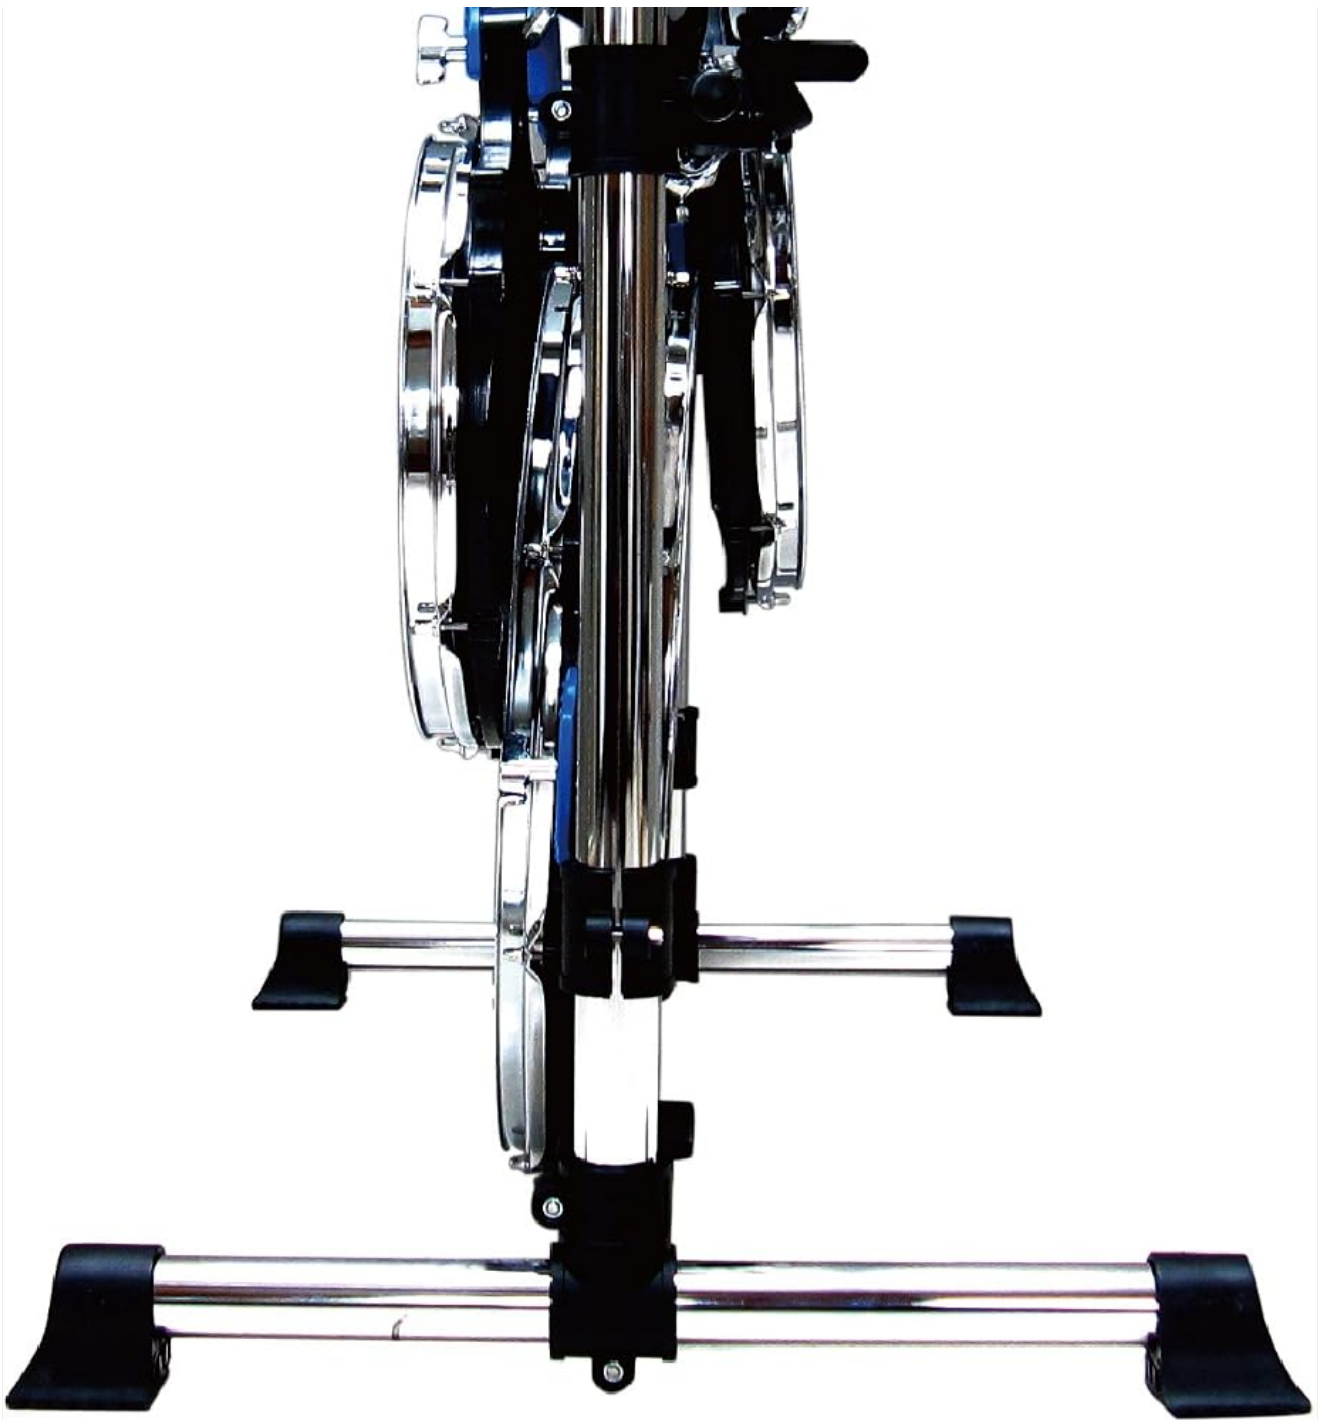


Image 3.2: The Accenta Traps Drums A400 Portable Acoustic Drum Set in its compact, folded configuration for transport or storage.

4. OPERATING INSTRUCTIONS

The Accenta Traps Drums A400 operates like a traditional acoustic drum set.

4.1 Tuning the Drums

Each drum is equipped with a traditional multi-screw tuning system. Use the provided tuning key to adjust the tension of the drum heads.

- **Initial Tuning:** Loosen all tension rods until they are finger-tight. Then, tighten each rod in a star pattern (opposite rods) in small increments until the desired pitch is achieved.
- **Fine-Tuning:** Tap the drum head near each tension rod to check for even tension. Adjust individual rods as needed to eliminate wrinkles and achieve a consistent tone across the head.
- **Sound Characteristics:** Tighter heads generally produce higher pitches and shorter sustain, while looser

heads yield lower pitches and longer sustain. Experiment to find your preferred sound.

4.2 Playing the Kit

Use the included drumsticks to strike the drum heads and cymbals (if installed). The Bass Drum Pedal operates the bass drum beater, and the Hi-Hat Stand controls the opening and closing of the hi-hat cymbals.

4.3 Silent Practice

The design of the A400 allows for the use of practice pads (not included) on the drum heads for reduced volume practice. Simply place compatible pads on top of the drum heads.

5. MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your drum set.

- **Cleaning:** Wipe down the drums and rack system with a soft, dry cloth after each use to remove dust and fingerprints. For stubborn grime, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners.
- **Hardware Inspection:** Periodically check all nuts, bolts, and clamps on the rack system and drum mounts. Tighten any loose components to maintain stability and prevent rattling.
- **Drum Head Care:** Drum heads will wear out over time. Replace them when they show significant signs of wear, such as dents, tears, or loss of tone.
- **Storage:** When not in use for extended periods, store the drum set in a cool, dry place away from direct sunlight and extreme temperature fluctuations. The A400's portable design allows for compact storage.

6. TROUBLESHOOTING

If you encounter issues with your Accenta Traps Drums A400, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Drums or rack components feel loose or unstable.	Loose clamps or joints.	Inspect all ABS multifunctional joints and drum clamps. Tighten them firmly using the appropriate tools (e.g., tuning key or socket wrench if applicable).
Poor drum sound or inconsistent tone.	Uneven drum head tension; worn drum heads.	Re-tune the drum head by adjusting tension rods in a star pattern until tension is even. Consider replacing worn drum heads.
Bass drum moves during play.	Bass drum not securely attached to the rack or pedal.	Ensure the bass drum is firmly clamped to the rack system. Verify the bass drum pedal is securely attached to the bass drum hoop and its spurs are extended and gripping the floor.
Squeaking or rattling noises.	Loose hardware; metal-on-metal contact.	Identify the source of the noise. Tighten any loose hardware. Apply a small amount of lubricant (e.g., silicone spray) to moving parts if necessary, avoiding drum heads.

7. SPECIFICATIONS

- **Model:** A400

- **Brand:** Accenta
- **Drum Set Piece Quantity:** 5
- **Body Material:** Plastic (Drums), Alloy Steel (Rack System)
- **Color:** Black
- **Item Weight:** Approximately 62 Pounds (28.1 kg)
- **Product Dimensions (L x W x H):** 30 x 23 x 9 inches (76.2 x 58.4 x 22.9 cm)
- **UPC:** 892115002013, 765076958852
- **Manufacturer:** Accenta
- **Date First Available:** July 16, 2004

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Accenta Traps Drums A400, please contact Accenta customer service. Keep your purchase receipt as proof of purchase.

Contact information for Accenta can typically be found on their official website or through your retailer.