

[Manuals.plus](#) /

› [Daewoo](#) /

› Daewoo KOR6L0B 0.7 cu.ft. 600W Compact Microwave Oven User Manual

Daewoo KOR6L0B

Daewoo KOR6L0B 0.7 cu.ft. 600W Compact Microwave Oven User Manual

Model: KOR6L0B

1. INTRODUCTION

Thank you for purchasing the Daewoo KOR6L0B 0.7 cu.ft. 600W Compact Microwave Oven. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read these instructions thoroughly before use and retain them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door, or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Never use metal utensils or containers in the microwave oven.
- Always supervise children when the microwave is in use.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove the microwave oven from its packaging. Remove all packing materials, including any protective film or tape from the oven surfaces and accessories. Inspect the oven for any damage. If any damage is observed, do not operate the oven and contact your dealer.

3.2 Placement

Place the microwave oven on a flat, stable surface, such as a countertop, that is strong enough to hold the oven and the food you place in it. Ensure there is adequate ventilation around the oven. Maintain a minimum clearance of 4 inches (10 cm) from the rear and sides, and 12 inches (30 cm) from the top of the oven to allow for proper airflow.



Image 1: Daewoo KOR6L0B Compact Microwave Oven. This image shows the front view of the microwave oven, highlighting its compact design suitable for countertop placement.

3.3 Turntable Installation

1. Place the turntable support ring securely in the center of the oven cavity.
2. Position the glass turntable plate on top of the support ring, ensuring it sits firmly in the center hub.
3. Verify that the turntable rotates freely by hand.

3.4 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the requirements specified on the appliance rating label.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The Daewoo KOR6L0B features a user-friendly touch control panel. Key functions include:

- **Time Cook:** For manual cooking time and power level settings.
- **Power Level:** Adjusts microwave power (10 levels).
- **Auto Cook:** Pre-programmed settings for various foods (5 menus).
- **Defrost:** For thawing frozen foods.
- **One Touch Cooking:** Quick start for common cooking times (3 menus).
- **Clock:** Sets the time of day (12/24hr selectable).

- **Stop/Cancel:** Stops cooking or clears settings.
- **Start:** Begins cooking or confirms settings.

4.2 Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable. Close the oven door securely.
2. Press the **Time Cook** button.
3. Use the number pads to enter the desired cooking time (e.g., 1 for 1 minute, 30 for 30 seconds). The maximum cooking time is 59 minutes and 90 seconds.
4. To adjust power level, press the **Power Level** button repeatedly until the desired level (1-10) is displayed. Level 10 is full power (600W).
5. Press the **Start** button to begin cooking.

4.3 One Touch Cooking

For quick heating of common items, the oven offers 3 one-touch cooking options. Simply press the corresponding button for instant cooking:

- Consult your specific model's control panel for the exact one-touch menu items and their default cooking times.

4.4 Auto Cook Menus

The oven includes 5 pre-programmed auto cook menus for various food types. These menus automatically set the cooking time and power level based on the food type and quantity.

1. Place food in the oven.
2. Press the **Auto Cook** button repeatedly to cycle through the available menus until the desired food type is displayed.
3. Use the number pads or quantity buttons (if available) to select the weight or serving size.
4. Press **Start** to begin.

4.5 Auto Defrost

The auto defrost function allows for efficient thawing of frozen foods.

1. Place frozen food in a microwave-safe container.
2. Press the **Defrost** button.
3. Enter the weight of the food using the number pads.
4. Press **Start**. The oven will automatically calculate the defrosting time and power level.

4.6 Setting the Clock

1. Press the **Clock** button.
2. Use the number pads to enter the current time (e.g., 12:30).
3. Press the **Clock** button again to select 12-hour or 24-hour format.
4. Press **Start** to confirm.

4.7 Child-Safety Lock

To prevent unsupervised operation, activate the child-safety lock:

- **To Activate:** Press and hold the **Stop/Cancel** button for 3 seconds. A lock indicator will appear on the display.
- **To Deactivate:** Press and hold the **Stop/Cancel** button for 3 seconds again. The lock indicator will disappear.

5. CARE AND MAINTENANCE

5.1 Cleaning the Oven Interior

- Wipe the interior cavity after each use with a damp cloth to prevent food splatters from drying.
- For stubborn stains, place a bowl of water with lemon juice inside and microwave for 2-3 minutes. The steam will loosen the grime, making it easier to wipe away.
- Do not use abrasive cleaners or scouring pads.

5.2 Cleaning the Oven Exterior

- Clean the exterior surfaces with a soft, damp cloth and mild detergent.
- Avoid getting water into the ventilation openings.
- Wipe the control panel gently with a damp cloth.

5.3 Turntable Care

- The glass turntable and turntable support ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher.
- Ensure they are completely dry before placing them back in the oven.

6. TROUBLESHOOTING

If you experience issues with your microwave oven, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Child lock activated; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close door firmly; Deactivate child lock; Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time or power level set; Door not closed properly; Metal objects inside.	Adjust cooking time and power level; Ensure door is fully closed; Remove any metal utensils or foil.
Turntable not rotating	Turntable not properly seated; Debris under turntable; Turntable motor malfunction.	Ensure turntable and support ring are correctly positioned; Clean under the turntable; If problem persists, contact service.
Sparkling inside oven	Metal objects inside; Food splatters on oven walls; Damaged waveguide cover.	Remove all metal; Clean oven interior thoroughly; Contact service if waveguide cover is damaged.

7. SPECIFICATIONS

Technical specifications for the Daewoo KOR6L0B Microwave Oven:

Feature	Specification
Model Number	KOR6L0B
Capacity	0.7 Cubic Feet
Microwave Power Output	600 Watts
Power Levels	10

Feature	Specification
Controller Type	Touch
Installation Type	Countertop
Timer	59 min 90 sec (Accurate)
Auto Cook Menus	5
One Touch Cooking	3 Menus
Defrost System Type	Auto Defrost
Clock	12/24hr Selectable
Child-Safety Lock	Electronic
Color	White
Inner Material	Stainless Steel

8. WARRANTY AND SUPPORT

Daewoo products are manufactured to high-quality standards and are warranted against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details.

For technical assistance, troubleshooting beyond this manual, or to inquire about warranty service, please contact Daewoo customer support. Keep your purchase receipt as proof of purchase for warranty claims.

- **Customer Support:** Refer to your product documentation or the official Daewoo website for current contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0013RNWZ4>

More documents and user manuals: <https://manuals.plus/>