

Manuals.plus /

› Memorex /

› Memorex MVDP1078 Portable DVD Player User Manual

Memorex MVDP1085

Memorex MVDP1078 Portable DVD Player User Manual

Model: MVDP1085

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Memorex MVDP1078 Portable DVD Player. Designed for both home and travel, this device features an 8-inch widescreen TFT LCD display and supports various disc formats including DVD, CD, MP3 CD, and Picture CD. Please read this manual thoroughly before using the player and retain it for future reference.

PRODUCT FEATURES

- 8-inch widescreen TFT LCD display for clear viewing.
- Compatible with DVD, DVD+R/RW, DVD-R/RW, CD-R/RW, CD+R/RW, MP3 CD, and Picture CD formats.
- Built-in stereo speakers for audio playback.
- On-screen graphical user interface for easy navigation.
- Anti-shock protection ensures smooth DVD playback during movement.
- Zoom function for detailed viewing.
- Rechargeable Lithium-Ion battery pack providing up to 2 hours of playback.
- Includes wireless remote control for convenient operation.
- Headphone jack for private listening.
- AC/DC Adaptor for home and car use.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Memorex MVDP1078 Portable DVD Player
- Wireless Remote Control
- AC/DC Power Adapter
- Car Power Adapter (DC)
- Audio/Video (AV) Cable

- User Manual

SETUP

1. Charging the Battery

Before initial use, fully charge the built-in Lithium-Ion battery. Connect the AC/DC power adapter to the DC IN 9V port on the player and plug the other end into a standard wall outlet. The charging indicator light will illuminate. A full charge typically takes approximately 3-4 hours and provides up to 2 hours of playback.

2. Connecting to Power

For continuous operation or to charge the battery, use the provided AC/DC adapter. For in-car use, connect the car power adapter to the DC IN 9V port and the vehicle's 12V power outlet.

3. External Connections (Optional)

To connect the player to an external display or audio system, use the supplied AV cable. Connect one end to the AV OUT port on the player and the other end to the corresponding AV IN ports on your television or audio receiver.

OPERATING INSTRUCTIONS

1. Powering On/Off

Slide the **POWER** switch to the **ON** position to turn on the player. The screen will illuminate. To turn off, slide the switch to the **OFF** position.

2. Inserting and Removing Discs

1. Open the disc compartment cover gently.
2. Place a disc onto the spindle with the label side facing up. Ensure the disc is securely seated.
3. Close the disc compartment cover until it clicks into place.
4. To remove a disc, open the cover, gently press the center spindle, and lift the disc.

3. Basic Playback Controls

- **PLAY/PAUSE** (▶/⏸): Press to start or pause playback.
- **STOP** (■): Press once to stop playback temporarily, press twice to stop completely and return to the disc menu.
- **SKIP** (◀◀ / ▶▶): Press to skip to the previous or next track/chapter.
- **FAST FORWARD/REWIND** (▶▶▶ / ◀◀◀): Press and hold to fast forward or rewind through content.

4. Menu Navigation

Use the **DIRECTIONAL ARROWS** (Up, Down, Left, Right) and **ENTER** button on the player or remote to navigate disc menus and settings.

5. Volume Adjustment

Adjust the volume using the **VOLUME +/-** buttons on the player or remote control.

6. Using Headphones

Plug standard 3.5mm headphones into the **HEADPHONE** jack for private listening. The built-in speakers will automatically mute.

7. Zoom Function

During DVD playback, press the **ZOOM** button on the remote to cycle through different zoom levels. Use directional arrows to move the zoomed area.

MAINTENANCE

1. Cleaning the Unit

Wipe the exterior of the player with a soft, dry cloth. Do not use liquid cleaners or abrasive materials. Keep the disc compartment free of dust and debris.

2. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Recharge the battery regularly, even if the player is not in use for extended periods. Store the player in a cool, dry place.

3. Disc Care

Handle discs by their edges. Store discs in their cases to prevent scratches. Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.

TROUBLESHOOTING

If you encounter issues with your player, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Player does not power on.	Ensure the POWER switch is in the ON position. Verify the AC/DC adapter is securely connected to the player and a working power outlet. Battery may be fully discharged. Connect to power and allow it to charge.
Disc does not play / "No Disc" error.	Ensure the disc is inserted correctly with the label side up. Check if the disc is dirty or scratched. Clean the disc if necessary. Verify the disc format is supported (DVD, CD, MP3 CD, Picture CD). Disc compartment cover may not be fully closed.
No sound or low volume.	Increase the volume using the VOLUME +/- buttons. If headphones are connected, disconnect them to enable built-in speakers. Check audio settings in the disc menu.
Poor picture quality or distorted image.	Clean the disc. Ensure the screen is clean. If connected to an external display, check the AV cable connections.

SPECIFICATIONS

Brand Name	Memorex
Model Number	MVDP1085
Product Dimensions	5.8 x 12.5 x 10.3 inches
Item Weight	1 pounds
Display Size	8-inch widescreen TFT LCD (diagonal)
Supported Disc Formats	DVD, DVD+R/RW, DVD-R/RW, CD-R/RW, CD+R/RW, MP3 CD, Picture CD
Battery Type	Rechargeable Lithium-Ion
Battery Life	Up to 2 hours
Color	Black

WARRANTY AND SUPPORT

Memorex products are designed for reliability and performance. For warranty information and technical support, please refer to the warranty card included with your product or visit the official Memorex website. Keep your purchase receipt as proof of purchase for warranty claims.

PRODUCT OVERVIEW



Image: The Memorex MVDP1078 Portable DVD Player shown with its 8-inch screen open, displaying the disc compartment and control buttons. The player is black with a sleek finish.