

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Waste King](#) /

› [Waste King L-3300 Garbage Disposal User Manual](#)

## Waste King L-3300

# Waste King L-3300 Garbage Disposal User Manual

Model: L-3300 | Brand: Waste King

## 1. PRODUCT OVERVIEW

The Waste King L-3300 is a 3/4 horsepower garbage disposal designed for efficient and reliable food waste disposal. It features a pre-installed power cord for easy setup and sound insulation for quieter operation. Its permanent magnet motor and stainless steel swivel impellers are engineered to reduce jamming, ensuring continuous feed technology for smooth performance. The unit includes a removable splashguard for convenient cleaning and a front-mounted reset button for easy access.

### Key Features:

- **Full Size:** 3/4 HP design, 8-1/2 inches in diameter, 14-1/2 inches long, weighing 10 lbs. Operates at 60 Hz.
- **High-Speed Motor:** 3/4 HP, 2700 RPM (115v) permanent magnet motor, sound-insulated to reduce jams.
- **Easy Installation and Cleaning:** EZ Mount system for quick kitchen sink installation, with a removable splashguard for easy maintenance.
- **Durability:** Compact and lightweight design with all stainless steel grind components.
- **Pre-installed Power Cord:** No electrical expertise needed for wiring, simplifying installation.
- **Continuous Feed Disposal:** Activated by a wall switch, it grinds food waste continuously while running.
- **10-Year Protection:** Backed by a 10-year Limited Warranty.



 **WASTE KING**®

**L-3300**

Figure 1: Waste King L-3300 Garbage Disposal highlighting its main features.

## 2. SAFETY INFORMATION

Always prioritize safety when installing, operating, or maintaining your garbage disposal. Failure to follow these instructions could result in electric shock, fire, or serious injury.

- Electrical Safety:** Before any installation or maintenance, ensure the power to the disposal is disconnected. If hardwired, turn off the circuit breaker at the electrical panel. If plugged in, unplug the unit.
- Water Safety:** Always run cold water when operating the disposal.
- Personal Safety:** Never put hands, fingers, or any other body parts into the disposal opening. Use a wooden dowel or similar non-metallic tool to dislodge items if necessary. Always wear safety glasses during installation.
- Proper Use:** Do not dispose of large bones, metal, glass, plastic, or fibrous materials like corn husks or celery stalks, as these can damage the unit or plumbing.

- **Qualified Personnel:** If you have questions regarding electrical connections or complex plumbing, consult a qualified electrician or plumber.

## 3. INSTALLATION GUIDE

This section provides a step-by-step guide for installing your Waste King L-3300 garbage disposal. For a visual demonstration, please refer to the official installation video below.

Your browser does not support the video tag.

Video 1: How to Remove and Install a Waste King EZ Mount Disposal.

This video demonstrates the process of removing an old garbage disposal and installing a new Waste King EZ Mount disposal, covering preparation, removal, new mounting assembly installation, discharge elbow attachment, and final connection.

### 3.1. Preparation

- Ensure the disposal operates on 110-120V, 60 Hz, which is standard in most homes.
- Before starting, unplug your old garbage disposal and dishwasher (if applicable).
- If your disposal is hardwired, turn off the power at the electrical panel and disconnect any hardwired connections.
- Gather necessary tools: hammer, flathead screwdriver, wooden dowel or steel punch, plumber's putty, and safety glasses.
- If your dishwasher outlet hose is not 7/8 inch in diameter, you may need a dishwasher connector kit.

### 3.2. Removing the Old Garbage Disposal

- Disconnect the drain line and any other connections from the old disposal.
- If you have a dishwasher, remove the dishwasher drain hose.
- Most garbage disposals are removed by turning the lower mounting ring to your right. Hold onto the disposal as you turn to prevent it from falling. A screwdriver can be inserted into a tab to help turn the mounting ring.
- Remove the mounting assembly by loosening the mounting screws and popping off the snap ring.
- Remove the sink flange.

### 3.3. Installing the New Mounting Assembly

- Remove the mounting assembly from the new Waste King disposal by turning the mount ring to your right, raising and removing it.
- Push down the mount ring and remove the cushion mount.
- Unthread the support ring and remove the fiber gasket. *Note:* A rubber gasket can be used in place of plumber's putty with stainless steel sinks. Plumber's putty or sealant should be used with any other sink.
- Clean the area around the drain opening thoroughly.
- Position the sink flange with the rubber gasket in the center of the drain.
- Slide the fiber gasket onto the sink flange and thread on the support ring until it is tight.
- Place the mount ring over the sink flange with tabs pointing up, and align the inside groove on the cushion mount to the sink flange.

### 3.4. Attaching the Discharge Elbow

- If you have a dishwasher, use a wooden dowel or steel punch to remove the plug in the dishwasher inlet *Do not use a screwdriver or any other sharp instrument.*
- Ensure the rubber gasket is on the discharge elbow.
- Slide the metal bracket over the elbow and insert it into the discharge outlet on the disposal.
- Tighten the two screws evenly to secure the elbow.

### 3.5. Connecting the Disposal to the Mounting Assembly

- Guide the mount tabs into the mounting ring slots and turn the mounting ring to your right until it locks into place.
- Align the discharge elbow with the drain piping and connect them securely.
- Insert a screwdriver into a mounting ring ear to ensure it's in the fully locked position. *Ensure that the flange does not rotate or the seal could be broken.*
- If there's a dishwasher, connect the dishwasher drain hose with a clamp. A 7/8-inch inside diameter hose will fit directly. If the hose size is different, use a dishwasher connector kit.
- Make sure all connections are secure.
- Run water to check for leaks.
- Plug in the power cord and turn the power back on at the electrical panel.



Figure 2: Dimensions and connection points of the Waste King L-3300 Garbage Disposal.

## 4. OPERATING INSTRUCTIONS

The Waste King L-3300 is a continuous feed garbage disposal, meaning it operates as long as the power is on.

- **To Operate:** Turn on the cold water faucet to a moderate flow. Then, activate the disposal using its wall switch.

- **Feeding Food Waste:** Gradually feed food waste into the disposal opening. Avoid overloading the unit.
- **After Grinding:** Allow the disposal and water to run for a few seconds after the grinding sound subsides to ensure all waste is flushed through the drain.
- **Reset Button:** The front-mounted reset button allows for easy resetting of the unit in case of an overload or jam.

## 5. MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your Waste King L-3300 garbage disposal.

- **Cleaning:** The removable splashguard can be easily taken out for cleaning. Periodically clean the splashguard and the inside of the disposal with a mild detergent and brush.
- **Odor Control:** To help control odors, grind citrus peels (lemon, lime, orange) occasionally. This helps clean the grind chamber and leaves a fresh scent.
- **Preventing Jams:** Always run cold water before, during, and for a short period after grinding. Avoid putting large, hard, or fibrous items into the disposal.

## 6. TROUBLESHOOTING

If your Waste King L-3300 disposal encounters an issue, try these common troubleshooting steps:

Problem	Possible Cause	Solution
Disposal does not start.	No power, tripped circuit breaker, or tripped reset button.	Check power outlet. Reset the circuit breaker. Press the red reset button on the front of the disposal.
Disposal hums but does not grind.	Jam in the grind chamber.	Turn off power. Use a wooden dowel or broom handle to dislodge the item by rotating the impellers. <i>Never use your hands.</i>
Leaking from the disposal.	Loose connections or damaged seals.	Check all plumbing connections for tightness. Inspect gaskets and seals for damage. Re-tighten mounting ring if necessary.
Slow draining.	Partial clog in drain line or disposal.	Run disposal with plenty of cold water. Try grinding ice cubes to help clear minor clogs. If persistent, a plumber may be needed.

## 7. SPECIFICATIONS

 
Attribute	Value
Manufacturer	Waste King
Part Number	L-3300
Item Weight	10 pounds
Product Dimensions	8.5 x 8.5 x 14.5 inches
Item Model Number	L-3300
Size	3/4 HP
Finish	Stainless Steel
Material	Stainless Steel
Voltage	115 Volts
Item Package Quantity	1
Included Components	Power Cord, Mounting Hardware, The Waste King Legend 2700 3/4-Horsepower Disposer
Date First Available	September 14, 2004

## 8. WARRANTY AND SUPPORT

The Waste King L-3300 Garbage Disposal comes with a **10-Year Limited Warranty**, providing peace of mind regarding its quality and durability.

For detailed warranty information, troubleshooting, or any other inquiries, please refer to the official User Manual (PDF) available for download or contact Waste King Consumer Services.

- **Official User Manual (PDF):** [Download PDF](#)
- **Waste King Consumer Services:** 1-800-854-3229

	<p><b><u>Waste King Commercial Disposer Installation Instructions</u></b></p> <p>Comprehensive installation guide for Waste King Commercial Disposer Models 500, 750, 1000, 1250, and 1500, covering sink installation, spray-rinse setup, mounting, plumbing, and electrical connections.</p>
	<p><b><u>Comprehensive Guide to Waste Separation and Disposal</u></b></p> <p>An informative guide detailing the proper separation and disposal methods for various household items, categorized by waste type (combustible, non-burnable, bulky, hazardous, etc.).</p>
	<p><b><u>Kotarbau Trash Bag Stand: Safety, Usage, and Care Instructions</u></b></p> <p>Official safety instructions, usage guidelines, storage, maintenance, and disposal information for the Kotarbau trash bag stand, compiled from multilingual documents for clarity and accessibility.</p>
<p><b>FOOD GARBAGE DISPOSAL</b></p>  <p><b>S55</b></p> <p><u>Installation and Operation Instructions</u></p>	<p><b><u>S55 Food Garbage Disposal: Installation and Operation Guide</u></b></p> <p>Comprehensive guide for installing and operating the S55 Food Garbage Disposal. Learn about its features, proper usage, maintenance, and troubleshooting.</p>
<p><b>LEFTON</b></p> <p><b>Installation Manual</b></p> <p><b>LGD-513</b></p>  <p><b>1/2HP Continuous Garbage Disposal</b></p>	<p><b><u>LEFTON LGD-513 1/2HP Continuous Garbage Disposal Installation Manual</u></b></p> <p>Comprehensive installation manual for the LEFTON LGD-513 1/2HP Continuous Garbage Disposal, providing step-by-step instructions and safety warnings.</p>



## [InSinkErator ES30 & ES50 Food Waste Disposal Installation and Use Manual](#)

This manual provides detailed installation, operation, and maintenance instructions for the InSinkErator ES30 and ES50 Food Waste Disposals. It includes safety warnings, parts lists, step-by-step installation guides, operating tips, cleaning instructions, and warranty information.