

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Waste King](#) /

› [Waste King L-3200 3/4 HP Continuous Feed Garbage Disposal User Manual](#)

## Waste King L-3200

# Waste King L-3200 3/4 HP Continuous Feed Garbage Disposal User Manual

Model: L-3200 | Horsepower: 3/4 HP

## INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of your Waste King L-3200 3/4 HP Continuous Feed Garbage Disposal. Please read this manual thoroughly before installation and use to ensure proper function and safety.

The Waste King L-3200 features a high-speed 2,700 RPM permanent magnet motor, an easy EZ-Mount system for quick installation, sound-deadening insulation for quiet operation, and a pre-installed power cord for convenience. It is designed for efficient food waste management and is safe for use with properly sized septic tanks.

## SAFETY INFORMATION

### **WARNING: Read all instructions carefully before operating the appliance.**

- Always turn off power to the disposal unit before attempting to clear a jam or perform maintenance.
- Do not put hands or foreign objects into the disposal.
- Ensure proper electrical grounding to prevent electric shock.
- Do not dispose of non-food items, large bones, or fibrous materials.
- Always run cold water when operating the disposal.

## PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Waste King L-3200 Garbage Disposal Unit
- EZ Mount System
- Pre-installed Power Cord
- Drain Elbow and Gaskets
- Stopper/Splashguard

- Installation Instructions (this manual)



Waste King L-3200 3/4 HP Continuous Feed Garbage Disposal with pre-installed power cord.

## SETUP & INSTALLATION

The Waste King L-3200 features an EZ-Mount system designed for quick and straightforward installation. No specialized electrical expertise is required due to the pre-installed power cord.

### Pre-Installation Checklist

Ensure you have the following tools and materials:

- Screwdriver
- Adjustable Pliers
- Plumber's Putty
- Hammer and Punch (if knocking out dishwasher inlet plug)

### Mounting the Disposal

Follow the detailed instructions provided in the included installation guide for mounting the EZ Mount system to your sink and attaching the disposal unit. The EZ Mount Twist-and-Lock design simplifies this

process.



Diagram of the EZ Mount Twist-and-Lock system for simplified installation.



Dimensions of the Waste King L-3200, showing its compact design.

## Electrical Connection

The Waste King L-3200 comes with a pre-installed power cord, allowing for direct plug-in installation. Ensure the outlet is properly grounded and meets local electrical codes.

This video demonstrates the installation process of a Waste King garbage disposal, highlighting the ease of connecting the pre-installed power cord and mounting the unit.

## OPERATING INSTRUCTIONS

### How to Use Your Disposal

1. Remove the sink stopper.
2. Turn on a medium stream of cold water.
3. Turn on the disposal by pressing the power button.
4. Slowly feed food waste into the disposal opening.
5. Allow the disposal to run until all waste is cleared and only the sound of water and the motor is heard.
6. Turn off the disposal, then turn off the water.

Watch the Waste King garbage disposal in action as it efficiently grinds food waste, demonstrating its powerful continuous feed operation.

### Acceptable Waste

The Waste King L-3200 is designed to handle most common food scraps, including:

- Vegetable peels (carrots, potatoes, celery in small amounts)
- Fruit scraps (apple cores, citrus rinds)
- Small bones (fish, poultry)
- Coffee grounds
- Plate scrapings

### Unacceptable Waste

Avoid placing the following items into the disposal to prevent damage and clogs:

- Large or hard bones (beef, pork)
- Fibrous materials (corn husks, artichokes, onion skins)
- Grease, fats, or oils
- Non-food items (plastic, metal, glass, paper)
- Chemicals or harsh cleaning agents



Top view of the Waste King L-3200 grinding chamber, showing the splashguard.

## MAINTENANCE

---

### Care and Cleaning

- **Regular Flushing:** After each use, run cold water for a few seconds after the grinding stops to flush the drain line.
- **Deep Cleaning:** To clean the grinding chamber and remove odors, grind a tray of ice cubes followed by citrus peels (lemon, orange).

### Removable Splashguard

The splashguard can be removed for cleaning. Simply pull it out from the sink opening, clean it with soap and water, and reinsert it. This helps maintain hygiene and prevents odors.



Close-up view of the removable splashguard, facilitating easy cleaning.

## TROUBLESHOOTING

### Disposal Not Starting

- **Check Power:** Ensure the disposal is properly plugged into a working electrical outlet.
- **Reset Button:** Locate the red reset button on the front of the disposal unit and press it firmly. If it trips repeatedly, there may be an internal issue requiring professional service.

### Jammed Disposal

- **Turn Off Power:** Disconnect power to the disposal at the circuit breaker or by unplugging it.
- **Clear Obstruction:** Use tongs or pliers to carefully remove any visible objects from the grinding chamber. Never use your hands.
- **Use Wrench:** If no object is visible, insert the disposal wrench (or a 1/4 inch hex wrench) into the center hole on the bottom of the disposal and turn it back and forth to free the grinding plates.
- **Reset:** Restore power and press the reset button. Turn on cold water and then the disposal.



Location of the front-mounted power reset button for easy access.

## SPECIFICATIONS

Feature	Specification
Model Number	L-3200
Horsepower	3/4 HP
Motor Speed	2,700 RPM
Voltage	115 Volts
Product Dimensions	7.75 x 7.75 x 13.75 inches
Item Weight	8.6 pounds
Grind Components Material	Stainless Steel
Housing Material	Corrosion Proof Polymer

Feed Type

Continuous Feed

## WARRANTY AND SUPPORT

### Warranty Information

The Waste King L-3200 Garbage Disposal is backed by an 8-year Limited Warranty Protection. For specific terms and conditions, please refer to the warranty card included with your product or visit the official Waste King website.

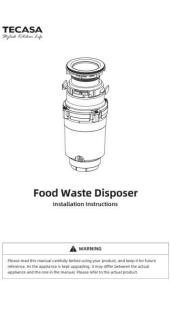
### Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Waste King Customer Service:

- **Phone:** 800.854.3229
- **Website:** [WasteKing.com](https://WasteKing.com)

© 2025 Waste King. All rights reserved.

### Related Documents - L-3200

	<p><a href="#">Waste King Commercial Disposer Installation Instructions</a></p> <p>Comprehensive installation guide for Waste King Commercial Disposer Models 500, 750, 1000, 1250, and 1500, covering sink installation, spray-rinse setup, mounting, plumbing, and electrical connections.</p>
	<p><a href="#">LEFTON LGD-714 Installation Manual: 3/4HP Continuous Garbage Disposal</a></p> <p>Comprehensive installation guide for the LEFTON LGD-714 3/4HP Continuous Garbage Disposal. Includes a detailed parts list, step-by-step assembly instructions, dishwasher connection guidance, and essential safety warnings for proper installation and use.</p>
	<p><a href="#">TECASA Food Waste Disposer Installation Instructions</a></p> <p>Comprehensive installation guide for the TECASA Food Waste Disposer, covering safety precautions, required tools, parts list, step-by-step installation, operating instructions, and troubleshooting.</p>

LEFTON  
Installation Manual  
**LGD-513**



1/2HP Continuous Garbage Disposal

### [LEFTON LGD-513 1/2HP Continuous Garbage Disposal Installation Manual](#)

Comprehensive installation manual for the LEFTON LGD-513 1/2HP Continuous Garbage Disposal, providing step-by-step instructions and safety warnings.



### [Comprehensive Guide to Waste Separation and Disposal](#)

An informative guide detailing the proper separation and disposal methods for various household items, categorized by waste type (combustible, non-burnable, bulky, hazardous, etc.).