

## Manuals+


[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VTech](#) /

› [VTech Paint and Learn Art Easel Instruction Manual](#)

**VTech 80-079200**

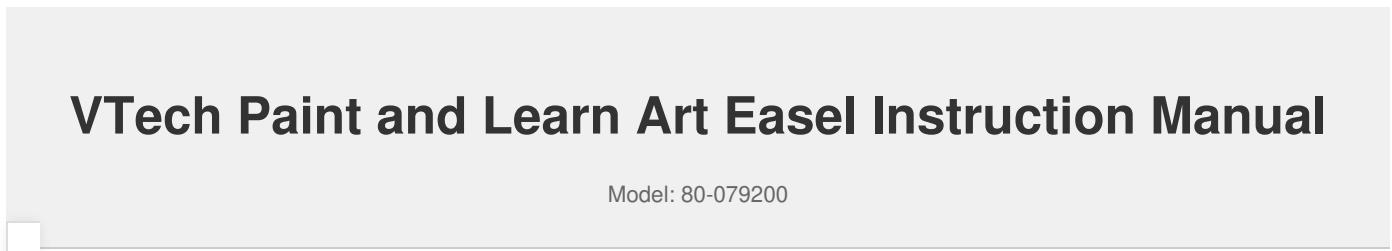

## INTRODUCTION

Welcome to the VTech Paint and Learn Art Easel. This interactive toy is designed to engage young children with creative play and early learning concepts. It features light-up buttons, musical piano keys, and a double-sided activity card to introduce letters, numbers, colors, and music.

Please read this manual thoroughly before assembly and use to ensure proper operation and safety.

## SAFETY INFORMATION

- **Adult assembly is required.** Ensure all parts are securely fastened before allowing a child to play with the easel.
- Do not leave children unattended with the product, especially during initial use.
- Keep small parts out of reach of children under 3 years of age.
- Always use the recommended battery type and ensure correct polarity.
- Dispose of batteries responsibly.

## PACKAGE CONTENTS

Verify that all components are present in the package:

- Easel main unit
- Easel legs (2)
- Light-up paintbrush
- Double-sided activity card
- 2 AA batteries (included for demonstration purposes)

## ASSEMBLY AND SETUP

Follow these steps for assembly:

- Attach the Legs:** Insert the two easel legs into the designated slots at the base of the easel main unit until they click securely into place.
- Install Batteries:** Locate the battery compartment on the back of the easel. Use a screwdriver to open the cover. Insert 2 new AA batteries, ensuring correct polarity (+/-). Close the cover and tighten the screw.
- Attach Activity Card:** Place the double-sided activity card onto the easel's display area. Secure it with the star character clip.
- Connect Paintbrush:** The light-up paintbrush is pre-attached to the easel by a cord. Ensure it is securely connected.



Image: Fully assembled VTech Paint and Learn Art Easel, showing the main unit, legs, activity card, and attached light-up paintbrush.

## OPERATING INSTRUCTIONS

The VTech Paint and Learn Art Easel offers two primary modes of play:

### 1. Learning Mode

- Power On:** Press the On/Off button to activate the easel.
- Activity Card Interaction:** Place one of the double-sided activity cards onto the easel. Use the light-up paintbrush to touch the different areas on the card (letters, numbers, shapes, colors). The easel will respond with corresponding sounds, phrases, and music, teaching letters and numbers.
- Light-Up Buttons:** Press the 5 light-up buttons on the easel directly or with the paintbrush to hear colors and music.
- Chunky Piano Keys:** Play the colored piano keys to create musical tunes and learn about colors.
- Spinning Disc Palette:** Spin the disc palette for additional sound effects and sensory engagement.

### 2. Music Mode

- Switch to Music Mode (if applicable, typically a dedicated button or a toggle on the On/Off switch).
- In Music Mode, the easel will play various melodies and sounds when interacting with the light-up buttons, piano

keys, and activity card areas.

## ADJUSTING HEIGHT

The easel's legs are adjustable to two different heights to accommodate growing children. To adjust the height:

1. Gently pull the legs outwards from the main unit.
2. Extend or retract the leg sections to the desired height.
3. Ensure both legs are set to the same height and are securely locked into position before use.

## CARE AND MAINTENANCE

- **Cleaning:** Wipe the easel with a slightly damp cloth. Do not immerse the unit in water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the easel in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the unit will not be used for an extended period.

## TROUBLESHOOTING

Problem	Solution
Easel does not turn on or respond.	Check if the On/Off button is pressed. Ensure batteries are installed correctly with proper polarity. Replace old or depleted batteries with new AA batteries.
Sound is distorted or too low.	Replace batteries with new ones. Low battery power can affect sound quality. Ensure no obstructions are covering the speaker.
Light-up paintbrush or buttons are not responding.	Ensure the activity card is correctly placed and secured. Verify the paintbrush is securely connected to the easel. Replace batteries.
Easel tips over easily.	Ensure the legs are fully extended and locked into position. Supervise children during play to prevent tipping. Ensure the easel is placed on a flat, stable surface.

## SPECIFICATIONS

- **Model Number:** 80-079200
- **Product Dimensions:** Approximately 11 x 20 x 17 inches (L x W x H)
- **Item Weight:** Approximately 4.2 pounds
- **Batteries:** 2 x AA (LR6) batteries required (included for demonstration)
- **Recommended Age:** 12 months - 3 years
- **Manufacturer:** VTech

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official VTech website. Contact information for customer service is typically available on the manufacturer's packaging or website.

© 2023 VTech. All rights reserved.