

## Tristar TR-2547

# Tristar TR-2547 Hair Clipper Set Instruction Manual

Model: TR-2547

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Incorrect use may lead to injury or damage.

- This appliance is not suitable for children under 3 years of age. Children aged 3 to 8 years should only use the appliance under constant supervision.
- Always unplug the appliance from the power outlet immediately after use and before cleaning.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep the appliance away from heat sources, direct sunlight, and sharp edges.
- Do not use the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any way.
- This appliance is intended for household use only. Do not use it outdoors or for commercial purposes.
- Only use accessories supplied or recommended by the manufacturer.

## 2. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and in good condition. The package should contain:

- 1x Tristar TR-2547 Hair Clipper Unit
- 4x Comb Attachments (adjustable for various cutting lengths)
- 1x Hairdresser's Comb
- 1x Hairdresser's Scissors
- 1x Cleaning Brush
- 1x Lubricating Oil



Image: The product packaging displaying the hair clipper and its accessories, with multi-language labels for each component.

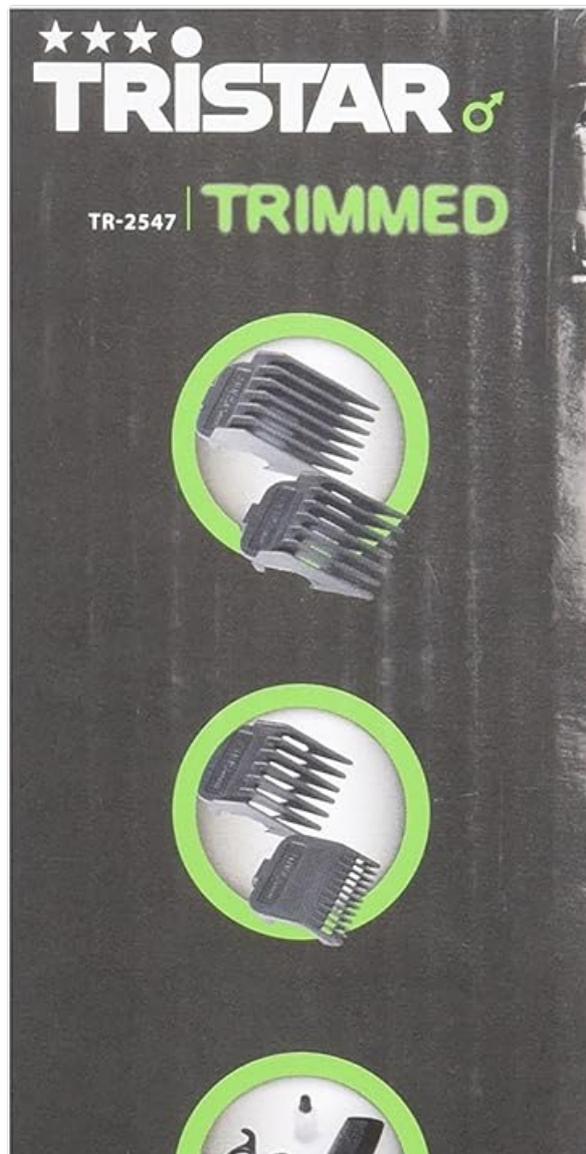




Image: The Tristar TR-2547 Hair Clipper Set, including the clipper, comb attachments, scissors, and comb, displayed within its retail packaging.

### 3. SETUP

1. **Unpacking:** Remove all packaging materials and ensure the appliance and accessories are free from damage.
2. **Initial Cleaning:** Before first use, wipe the clipper blades with a clean, dry cloth. Apply a small drop of the provided lubricating oil to the blades.
3. **Attaching Comb Attachments:** Select the desired comb attachment for your preferred cutting length. Align the comb attachment with the clipper head and push it firmly until it clicks into place. The comb attachments allow for cutting lengths between 4mm and 12mm.

### 4. OPERATING INSTRUCTIONS

1. **Preparation:** Ensure hair is clean and dry before clipping. Use the hairdresser's comb to detangle hair.
2. **Powering On/Off:** Plug the clipper into a suitable electrical outlet. Locate the ON/OFF switch on the

side of the clipper. Slide the switch to the 'ON' position to start the clipper. Slide it to 'OFF' to turn it off.

3. **Adjusting Cutting Length:** The clipper features adjustable blades and comes with 4 comb attachments. The adjustable blades allow for fine-tuning of the cutting length. For longer cuts, attach one of the comb attachments. The comb attachments provide cutting lengths from 4mm to 12mm.
4. **Hair Cutting:** Begin clipping from the bottom of the head, moving upwards against the direction of hair growth. Use smooth, even strokes. For best results, work in small sections. Regularly remove clipped hair from the comb attachment and blades using the cleaning brush.
5. **Detailing:** For precise edging and detailing around the ears and neckline, remove the comb attachment and use the clipper blades directly. Exercise caution to avoid skin irritation.

## 5. MAINTENANCE

Proper maintenance ensures the longevity and performance of your hair clipper.

- **Cleaning After Each Use:** After each use, turn off and unplug the clipper. Remove the comb attachment. Use the cleaning brush to remove any loose hairs from the blades and the clipper body.
- **Lubricating the Blades:** After cleaning, apply 1-2 drops of the provided lubricating oil to the blades. Turn the clipper on for a few seconds to distribute the oil evenly, then turn it off. This helps maintain blade sharpness and reduces friction.
- **Storage:** Store the clipper and its accessories in a dry, cool place, away from direct sunlight and out of reach of children.

## 6. TROUBLESHOOTING

If you encounter issues with your Tristar TR-2547 Hair Clipper, refer to the following common problems and solutions:

- **Clipper Not Turning On:**
  - Ensure the power cord is securely plugged into a working electrical outlet.
  - Check if the ON/OFF switch is in the 'ON' position.
- **Poor Cutting Performance / Pulling Hair:**
  - The blades may be clogged with hair. Turn off and unplug the clipper, then clean the blades thoroughly with the cleaning brush.
  - The blades may require lubrication. Apply a few drops of lubricating oil as described in the Maintenance section.
  - Ensure the comb attachment is correctly seated and not damaged.
- **Excessive Noise or Vibration:**
  - The blades may need lubrication. Apply lubricating oil.
  - Ensure no foreign objects are lodged in the blade mechanism.

## 7. SPECIFICATIONS



Image: The Tristar TR-2547 Hair Clipper shown held in a hand, illustrating its ergonomic design and approximate size.

<b>Model Number:</b>	TR-2547
<b>Brand:</b>	Tristar
<b>Power Source:</b>	Corded Electric
<b>Dimensions (L x W x H):</b>	27 x 7 x 27 cm
<b>Weight:</b>	541.67 grams
<b>Adjustable Blades:</b>	4-12 mm
<b>Comb Attachments:</b>	4

<b>Blade Material:</b>	Rubber (as specified, typically metal for cutting edge)
<b>Handle Material:</b>	Rubber
<b>Batteries Required:</b>	No
<b>Hair Type:</b>	All
<b>International Article Code (EAN):</b>	08713016025470

## 8. WARRANTY AND SUPPORT

This Tristar TR-2547 Hair Clipper Set comes with a **2-year warranty** from the date of purchase, covering manufacturing defects.

For warranty claims, technical support, or further assistance, please contact your retailer or the Tristar customer service department. Keep your proof of purchase for warranty validation.

For more information, visit the official Tristar website: [www.tristar.eu](http://www.tristar.eu)