

Karlsson KA4548

Karlsson KA4548 Gummy Alarm Clock User Manual

Model: KA4548

INTRODUCTION

Welcome to the user manual for your new Karlsson KA4548 Gummy Alarm Clock. This battery-powered LCD alarm clock is designed for simplicity and functionality, featuring a unique rubberized casing that seamlessly integrates all control buttons. Its clear LCD display provides time at a glance, and the blue backlight activates only when the light button is pressed, ensuring no disruptive light emission during the night. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your alarm clock.

SAFETY INFORMATION

- **Battery Safety:** Always use the specified battery type (3 AAA batteries). Do not mix old and new batteries, or different types of batteries. Remove batteries if the clock will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly.
- **Placement:** Place the alarm clock on a stable, flat surface. Avoid placing it in direct sunlight, near heat sources, or in areas with high humidity.
- **Cleaning:** Clean the clock with a soft, dry cloth. Do not use abrasive cleaners or immerse the clock in water.
- **Children:** Keep out of reach of small children. This product is not a toy.

PRODUCT OVERVIEW



Figure 1: Karlsson KA4548 Gummy Alarm Clock. This image displays the Karlsson KA4548 Gummy Alarm Clock from a front-facing perspective. The clock features a black rubberized casing and a clear LCD screen with a blue backlight, currently displaying the time '10:50' in large, digital segments. The top of the clock shows subtle outlines of control buttons integrated into the rubber material.

Components:

- **LCD Display:** Shows time, alarm status, and other indicators.
- **Rubberized Casing:** Durable and provides integrated button access.
- **Control Buttons:** (Located on top/back, integrated into rubber) For setting time, alarm, snooze, and activating backlight.
- **Battery Compartment:** Located on the back, for 3 AAA batteries.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the alarm clock.
2. Open the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely. The LCD display should now turn on.

OPERATING INSTRUCTIONS

Setting the Time:

1. Press the 'SET' button (or equivalent, typically integrated into the rubber casing). The hour digits will start flashing.
2. Use the '+' or '-' buttons (or up/down arrows) to adjust the hour.
3. Press 'SET' again to confirm the hour and move to the minute setting. The minute digits will flash.
4. Use the '+' or '-' buttons to adjust the minutes.
5. Press 'SET' one more time to confirm the minutes and exit time setting mode.

Setting the Alarm:

1. Press the 'ALARM SET' button (or similar, often labeled with an alarm icon). The alarm hour digits will start flashing.
2. Use the '+' or '-' buttons to adjust the alarm hour.
3. Press 'ALARM SET' again to confirm the alarm hour and move to the alarm minute setting. The alarm minute digits will flash.
4. Use the '+' or '-' buttons to adjust the alarm minutes.
5. Press 'ALARM SET' one more time to confirm the alarm minutes and exit alarm setting mode.
6. Ensure the alarm is activated. There is usually a dedicated 'ALARM ON/OFF' switch or button. A small alarm icon should appear on the display when the alarm is active.

Snooze Function:

When the alarm sounds, press the 'SNOOZE' button (typically a large button on top). The alarm will temporarily stop and sound again after a few minutes (usually 5-9 minutes, depending on the model).

Backlight Function:

To illuminate the display in the dark, press the 'LIGHT' button (often integrated with the snooze button). The blue backlight will activate for a few seconds and then turn off automatically to conserve battery life. The display does not remain continuously lit.

MAINTENANCE

Cleaning:

Wipe the clock's surface with a soft, dry, lint-free cloth. For stubborn marks on the rubber casing, a slightly damp cloth can be used, but ensure no moisture enters the electronic components. Do not use chemical cleaners, solvents, or abrasive materials.

Battery Replacement:

When the display dims or the alarm function becomes unreliable, it is time to replace the batteries. Follow the battery installation steps outlined in the 'Setup' section. Always replace all three AAA batteries at the same time with new ones.

TROUBLESHOOTING

- **Display is blank or dim:**
Solution: Check battery polarity. Replace with fresh AAA batteries.
- **Alarm does not sound:**
Solution: Ensure the alarm is set and activated (check for alarm icon on display). Verify that the time and alarm time are correctly set. Replace batteries if they are low.
- **Backlight does not work or is very dim:**
Solution: Press the 'LIGHT' button firmly. If it still doesn't work, replace the batteries. Note that the backlight is designed to be momentary, not continuously lit.
- **Buttons are unresponsive:**
Solution: Ensure batteries are correctly installed and have sufficient power. Try removing and reinserting batteries to reset the device.
- **Incorrect time display:**
Solution: Reset the time following the 'Setting the Time' instructions.

SPECIFICATIONS

Feature	Detail
Model Number	KA4548

Feature	Detail
Brand	Karlsson
Product Dimensions	14.73 x 5.08 x 7.62 cm
Weight	220 g
Color	Black
Display Type	Digital LCD
Power Source	Battery (3 x AAA required)
Batteries Included	No
Special Features	Alarm, Momentary Backlight
Style	Modern Design
Assembly Required	No

WARRANTY AND SUPPORT

Karlsson products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Karlsson website. For technical support or further assistance, please contact Karlsson customer service through their official channels.