

BANDAI 172810

Bandai Ben 10 Deluxe Omnitrix Instruction Manual

Model: 172810

1. PRODUCT OVERVIEW

The Bandai Ben 10 Deluxe Omnitrix is an interactive toy designed to replicate the iconic device from the Ben 10 animated series. This device allows users to simulate transformations into various alien heroes through over 100 alien phrases and motion-activated sound effects. It is intended for imaginative play and role-playing.



Figure 1: Front view of the Bandai Ben 10 Deluxe Omnitrix, showing the main dial and display area.

2. SETUP

2.1 Battery Installation

The Deluxe Omnitrix requires **2 AAA batteries** for operation. Follow these steps to install or replace batteries:

1. Locate the battery compartment on the underside of the Omnitrix. It is secured by small screws.
2. Using a small Phillips head screwdriver (not included), carefully loosen the screws and remove the battery compartment cover.
3. Insert 2 new AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and tighten the screws securely. Do not overtighten.

Warning: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Always remove exhausted batteries from the toy.



Figure 2: Underside view of the Omnitrix, indicating the location of the battery compartment screws.

3. OPERATING INSTRUCTIONS

Once batteries are installed, the Deluxe Omnitrix is ready for use. It is designed to be worn on the wrist.

3.1 Wearing the Omnitrix

Attach the Omnitrix to your wrist using the adjustable strap. Ensure it is snug but comfortable.

3.2 Activating and Selecting Aliens

1. To activate the Omnitrix, rotate the dial to select an alien hero. The display will show the selected alien.
2. Once an alien is selected, press down firmly on the Omnitrix face to initiate the transformation sequence, triggering alien phrases and sound effects.
3. The device features motion-activated sound effects that respond to movement during play.

4. MAINTENANCE

4.1 Cleaning

To clean the Omnitrix, wipe it with a soft, slightly damp cloth. Do not use harsh chemicals, abrasive cleaners, or immerse the device in water, as this can damage the electronic components.

4.2 Storage

Store the Omnitrix in a dry place away from direct sunlight and extreme temperatures. If the device will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

5. TROUBLESHOOTING

- **No Sound or Power:**
 - Check if the batteries are installed correctly with the proper polarity.
 - Replace old or depleted batteries with new AAA batteries.
 - Ensure the battery compartment cover is securely closed.
- **Intermittent Functionality:**
 - This may indicate low battery power. Replace batteries.
 - Ensure no debris is obstructing the dial or activation button.

6. SPECIFICATIONS

Brand	BANDAI
Model Number	172810
Material	Plastic
Item Weight	0.53 Pounds (approx. 240 grams)
Product Dimensions (Packaging)	76.77 x 110.24 x 27.56 inches (L x W x H)
Power Source	Battery
Battery Type	AAA batteries
Number of Batteries	2 AAA batteries required
Operation Mode	Manual
Indoor/Outdoor Usage	Indoor

Assembly Required	No
Color	Black
Subject Character	Ben 10

7. SAFETY INFORMATION

- This product contains small parts and is not suitable for children under 3 years of age due to choking hazards.
- Adult supervision is recommended during play.
- Batteries should be handled by an adult or under adult supervision. Follow all battery safety guidelines.
- Do not dispose of batteries in fire; they may explode or leak.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official BANDAI website. Specific warranty terms may vary by region and retailer.