

[Manuals.plus](#) /

› [Sunex Tools](#) /

› Sunex 8013ADELUXE Service Cart Instruction Manual

Sunex Tools 8013ADELUXE

Sunex 8013ADELUXE Service Cart Instruction Manual

Model: **8013ADELUXE** | Brand: **Sunex Tools**

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Sunex 8013ADELUXE Service Cart. Please read this manual thoroughly before assembly and operation to ensure proper function and longevity of the product. Keep this manual for future reference.



Image 1.1: The Sunex 8013ADELUXE Service Cart with its top lid and all four drawers open, displaying its full storage potential.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury and damage to the service cart:

- Always secure the cart when not in use to prevent it from moving unexpectedly. Engage the locking casters.
- Be cautious when moving heavy loads to avoid injury. Distribute weight evenly.
- Keep sharp tools in the designated screwdriver/pry bar holder and always handle them with care to prevent accidents.
- Do not overload the drawers or the cart beyond its 350-pound weight capacity.
- Ensure the flip-top lid is securely closed and locked when transporting the cart or when not in use to prevent

contents from spilling.

3. PACKAGE CONTENTS

Verify that all components are present upon unpacking:

- 1 x Sunex 8013ADELUXE Service Cart Frame (with integrated drawers and flip-top lid)
- 4 x 5-inch Heavy Duty Casters (2 locking)
- 1 x Set of Keys for Locking Lid
- Leg Extensions (if applicable, check packaging)

4. SETUP AND ASSEMBLY

The Sunex 8013ADELUXE Service Cart comes largely pre-assembled. Minimal setup is required.

1. **Attach Casters:** Carefully turn the cart upside down or tilt it to access the mounting points for the casters. Attach the four 5-inch heavy-duty casters to the base of the cart using the provided hardware. Ensure the two locking casters are positioned on the same side for easy access when engaging the locks.
2. **Install Leg Extensions (if applicable):** If your model includes leg extensions, attach them according to the separate instructions provided with the extensions.
3. **Upright Position:** With assistance, carefully return the cart to its upright position.

5. OPERATING INSTRUCTIONS

5.1 Using the Drawers

The cart features four full-extension roller bearing drawers designed for smooth operation and complete access to contents.

- To open a drawer, gently pull the handle. The roller bearing slides allow the drawer to extend fully.
- To close, push the drawer firmly until it is fully seated.
- Avoid slamming drawers to prevent damage to the slides and contents.



Image 5.1: The service cart with its top two drawers open, revealing organized tools and ample storage space.

5.2 Locking Top Lid

The flip-top lid provides secure storage for frequently used tools or items requiring quick access.

- To open, insert the key into the lock and turn to the unlock position. Lift the lid.
- To close and lock, lower the lid completely. Insert the key and turn to the lock position. Remove the key.
- Always ensure the lid is locked when the cart is unattended or being moved.



Image 5.2: A detailed view of the key lock on the service cart's top lid, demonstrating the security feature.

5.3 Maneuvering the Cart

The cart is equipped with four 5-inch heavy-duty casters for mobility, two of which are locking.

- To move the cart, ensure both locking casters are disengaged.
- To secure the cart in place, push down on the levers of the two locking casters until they click into position.
- Always engage the caster locks when the cart is stationary to prevent accidental movement.

5.4 Screwdriver/Pry Bar Holder

A dedicated locking holder is provided on the side of the cart for organized storage of screwdrivers and pry bars.

- Insert screwdrivers or pry bars into the designated slots.
- Ensure tools are securely placed to prevent them from falling out during movement.



Image 5.3: A close-up view of the side-mounted holder, designed for organizing screwdrivers and pry bars.

5.5 Side Tray

The cart includes a convenient side tray for temporary placement of tools or parts during work.

- Pull out the side tray when extra workspace is needed.

- Push the tray back in when not in use to maintain a compact footprint.



Image 5.4: The service cart with its side tray extended, providing additional workspace for tools and components.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your service cart.

- **Cleaning:** Wipe down the cart's surfaces with a damp cloth and mild detergent as needed. Avoid abrasive cleaners or solvents that could damage the finish.
- **Caster Inspection:** Periodically check casters for debris (e.g., string, hair) that may hinder movement. Clean as necessary. Ensure all caster mounting bolts are tight. Lubricate caster swivels and wheel axles with a light oil if they become stiff.
- **Drawer Slides:** Inspect roller bearing drawer slides for smooth operation. If drawers become stiff or noisy, apply a small amount of silicone spray or light grease to the slides.
- **Lock Mechanism:** Keep the lock mechanism clean and free of debris. If the lock becomes difficult to operate, apply a small amount of graphite lubricant.

7. TROUBLESHOOTING

Address common issues with your service cart using the following guide:

- **Cart Does Not Move Smoothly:**
 - Check if caster locks are engaged. Disengage them for movement.
 - Inspect casters for debris (e.g., string, dirt) or damage. Clean or replace as needed.
 - Ensure caster mounting bolts are tight.
- **Drawers Stick or Are Difficult to Open/Close:**
 - Ensure drawers are not overloaded beyond their capacity. Redistribute contents if necessary.
 - Check roller bearing slides for obstructions or wear. Clean and lubricate the slides.
 - Verify that the cart is on a level surface.
- **Lid Does Not Lock:**
 - Verify the lid is fully closed and properly aligned with the cart body before attempting to lock.
 - Check the lock mechanism for any obstructions or damage.

8. SPECIFICATIONS

Feature	Detail
Brand	Sunex Tools
Model Number	8013ADELUXE
Product Dimensions (D x W x H)	35" x 28" x 21"
Weight Capacity	350 Pounds
Number of Drawers	4
Casters	Four 5" x 2" Heavy Duty (2 locking)
Frame Material	Chrome-plated 16 gauge (1.6mm) Steel
Drawer Slides	Full Extension Roller Bearing
Top Lid	Flip Top Locking Lid
Additional Storage	Locking Screwdriver/Pry Bar Holder
Color	Red

9. WARRANTY INFORMATION

The Sunex 8013ADELUXE Service Cart is covered by a manufacturer's warranty. For specific details regarding your warranty coverage, including terms, conditions, and duration, please refer to the warranty documentation included with your purchase. You may also contact Sunex Tools customer support for further information.

10. SUPPORT

For technical assistance, replacement parts, or any further inquiries regarding your Sunex 8013ADELUXE Service Cart, please contact Sunex Tools customer support. Visit the official Sunex Tools website for the most up-to-date contact information and additional resources.

Note: Product specifications and features are subject to change without prior notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0015SIJKO>

More documents and user manuals: <https://manuals.plus/>