

[Manuals.plus](#) /

› [Little Tikes](#) /

› Little Tikes Easy Store Giant Slide Instruction Manual

Little Tikes 170737E13

Little Tikes Easy Store Giant Slide Instruction Manual

Model: 170737E13

PRODUCT OVERVIEW

The Little Tikes Easy Store Giant Slide is designed for active play, suitable for children aged 24 months to 6+ years. It features integrated safety handles and a wide, stable base to ensure a secure and enjoyable experience for your child.

This slide is built with a gentle slope to protect against falls, making it safe and fun for little ones. Its robust construction ensures durability for years of outdoor enjoyment. When playtime is over, the slide conveniently locks and folds for easy storage, living up to its "Easy Store" name.



Image: Children enjoying the Little Tikes Easy Store Giant Slide with integrated handles and a wide base.

SAFETY INFORMATION

- **Maximum Supported Weight:** 81 kg (total).
- **Maximum Number of Children:** 3 children at a time.
- **Footwear:** Always ensure children wear shoes when using the slide.
- **Supervision:** Adult supervision is required at all times.
- **Placement:** Place the slide on a soft, level surface, away from other structures or obstacles.

ASSEMBLY INSTRUCTIONS

Assembly is required for this product. The design allows for straightforward setup. Follow these general steps for assembly:

1. **Unpack Components:** Carefully remove all parts from the packaging and ensure all components are present. Refer to the included parts list.

2. **Attach Ladder Section:** Connect the ladder section to the main slide body. Ensure all locking mechanisms or screws (if applicable) are securely fastened.
3. **Secure Base:** Attach the wide base for stability. Verify that the base is firmly connected and provides a stable foundation.
4. **Check Handles:** Ensure the integrated handles are properly aligned and secure for children to grip during climbing.
5. **Final Inspection:** Before first use, double-check all connections and ensure the slide is stable and free from any loose parts.



Image: The assembled slide in an outdoor environment, ready for play.

OPERATING INSTRUCTIONS

To ensure safe and enjoyable use of the Little Tikes Easy Store Giant Slide, please follow these guidelines:

- **Climbing:** Children should climb the ladder one at a time, using the integrated handles for support.
- **Sliding Position:** Instruct children to slide down feet first, in a seated position.
- **Clear Landing Area:** Ensure the landing area at the bottom of the slide is clear before each use.
- **Weather Conditions:** Avoid using the slide in extreme weather conditions such as strong winds, heavy rain, or icy temperatures.
- **Age and Weight Limits:** Adhere strictly to the recommended age range (24 months to 6+ years) and maximum weight limit (81 kg total, max 3 children).

MAINTENANCE

Regular maintenance will extend the life of your Little Tikes Easy Store Giant Slide:

- **Cleaning:** Clean the slide regularly with mild soap and water. Rinse thoroughly and allow to air dry. Avoid abrasive cleaners.
- **Inspection:** Periodically check all parts for wear, damage, or loose connections. Tighten any loose screws or fasteners.
- **Storage:** When not in use, especially during off-seasons or inclement weather, fold the slide for compact storage. This protects it from environmental elements and prolongs its lifespan.



Image: The slide in its folded configuration, demonstrating its space-saving storage capability.







Image: Detailed view of the folded slide, highlighting its compact design for storage.

TROUBLESHOOTING

If you encounter any issues with your Little Tikes Easy Store Giant Slide, refer to the following common solutions:

Problem	Possible Cause	Solution
Slide feels unstable.	Loose connections or uneven ground.	Ensure all assembly points are securely fastened. Place the slide on a flat, level surface.
Difficulty folding/unfolding.	Mechanism not aligned or obstructed.	Check for any obstructions. Ensure the locking mechanism is fully disengaged/engaged. Apply a small amount of silicone lubricant if parts are stiff.
Parts appear damaged or worn.	Normal wear and tear or accidental damage.	Discontinue use immediately. Contact customer support for replacement parts or further assistance.

PRODUCT SPECIFICATIONS

Brand: Little Tikes
Model Number: 170737E13
Material: Plastic
Color: Green
Dimensions (Width x Depth x Height): 197 cm x 120 cm x 142 cm
Item Weight: 17.99 Kilograms
Recommended Maximum Weight: 34 Kilograms (individual child)
Age Range Description: 3 years to 6 years (Manufacturer's specification)
Assembly Required: Yes
GTIN/UPC: 050743170737, 507431707374, 784311841919

WARRANTY INFORMATION

The Little Tikes Easy Store Giant Slide comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for any warranty claims. For specific terms and conditions, refer to the warranty documentation included with your product or visit the official Little Tikes website.

CUSTOMER SUPPORT

For further assistance, replacement parts, or any inquiries regarding your Little Tikes Easy Store Giant Slide, please contact Little Tikes customer service. You can typically find contact information on the Little Tikes official website or through the retailer where you purchased the product.

Online Support: Visit the [Little Tikes Store on Amazon](#) for product information and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question