
[Manuals.plus](#) /

› [Sylvania](#) /

› Sylvania 72088 LED Gooseneck Work Light Instruction Manual

Sylvania 72088

Sylvania 72088 LED Gooseneck Work Light Instruction Manual

Model: 72088

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, setup, and maintenance of your Sylvania 72088 LED Gooseneck Work Light. Please read this manual thoroughly before using the product and retain it for future reference.



Image: The Sylvania 72088 LED Gooseneck Work Light, featuring a flexible black gooseneck, a silver cylindrical handle with an on/off button, and a magnetic base. The LED light source is at the end of the gooseneck.

SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the product:

- Do not look directly into the LED light source to avoid eye strain or damage.
- Keep the device away from water or other liquids.
- Do not attempt to disassemble or modify the light.
- Ensure batteries are inserted with correct polarity.
- Remove batteries if the light will not be used for an extended period.
- Dispose of used batteries responsibly according to local regulations.

PACKAGE CONTENTS

The Sylvania 72088 LED Gooseneck Work Light package includes:

- 1 x Sylvania 72088 LED Gooseneck Work Light
- *Note: Batteries are not included.*

SETUP

Battery Installation

1. Unscrew the cap at the base of the handle.
2. Insert three (3) AAA batteries into the battery compartment, ensuring correct polarity (+/-).
3. Screw the cap back onto the handle until secure.

Mounting

The Sylvania 72088 features a magnetic base for convenient mounting on metallic surfaces. Ensure the surface is clean and stable before attaching the light.

OPERATING INSTRUCTIONS

Turning On/Off

- To turn the light **ON**, press the power button located on the handle.
- To turn the light **OFF**, press the power button again.

Adjusting the Light

The flexible gooseneck allows for precise positioning of the LED light. Gently bend the gooseneck to direct the light beam to your desired work area.

MAINTENANCE

- **Cleaning:** Wipe the light with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Battery Replacement:** Replace batteries when the light output diminishes. Refer to the "Battery Installation" section for instructions.
- **Storage:** Store the light in a cool, dry place when not in use. Remove batteries for long-term storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	Batteries are dead or low.	Replace with new AAA batteries.
	Batteries are inserted incorrectly.	Check battery polarity and reinsert.
	Power button malfunction.	Contact customer support if issue persists after checking batteries.
Light is dim.	Batteries are low.	Replace with new AAA batteries.
	LED lens is dirty.	Gently clean the LED lens with a soft, dry cloth.

SPECIFICATIONS

Feature	Detail
Model Number	72088
Brand	Sylvania
Light Source	LED

Feature	Detail
Power Source	3 x AAA Batteries (not included)
Mounting Type	Magnetic Base
Dimensions	13.97 x 25.4 x 15.24 cm (5.5 x 10 x 6 inches)
Weight	204.12 g (7.2 oz)
Style	Modern
Finish	Unfinished

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Sylvania customer service. Refer to the product packaging or the official Sylvania website for current contact details.

Manufacturer: Sylvania

Date First Available: August 7, 2012

