

SentrySafe 1200

SentrySafe 1200 Fireproof Box Instruction Manual

Model: 1200

Brand: SentrySafe

INTRODUCTION

The SentrySafe 1200 Fireproof Box is designed to protect your irreplaceable documents and valuables from fire. This chest features a key lock for added security and a convenient carrying handle for portability. It is UL Classified for fire endurance and ETL Verified for digital media protection.

SETUP

1. **Unpacking:** Carefully remove the fireproof box from its packaging. Inspect for any damage.
2. **Key Identification:** Locate the two keys provided with your SentrySafe 1200. Keep one key in a secure location away from the box and the other for regular access.
3. **Placement:** For optimal performance in case of fire, store the box closed and locked, with its feet down. The front plate, which contains the key lock, should face outwards, not upwards. Ensure the box is placed on a flat, stable surface.



Image: The SentrySafe 1200 Fireproof Box shown open, revealing its interior. The key lock mechanism is visible on the front.

OPERATING INSTRUCTIONS

Opening the Box

1. Insert the key into the keyhole on the front of the box.
2. Turn the key clockwise to unlock the mechanism.
3. Lift the lid to open the fireproof box.

Closing and Locking the Box

1. Ensure all items are properly placed inside the box.
2. Lower the lid firmly until it is fully closed.
3. Insert the key into the keyhole and turn it counter-clockwise to lock the mechanism. Remove the key.

Storing Items

The SentrySafe 1200 is designed to protect paper documents, as well as digital media such as CDs, DVDs, USB drives, and memory sticks. Arrange items neatly to maximize space and ensure the lid closes completely without force.



Image: Example of documents, passports, and small valuables stored within the SentrySafe 1200 Fireproof Box.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the box with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Key Care:** Keep keys clean and dry. Do not force the key if it feels stiff; a small amount of graphite lubricant can be applied to the keyhole if necessary.
- **Regular Checks:** Periodically check the lid and locking mechanism to ensure they operate smoothly and close securely.

TROUBLESHOOTING

- **Key Not Turning:** Ensure the key is fully inserted and oriented correctly. Do not force the key. If the lock is stiff, try a small amount of graphite lubricant.
- **Lid Not Closing:** Check for any obstructions inside the box that might prevent the lid from closing completely. Ensure items are not overfilling the capacity.
- **Lost Keys:** Contact SentrySafe customer support for assistance with lost keys. You will likely need to provide proof of ownership and the model number.

SPECIFICATIONS

Feature	Detail
Model Number	1200

Feature	Detail
Exterior Dimensions (H x W x D)	6.1" x 11.2" x 14.3"
Interior Dimensions (H x W x D)	3.5" x 12" x 7.5"
Capacity	0.18 Cubic Feet
Weight	13.2 pounds (6 Kilograms)
Fire Protection	UL Classified 1/2 hour at 1550°F
Digital Media Protection	ETL Verified 1/2 hour for CDs, DVDs, USBs up to 1550°F
Lock Type	Key Lock
Material	Alloy Steel
Color	Black
Included Components	Fire safe, two keys



Image: Detailed view of the SentrySafe 1200 interior with labeled dimensions for width, depth, and height.

WARRANTY INFORMATION

The SentrySafe 1200 Fireproof Box comes with a 1-year manufacturer's limited warranty. Additionally, SentrySafe offers a lifetime after-fire replacement guarantee, ensuring that if your unit is damaged in a fire, it will be replaced.

For specific warranty terms and conditions, please refer to the documentation included with your product or visit the official SentrySafe website.

SUPPORT

For further assistance, product inquiries, or to report issues, please contact SentrySafe customer support. Have your model number (1200) and purchase information ready when contacting support. You can typically find contact information on the SentrySafe official website or within the product packaging.

