

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PHILIPS](#) /

› [Philips 7-Inch Digital Photo Frame \(Model 7FF2FPAS/27\) User Manual](#)

PHILIPS 7FF2FPAS/27

Philips 7-Inch Digital Photo Frame User Manual

MODEL: 7FF2FPAS/27

Introduction

This manual provides detailed instructions for setting up and operating your Philips 7-Inch Digital Photo Frame, model 7FF2FPAS/27. This device is designed to display your cherished digital photos with vibrant colors and rich detail on its 6.5-inch viewable screen. Please read this manual thoroughly to ensure proper use and to maximize your enjoyment of the product.



Image of the Philips 7-Inch Digital Photo Frame, showcasing its clear display and sleek design.

Package Contents

Before you begin, ensure all items are present in the box:

- Philips Digital Photo Frame (Model 7FF2FPAS/27)
- AC-DC Adapter
- USB Cable
- Stand
- Quick Start Guide (refer to this manual for full details)

Setup Instructions

- 1. Assemble the Stand:** Attach the provided stand to the back of the digital photo frame to position it upright.
- 2. Connect Power:** Plug the AC-DC adapter into the frame's power input and then into a wall outlet. The frame will power on automatically.
- 3. Load Photos:**
 - Using Memory Cards:** Insert a compatible memory card (Compact Flash type I, Secure Digital (SD and SDHC), Multimedia Card, xD card, Memory Stick, Memory Stick Pro) into the appropriate slot on the frame. The frame will automatically detect the card and begin displaying photos.
 - Using USB:** Connect the frame to your computer using the supplied USB cable. Your computer will recognize the frame as a removable storage device. You can then transfer JPEG images directly to the frame's internal memory or a connected memory card.
- 4. Initial Settings:** Upon first use, you may need to set the current time and date for features like Auto On/Off to function correctly. Use the control buttons on the frame to navigate the settings menu.

Operating Instructions

Control Buttons

The frame features a seven-button control system, typically located on the top or back of the device, to navigate menus and adjust settings. Refer to the quick start guide for a diagram of button functions.

Display Modes

You can view your photos in several ways:

- Single Image Mode:** Displays one photo at a time.
- Thumbnail Mode:** Shows multiple small images for quick browsing and selection.
- Slideshow Mode:** Automatically cycles through your photos. You can customize transition effects and display duration in the settings.
- Multiple-Photo Collage Effect:** This slideshow effect automatically and randomly compiles different photos together, avoiding unattractive borders that may result from photos smaller than the screen size.

Photo Compatibility and Management

The Philips Digital Photo Frame is compatible with JPEG files that adhere to camera industry standards. Images not in JPEG format (e.g., web images, scanned images, RAW files) cannot be displayed directly. These images must be converted to standard JPEG format using computer applications before transfer.

The frame has a small amount of built-in internal memory for storing a few favorite pictures. This memory is fixed and cannot be expanded. For a larger photo collection, use memory cards. The frame features two built-in memory card readers, allowing one slot for external memory and the other for reading/copying from a camera memory card.

SmartPower (Auto On/Off)

The SmartPower feature allows you to set specific hours for the frame to be on. It will automatically shut down during off-hours, reducing energy consumption. Ensure the current time is set correctly for this feature to work as intended.

Image Enhancement Technologies

- Imagen Technology:** This exclusive Philips technology automatically analyzes your photos to correct color and adjust for optimal contrast. It separates colors to avoid "crosstalk," adjusts brightness distribution for visual contrast, and corrects Gamma for color accuracy.
- RadiantColor:** An exclusive Philips technology for displaying smaller photos in the optimal 4:3 ratio. It extends the color on the edges of a smaller photo to the sides of the screen, eliminating unwanted black bars and aspect ratio distortion.
- SmartContrast:** Analyzes the displayed content and automatically adjusts colors and controls backlight

intensity to dynamically enhance contrast. This results in optimal digital images, especially for photos and videos with dark hues. An Economy mode is also available to fine-tune contrast and backlighting for energy efficiency.

Your browser does not support the video tag.

Official video demonstrating the features and operation of the Philips Digital Photo Frame.

Specifications

Feature	Detail
Model Number	7FF2FPAS/27
Screen Size	7 Inches (6.5-inch viewable display)
Resolution	800x480 (WXGA)
Aspect Ratio	3:2
Internal Memory	16MB Flash (fixed, not expandable)
Supported Memory Cards	Compact Flash type I, Secure Digital (SD and SDHC), Multimedia Card, xD card, Memory Stick, Memory Stick Pro
Connectivity	USB
Compatible Operating Systems	Windows Vista, Windows 2000/XP or later, Mac OS X
Product Dimensions	6.26 x 1.1 x 8.15 inches
Item Weight	13.4 ounces
Color	Metal (Clear & Black frame design)

Troubleshooting (Frequently Asked Questions)

Q: Can I increase the internal memory size to store more pictures?

A: No, the internal memory of the digital photo frame is fixed and cannot be expanded. You can, however, use different memory cards to display a larger variety of photos.

Q: Why doesn't my Digital Photo Frame show some of my photos?

A: The frame is designed to display JPEG photos that conform to camera industry standards. Images from the web, scanned images, or RAW format photos from professional cameras may not be stored in this standard format. Use PC applications to convert such images into standard JPEG format for compatibility.

Q: Is the LCD screen touch-enabled?

A: No, the LCD screen is not touch-enabled. All controls are managed using the physical buttons on the frame.

Q: Can I print photos directly from the Digital Photo Frame?

A: No, the device does not support direct photo printing functionality.

Q: Why doesn't my Digital Photo Frame go into Auto-off status after I set it?

A: First, ensure you have correctly set the **CURRENT TIME**, **AUTO OFF** at, and **AUTO ON** at settings. The frame will automatically turn off its display at the specified AUTO OFF time. If the set time has already passed for the current day, the Auto-off function will begin from the specified time on the next day.

Q: Will the LCD screen be damaged if I keep showing the same photo for a long time?

A: No, the Digital Photo Frame is designed to display the same photo continuously for up to 1,000 hours without causing any damage to the LCD screen.

Maintenance

To ensure the longevity and optimal performance of your digital photo frame, follow these maintenance guidelines:

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid harsh chemicals or abrasive materials.
- **Cleaning the Frame:** Wipe the exterior of the frame with a soft, dry cloth.
- **Storage:** When not in use for extended periods, store the frame in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Power Management:** Utilize the SmartPower feature to automatically turn off the frame during inactive hours, which can help conserve energy and extend the lifespan of the display.

Warranty and Support

For information regarding warranty coverage, technical support, or service, please refer to the warranty card included with your product or visit the official Philips support website. Keep your purchase receipt as proof of purchase for warranty claims.

Note: The manufacturer's warranty typically covers defects in materials and workmanship under normal use. Damage resulting from misuse, accidents, or unauthorized modifications may not be covered.