



[Manuals.plus](#) /

› [Russell Hobbs](#) /

› Russell Hobbs Food Collection Hand Mixer User Manual

## Russell Hobbs 14451

# Russell Hobbs Food Collection Hand Mixer User Manual

Model: 14451 | Brand: Russell Hobbs

## INTRODUCTION

---

The Russell Hobbs Food Collection Hand Mixer is designed to simplify your baking and cooking tasks. With its powerful 125W motor and six-speed settings, it provides precise control for mixing various ingredients, from light batters to heavier doughs. Its ergonomic design and easy-release button for beaters make it a convenient and essential tool for any kitchen.



Figure 1: The Russell Hobbs Food Collection Hand Mixer with its chrome beaters attached.

## IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- To protect against risk of electrical shock, do not immerse the mixer body, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach beaters to the mixer before plugging cord into the wall outlet.
- To disconnect, turn control to '0' (OFF), then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## SETUP

---

## Before First Use

Before using your hand mixer for the first time, please follow these steps:

1. Unpack the hand mixer and all its components carefully. Ensure all packaging materials are removed.
2. Wash the chrome beaters in warm, soapy water, then rinse and dry thoroughly. The beaters are also dishwasher safe.
3. Wipe the main body of the mixer with a damp cloth. Do not immerse the mixer body in water.

## Assembly of Beaters

The hand mixer comes with two chrome beaters. These are designed for easy insertion and removal.

1. Ensure the mixer is unplugged from the power outlet and the speed control is set to '0'.
2. Insert the stem of each beater into the corresponding holes on the underside of the mixer body. Push firmly until they click into place. The beaters are identical and can be inserted into either hole.
3. To remove the beaters, ensure the mixer is unplugged and the speed control is set to '0'. Press the easy release button located on the top of the mixer. The beaters will eject.



Figure 2: Illustrates the process of attaching the beaters to the mixer body.

## OPERATING INSTRUCTIONS

---

### Using Your Hand Mixer

The Russell Hobbs Hand Mixer features 6 speed settings, allowing you to achieve optimal mixing results for various recipes.

1. Ensure the beaters are securely attached and the mixer is plugged into a suitable power outlet.
2. Place the ingredients in a mixing bowl. For best results, use a bowl large enough to prevent splashing.
3. Begin mixing at a low speed (1 or 2) to gradually incorporate ingredients and prevent splattering.
4. Gradually increase the speed as needed by sliding the speed control switch upwards. The mixer has speeds from 1 to 6.
5. Move the mixer around the bowl to ensure all ingredients are thoroughly combined.
6. When finished mixing, slide the speed control switch back to '0' (OFF) and unplug the mixer from the outlet.



Figure 3: The speed control dial, showing settings from 0 to 6.

## Recommended Speed Settings:

- **Speed 1-2:** For folding, stirring, and mixing dry ingredients with liquids, or for slow mixing of thin batters.
- **Speed 3-4:** For mixing cake batters, puddings, or preparing frosting.
- **Speed 5-6:** For whipping cream, egg whites, or mixing heavier doughs.

## CARE AND MAINTENANCE

---

### Cleaning

Proper cleaning ensures the longevity and hygiene of your hand mixer.

- Always unplug the mixer from the power outlet before cleaning.
- Remove the beaters by pressing the easy release button. Wash the beaters in warm, soapy water or place them in the dishwasher.
- Wipe the exterior of the mixer body with a clean, damp cloth. For stubborn stains, use a mild detergent on the cloth.
- Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- Never immerse the mixer body, cord, or plug in water or any other liquid.
- Ensure all parts are completely dry before storing.

### Storage

Store your hand mixer in a dry place when not in use.

- The mixer features a convenient cord wrap for tidy storage. Wrap the power cord around the designated area on the mixer body.
- Store the beaters together with the mixer to ensure they are always available.



Figure 4: The durable chrome beaters are easy to clean and store.

## TROUBLESHOOTING

If you encounter any issues with your Russell Hobbs Hand Mixer, please refer to the table below for common problems and their solutions.

| Problem                                    | Possible Cause  | Solution  |
|--|---|---|
| Mixer does not turn on.                    | Not plugged in; power outlet not working; speed control not set to a speed. | Ensure the mixer is securely plugged into a working outlet. Check if the speed control is set to a number other than '0'. |
| Beaters are difficult to insert or remove. | Beaters not aligned correctly; release button not fully pressed.            | Ensure beaters are aligned with the holes. For removal, press the easy release button firmly.                             |

| Problem                              | Possible Cause   | Solution   |
|--------------------------------------|--|--|
| Motor sounds strained or slows down. | Mixture is too thick; too much load on the motor.                          | Reduce the amount of ingredients or add more liquid to thin the mixture. Do not overload the mixer.  |
| Unusual smell during operation.      | New appliance smell; motor overheating due to prolonged use or heavy load. | A slight smell is normal for new appliances. If the smell is strong or persistent, unplug the mixer immediately and let it cool down. Reduce mixing time or load. If the problem persists, contact customer support. |

## SPECIFICATIONS

Detailed technical specifications for the Russell Hobbs Food Collection Hand Mixer (Model 14451).

| Feature                | Detail   |
|------------------------|--|
| Brand                  | Russell Hobbs  |
| Model Number           | 14451  |
| Power                  | 125 Watts  |
| Voltage                | 230V   |
| Speed Settings         | 6 Speeds   |
| Beater Material        | Stainless Steel (Chrome)                               |
| Body Material          | Plastic  |
| Color                  | White  |
| Dimensions (L x W x H) | 7 x 14.4 x 17.5 cm (approx. 2.76 x 5.67 x 6.89 inches) |
| Weight                 | 765 g (approx. 1.69 lbs)                               |
| Special Features       | Easy release button, Cord storage                      |
| Included Components    | 1 Hand Mixer, 2 Chrome Beaters, 1 Instruction Manual   |
| EAN                    | 5038061028720  |

## WARRANTY AND SUPPORT

### Warranty Information

This Russell Hobbs appliance is covered by a warranty against defects in materials and workmanship. The warranty period typically begins from the date of purchase. Please retain your purchase receipt as proof of purchase. For specific warranty terms and conditions, refer to the warranty card included with your product or visit the official Russell Hobbs website.

### Customer Support

If you have any questions about your Russell Hobbs Food Collection Hand Mixer, require technical assistance, or need to

report a fault, please contact Russell Hobbs customer support. Contact details can usually be found on the product packaging, the official Russell Hobbs website, or within the included instruction manual.

For online support and frequently asked questions, please visit: [www.russellhobbs.com](http://www.russellhobbs.com)