

KidKraft 53160

KidKraft Retro Wooden Play Kitchen and Refrigerator 2-Piece Set Instruction Manual

Model: 53160 | Brand: KidKraft

INTRODUCTION

This instruction manual provides essential information for the safe assembly, operation, and maintenance of your KidKraft Retro Wooden Play Kitchen and Refrigerator 2-Piece Set. Please read this manual thoroughly before assembly and retain it for future reference.

SAFETY INFORMATION

Recommended Ages: 3+

This product is designed for children aged 3 years and older. Adult supervision is recommended during play. Ensure all parts are securely fastened before allowing children to play. Regularly inspect the product for any loose parts or damage that could pose a hazard.

PRODUCT FEATURES

- 2-piece modular design for unique layouts, allowing the kitchen and refrigerator to be placed together or separately.
- Doors on dishwasher, oven, refrigerator, and freezer open and close, providing realistic play.
- Realistic stove burners for an authentic cooking experience.
- Working knobs on the oven and sink that turn and click, enhancing interactive play.
- Removable sink for easy cleanup and maintenance.
- Storage space below the oven for play food and accessories.
- Constructed from durable wood for long-lasting play.

- Finished with child-safe paints, free of lead and other heavy metals, ensuring safety.

SETUP AND ASSEMBLY

The KidKraft Retro Play Kitchen and Refrigerator set requires assembly. Detailed instructions are included in the product packaging. It is recommended to lay out all parts and hardware before beginning assembly. Assembly typically takes approximately 1-2 hours with two adults. Ensure all screws and fasteners are tightened securely to maintain structural integrity.



Image: The assembled KidKraft Retro Wooden Play Kitchen and Refrigerator 2-Piece Set in pink, showcasing its modular design.

OPERATING INSTRUCTIONS

Kitchen Unit:

- **Sink and Faucet:** The stainless steel-look sink is removable for cleaning. The faucet handles turn, simulating water flow for pretend washing.
- **Stove Burners:** Place play pots and pans on the realistic stove burners for imaginative cooking.
- **Oven Knobs:** Turn the oven knobs to hear clicking sounds, mimicking real appliance operation.
- **Oven Door:** Open the oven door to reveal interior shelves. The pull-out shelf allows for easy placement and removal of play food.
- **Dishwasher Door:** The door below the sink opens to provide additional storage or a pretend dishwasher.

area.

Refrigerator Unit:

- **Refrigerator Doors:** Both the upper and lower doors of the refrigerator unit open to reveal storage compartments with shelves.
- **Temperature Gauge:** The decorative temperature gauge on the upper door adds to the realistic retro design.



Image: A child interacting with the play kitchen, demonstrating the functional sink and faucet.



Image: A child opening the refrigerator door of the play kitchen, revealing interior storage.

MAINTENANCE

- **Cleaning:** Wipe down all surfaces with a damp cloth and mild soap as needed. Avoid abrasive cleaners. The removable sink can be washed separately.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Tighten any loose hardware to prevent wobbling or instability.
- **Storage:** Store the play kitchen in a dry environment away from direct sunlight or extreme temperatures to preserve the wood and paint finish.

TROUBLESHOOTING

If you encounter any issues with your KidKraft Retro Play Kitchen, please review the assembly instructions to ensure all parts are correctly installed. For persistent problems or missing parts, contact KidKraft customer support for assistance.

SPECIFICATIONS

Attribute	Detail
Product Dimensions	27 x 24 x 27 inches
Item Weight	38.5 pounds
Model Number	53160
Recommended Age	36 months - 3 years
Material	Wood
Paint Finish	Child-safe, lead-free

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.


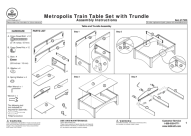 
Video: An overview of the KidKraft Retro Kitchen and Refrigerator in Pink, highlighting its features and play potential.

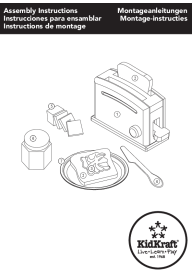 

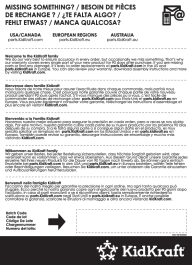 
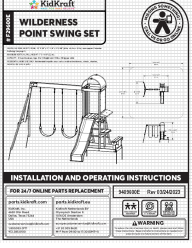 
WARRANTY AND SUPPORT

KidKraft products are designed for durability and long-lasting play. For specific warranty details or to contact customer support regarding your Retro Play Kitchen and Refrigerator, please refer to the contact information provided in your product packaging or visit the official KidKraft website.

For additional information or to explore other KidKraft products, visit the [KidKraft Store on Amazon](#).

Related Documents - 53160

	<p>KidKraft First Play Wooden Swing Set Assembly Instructions</p> <p>Detailed assembly instructions for the KidKraft First Play Wooden Swing Set (models 20473, 20504). Includes a comprehensive parts list, hardware guide, and step-by-step visual assembly instructions. Follow these steps carefully to ensure safe and correct installation of your swing set.</p>
	<p>KidKraft Metropolis Train Table Set with Trundle Assembly Instructions</p> <p>Comprehensive assembly guide for the KidKraft Metropolis Train Table Set with Trundle, featuring step-by-step instructions, parts lists, hardware details, and safety information.</p>

 <p>Assembly Instructions Instructions pour assembler Instrucciones de montaje</p> <p>KidKraft LIVE YOUR DREAMS</p>	<p>KidKraft Toy Toaster Set Assembly Instructions</p> <p>Assembly instructions and customer support information for the KidKraft Toy Toaster Set, including part identification and contact details for models 63373, 63374, and 63375.</p>
 <p>AINSLEY OUTDOOR PLAY SET - 00400</p> <p>INSTALLATION AND OPERATING INSTRUCTIONS</p> <p>WARNING</p> <p>KidKraft LIVE YOUR DREAMS</p>	<p>Ainsley Outdoor Play Set - Installation and Operating Instructions</p> <p>Comprehensive guide for the installation and safe operation of the Ainsley Outdoor Play Set (Model 00400) by KidKraft. Includes safety warnings, assembly steps, maintenance guidelines, and warranty information.</p>
 <p>MISSING SOMETHING? / BESON DE PIÈCES DE REMPLACEMENT? / ¿NE FALTA ALGO? FENILT ETWAS? / MANCA QUALCOSA?</p> <p>USA/CANADA EUROPEAN REGION AUSTRALIA</p> <p>KidKraft LIVE YOUR DREAMS</p>	<p>KidKraft 10240 2-in-1 Kitchen and Laundry Assembly Instructions</p> <p>Detailed assembly instructions for the KidKraft 10240 2-in-1 Kitchen and Laundry play set. Includes parts list, hardware identification, and step-by-step guidance for building the toy.</p>
 <p>KidKraft WILDERNESS POINT SWING SET</p> <p>INSTALLATION AND OPERATING INSTRUCTIONS</p> <p>FOR 24-7 ONLINE PARTS REPLACEMENT</p> <p>KidKraft LIVE YOUR DREAMS</p>	<p>KidKraft Wilderness Point Swing Set: Installation and Safety Guide</p> <p>This guide provides essential installation, operating, and safety instructions for the KidKraft Wilderness Point Swing Set, ensuring a safe and enjoyable play experience for children. Includes assembly details, maintenance tips, and warranty information.</p>