

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Nube](#) /
- > [Nube Audio CD User Manual](#)

Nube B0017PI7TS

Nube Audio CD User Manual

Comprehensive guide for your Nube Audio CD.

PRODUCT OVERVIEW

This manual provides instructions for the proper use and care of your Nube Audio CD. Nube is an intimate array of textures where the harp and guitar open up a space for introspection and contemplation, representing a true contemporary Latin American music for the new millennium.



Image: Front cover of the Nube Audio CD, featuring abstract blue and brown textures with the word "nube" in red.

SETUP

To enjoy your Nube Audio CD, follow these simple steps to prepare for playback:

1. **Unpack:** Carefully remove the Audio CD from its packaging. Ensure the disc is free from dust or smudges.
2. **Select Player:** Choose a compatible audio player, such as a CD player, DVD player, Blu-ray player, or computer with a CD/DVD drive.
3. **Power On:** Ensure your audio player is connected to a power source and turned on.
4. **Open Tray:** Press the 'Open/Eject' button on your player to open the disc tray.
5. **Insert Disc:** Gently place the Nube Audio CD onto the disc tray with the label side facing up. Ensure it is seated correctly on the spindle.

6. **Close Tray:** Press the 'Open/Eject' button again or gently push the tray to close it.

OPERATING INSTRUCTIONS

Once the CD is loaded, you can begin playback:

1. **Start Playback:** Press the 'Play' button on your audio player or remote control. The music should begin playing from the first track.
2. **Pause/Resume:** Press the 'Pause' button to temporarily stop playback. Press 'Play' again to resume.
3. **Skip Tracks:** Use the 'Next Track' (>>|) or 'Previous Track' (|<<) buttons to navigate between songs.
4. **Fast Forward/Rewind:** Hold down the 'Fast Forward' (>>>) or 'Rewind' (<<<) buttons to quickly move through a track.
5. **Adjust Volume:** Use the volume controls on your audio player or amplifier to set the desired listening level.
6. **Stop Playback:** Press the 'Stop' button to end playback.
7. **Eject Disc:** After stopping, press the 'Open/Eject' button to remove the disc.

MAINTENANCE AND CARE

Proper care will ensure the longevity and optimal performance of your Nube Audio CD:

- **Handling:** Always hold the CD by its edges or by placing a finger through the center hole. Avoid touching the reflective surface.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (e.g., microfiber) from the center outwards in a straight line. Do not wipe in circular motions. For stubborn marks, a small amount of water or a specialized CD cleaning solution can be used.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Do not place the CD on rough surfaces or allow it to come into contact with sharp objects. Scratches can impair playback quality.
- **Chemicals:** Do not use abrasive cleaners, solvents, or harsh chemicals on the disc, as these can damage the surface.

TROUBLESHOOTING

If you encounter issues with your Nube Audio CD, consider the following common solutions:

- **Disc Skipping or Freezing:**
 - Check the disc for visible scratches or smudges. Clean the disc as described in the Maintenance section.
 - Ensure the CD player is on a stable, level surface to prevent vibrations.
 - Try playing the disc in another CD player to determine if the issue is with the disc or the player.
- **No Sound:**
 - Verify that the audio cables are securely connected between the CD player and your amplifier/speakers.
 - Check the volume levels on both your CD player and amplifier.
 - Ensure the correct input source is selected on your amplifier.
- **Disc Not Recognized:**

- Ensure the disc is inserted correctly with the label side up.
- Clean the disc for any smudges or debris.
- Some older CD players may have difficulty reading certain disc formats; try a different player if available.

SPECIFICATIONS

Feature	Detail
Product Dimensions	5.5 x 5.5 x 0.25 inches
Item Weight	2.5 ounces
Manufacturer	CD Baby
Original Release Date	2008
Date First Available	May 21, 2008
Label	CD Baby
ASIN	B0017PI7TS
Number of Discs	1

WARRANTY AND SUPPORT

Information regarding specific warranty terms for the Nube Audio CD is not provided in this manual. For any support inquiries or warranty claims, please refer to the original point of purchase or the record label, CD Baby.

For general information about Nube, you may visit the artist's page:[Nube Artist Page](#)