



[Manuals.plus](#) /

› [Memorex](#) /

› Memorex MVD2040-FLR Progressive Scan DVD Player User Manual

Memorex MVD2040-FLR

Memorex MVD2040-FLR Progressive Scan DVD Player User Manual

Model: MVD2040-FLR

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Memorex MVD2040-FLR Progressive Scan DVD Player. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage.

2. SAFETY INFORMATION

To reduce the risk of electric shock, do not remove the cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel. Do not expose this appliance to rain or moisture. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Protect the power cord from being walked on or pinched. Only use attachments/accessories specified by the manufacturer.

3. PRODUCT FEATURES



Figure 1: Front view of the Memorex MVD2040-FLR Progressive Scan DVD Player. This image shows the compact design of the DVD player, featuring a disc tray, control buttons, and a display panel.

The Memorex MVD2040-FLR DVD Player offers a range of features designed for an enhanced viewing experience:

- **Mid-Size, Progressive Scan DVD/CD Player:** Delivers high-quality video output for a clearer picture.
- **Dolby Digital Output:** Provides immersive surround sound capabilities when connected to a compatible audio system.
- **16:9/4:3 Picture Select:** Allows adjustment of the aspect ratio to match your television screen or viewing

preference.

- **On-Screen Graphical User Interface:** Facilitates easy navigation through menus and settings.
- **Multi-Angle Menu:** Supports discs with multiple camera angles, allowing you to switch views during playback.

4. SETUP AND CONNECTIONS

Before connecting your DVD player, ensure all devices are powered off. The MVD2040-FLR is compatible with AV Receivers, Home Theater Systems, and Televisions.

4.1 Video Connections

- **Composite Video (RCA):** Connect the yellow video output jack on the DVD player to the yellow video input jack on your TV or receiver. This provides standard definition video.
- **Component Video (YPbPr):** For progressive scan output, connect the red, green, and blue component video output jacks on the DVD player to the corresponding input jacks on your progressive scan compatible TV.

4.2 Audio Connections

- **Analog Audio (RCA):** Connect the red and white audio output jacks on the DVD player to the corresponding audio input jacks on your TV or audio receiver.
- **Digital Optical Audio:** For Dolby Digital surround sound, connect an optical cable from the digital optical output on the DVD player to the digital optical input on your compatible AV receiver or home theater system.

4.3 Power Connection

Once all video and audio connections are made, plug the DVD player's power cord into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Basic Playback

1. Power on your TV and select the correct input source for the DVD player.
2. Press the **POWER** button on the DVD player or remote control to turn on the unit.
3. Press the **OPEN/CLOSE** button to open the disc tray.
4. Place a DVD or CD disc onto the tray with the label side facing up.
5. Press the **OPEN/CLOSE** button again to close the tray. The disc will begin to load and play automatically, or display a menu.
6. Use the **PLAY**, **PAUSE**, **STOP**, **FAST FORWARD**, and **REWIND** buttons on the remote control to manage playback.

5.2 Using the On-Screen Graphical User Interface (GUI)

The GUI allows you to access various settings and features. Press the **SETUP** button on your remote control to enter the setup menu. Use the arrow buttons to navigate and the **ENTER** button to select options. Adjust settings such as video output, audio preferences, and parental controls.

5.3 Progressive Scan Output

To utilize the progressive scan feature, ensure your TV is progressive scan compatible and connected via component video cables. Access the video settings in the GUI to enable progressive scan output (e.g., 480p or 576p).

5.4 Aspect Ratio Adjustment

Use the **ASPECT** button on the remote control or navigate through the video settings in the GUI to switch between 16:9 (widescreen) and 4:3 (standard) aspect ratios to best fit your television screen.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your DVD player.

- **Cleaning the Unit:** Wipe the exterior of the DVD player with a soft, dry cloth. Do not use liquid cleaners or aerosol sprays.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Use a soft, lint-free cloth to wipe discs from the center outwards if cleaning is necessary.
- **Ventilation:** Ensure the ventilation openings on the unit are not blocked to prevent overheating.

7. TROUBLESHOOTING

If you encounter issues with your DVD player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected; power outlet not active.	Ensure power cord is securely plugged in. Test the outlet with another device.
No picture	Incorrect video connection; TV input not selected; disc issue.	Check video cables are securely connected. Select the correct input on your TV. Try a different disc.
No sound	Incorrect audio connection; TV/receiver volume too low; audio settings.	Verify audio cables are connected correctly. Increase volume. Check audio output settings in the DVD player's GUI.
Disc not playing	Disc is dirty or scratched; disc format not supported.	Clean the disc. Ensure the disc is a compatible format (DVD, CD, MP3 CD).
Remote control not working	Batteries are dead or inserted incorrectly; obstruction.	Replace batteries. Ensure line of sight to the DVD player's sensor.

8. SPECIFICATIONS

- **Model Name:** MVD2040-FLR
- **Brand:** Memorex
- **Media Type:** DVD, CD
- **Special Feature:** Progressive Scan
- **Connector Types:** Digital Optical, Composite (RCA)
- **Compatible Devices:** AV Receiver, Home Theater System, Television
- **Item Weight:** 3.4 Pounds
- **Audio Output Mode:** Surround
- **Supported Audio Format:** Dolby Digital
- **Surround Sound Channel Configuration:** 5.1
- **Video Encoding:** MPEG-2
- **File Format:** MPEG-2 (for video)
- **Video Output Resolution:** 480p, 576p
- **UPC:** 749720012633, 749720007462
- **Manufacturer:** Memorex

9. WARRANTY AND SUPPORT

This Memorex MVD2040-FLR DVD Player comes with a **90 Days Parts and Labor** warranty. For technical support or warranty claims, please refer to the contact information provided with your purchase documentation or visit the official Memorex website.

