

[Manuals.plus](#) /

› [Geberit](#) /

› Geberit 200F Flush Plate (Model 115.222.46.1) Instruction Manual

Geberit 115.222.46.1

Geberit 200F Flush Plate Instruction Manual

Model: 115.222.46.1

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your Geberit 200F Flush Plate. The Geberit 200F is designed for use with Geberit concealed cisterns, offering a reliable and efficient flush mechanism. Please read these instructions carefully before proceeding with installation or use to ensure proper function and longevity of the product.



Image 1: Geberit 200F Flush Plate, Matte Chrome finish. This image shows the front view of the flush plate, highlighting its design and the single flush button.

SETUP AND INSTALLATION

The Geberit 200F Flush Plate is intended for wall-mounted installation in conjunction with a compatible Geberit concealed cistern. Installation should ideally be performed by a qualified professional to ensure correct fitting and functionality. Refer

to the specific installation instructions provided with your Geberit concealed cistern for detailed steps.

General Installation Steps:

1. **Preparation:** Ensure the concealed cistern is correctly installed and the water supply is connected and tested. The flush plate frame should be securely mounted to the wall, flush with the finished wall surface.
2. **Connecting the Actuator Rods:** Attach the actuator rods from the flush plate to the corresponding levers on the cistern's flush valve. Adjust the length of the rods as necessary to ensure proper engagement.
3. **Mounting the Flush Plate:** Carefully align the flush plate with the mounting frame. Press firmly until it clicks into place. Ensure it is level and securely fastened.
4. **Function Test:** After installation, test the flush mechanism to confirm that both flush functions (if applicable) operate smoothly and that there are no leaks.

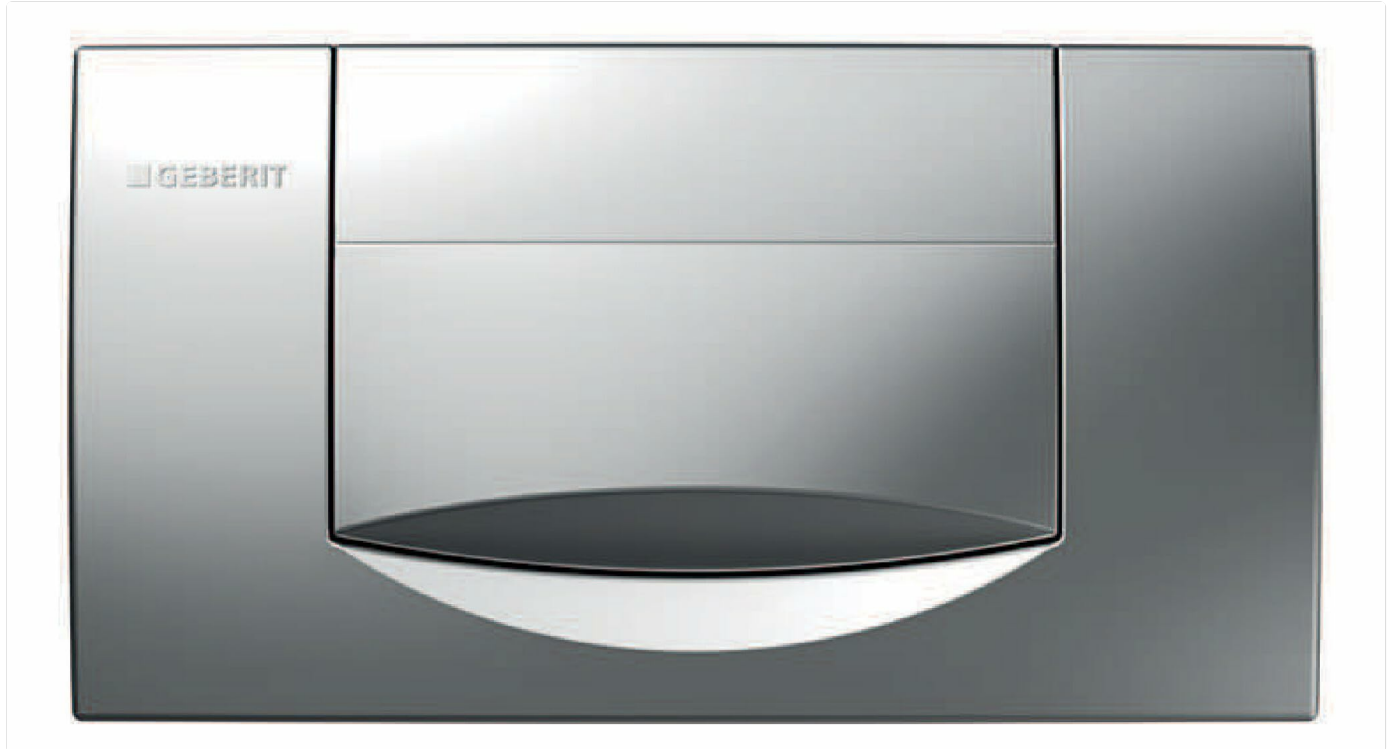


Image 2: Line drawing of the Geberit 200F Flush Plate, illustrating its basic form and the 'STOP' button. This diagram aids in understanding the component's structure during installation.

OPERATING INSTRUCTIONS

The Geberit 200F Flush Plate features a single button with a 'flush-stop-flush' mechanism, allowing for efficient water usage.

Flushing Operation:

- **Full Flush:** Press the flush button briefly and release it. The cistern will release a full volume of water to clear the toilet bowl.
- **Partial Flush / Flush Stop:** To initiate a partial flush or to stop an ongoing full flush, press the flush button and hold it down. Release the button when the desired amount of water has been flushed or when the flush is to be stopped. This allows for manual control over water consumption.

MAINTENANCE

Regular cleaning and proper care will help maintain the appearance and functionality of your Geberit 200F Flush Plate.

Cleaning Instructions:

- Use a soft, damp cloth and a mild, non-abrasive cleaning agent.
- Avoid using abrasive cleaners, scouring pads, or strong chemical detergents, as these can damage the matte chrome finish.
- Wipe the surface gently to remove dirt and water spots.
- Dry the flush plate with a clean, soft cloth to prevent water marks.

No internal user-serviceable parts are present in the flush plate itself. For issues related to the internal cistern mechanism, consult the cistern's manual or contact a professional plumber.

TROUBLESHOOTING

If you encounter issues with your Geberit 200F Flush Plate, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Flush button feels stiff or unresponsive.	Misaligned actuator rods or debris.	Ensure the flush plate is correctly seated. If the issue persists, carefully remove the flush plate and check for obstructions or misaligned actuator rods. Adjust as needed.
Water runs continuously after flushing.	Flush valve not sealing properly or actuator rod stuck.	Check if the flush button is returning to its original position. If not, inspect the actuator rods. If the problem is with the cistern's internal valve, professional service may be required.
Weak or incomplete flush.	Insufficient water in cistern or flush valve issue.	Verify the water supply to the cistern is fully open. If the issue persists, the cistern's fill valve or flush valve may need adjustment or repair by a professional.

For complex issues or if the problem cannot be resolved with the above steps, it is recommended to contact a qualified plumber or Geberit customer support.

SPECIFICATIONS

- Brand:** Geberit
- Model Number:** 115.222.46.1
- Color:** Matte Chrome
- Material:** Chrome-plated Plastic
- Product Dimensions (D x W x H):** 35 cm x 20 cm x 5.5 cm
- Installation Type:** Wall-mounted (for concealed cisterns)
- Number of Items:** 1

WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the documentation provided at the time of purchase or visit the official Geberit website. Warranty terms and conditions may vary by region and retailer.

If you require technical assistance or have questions not covered in this manual, please contact Geberit customer service or your local authorized Geberit dealer. Contact details can typically be found on the Geberit website or through your product retailer.

For further information, you may visit the official Geberit website:www.geberit.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question