

[Manuals.plus](#) /

› [Acer](#) /

› Acer P221Wd LCD Monitor User Manual

Acer P221Wd

Acer P221Wd LCD Monitor User Manual

Model: P221Wd

INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your Acer P221Wd LCD Monitor. Please read this manual thoroughly before using your monitor to ensure proper operation and to prevent damage.

The Acer P221Wd LCD Monitor features a high-quality display designed to present vivid and brilliant images. It offers a high contrast ratio for brighter, more life-like colors and a fast response time for realistic moving images. Its design aims to maximize viewing enjoyment while reducing eyestrain.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury to persons.

- Do not expose the monitor to rain or moisture.
- Do not open the monitor casing. There are no user-serviceable parts inside. Refer all servicing to qualified service personnel.
- Ensure proper ventilation. Do not block ventilation openings.
- Use only the power cord and adapter supplied with the monitor.
- Place the monitor on a stable, flat surface.
- Unplug the monitor from the power outlet before cleaning. Use a soft, damp cloth for cleaning. Do not use liquid or aerosol cleaners.

PACKAGE CONTENTS

Verify that all items are present in your package. If any items are missing or damaged, contact your retailer.

- Acer P221Wd LCD Monitor
- Power Cord
- DVI Cable
- VGA Cable (if included)
- User Manual (this document)



Image: Acer P221Wd LCD Monitor with its stand and typical cables (power, DVI). Actual contents may vary slightly.

SETUP

1. Assembling the Monitor Stand

1. Carefully remove the monitor and stand components from the packaging.
2. Attach the base to the stand column, ensuring it clicks securely into place or is fastened with the provided screw.
3. Attach the assembled stand to the back of the monitor panel. Ensure it is firmly secured.

Note: The monitor stand offers tilt adjustment. For optimal viewing, adjust the screen angle as needed.

2. Connecting the Monitor

Before making any connections, ensure both the monitor and your computer are powered off.

- **Video Connection:**

- For digital video, connect one end of the DVI cable to the DVI port on the monitor and the other end to the DVI port on your computer's graphics card.
- For analog video, connect one end of the VGA cable to the VGA port on the monitor and the other end to the VGA port on your computer's graphics card.
- *It is recommended to use the DVI connection for optimal image quality.*

- **Power Connection:**

- Connect the power cord to the power input on the back of the monitor.
- Plug the other end of the power cord into a grounded electrical outlet.



Image: Illustrative rear view of a monitor showing typical DVI and power input ports. Connect the appropriate cables as described.

3. Powering On

1. Power on your computer.
2. Press the power button on the front or bottom of the monitor. The power indicator light should illuminate.

OPERATING THE MONITOR

On-Screen Display (OSD) Menu

The OSD menu allows you to adjust various monitor settings. Access the OSD menu using the buttons located on the front or bottom bezel of the monitor.

Common OSD Menu Options:

- **Brightness:** Adjusts the overall luminance of the screen.
- **Contrast:** Adjusts the difference between the lightest and darkest areas of the screen.
- **Color Settings:** Allows adjustment of color temperature, RGB levels, or selection of preset color modes (e.g., Warm, Cool, User).
- **Input Select:** Manually switch between DVI and VGA input sources.
- **Auto Adjust (VGA only):** Optimizes the display settings automatically for analog signals.
- **Image Settings:** Adjusts sharpness, aspect ratio, and other image properties.

Refer to the on-screen prompts and your monitor's specific button layout for navigation within the OSD menu.

Optimal Resolution

For the best image quality, set your computer's display resolution to the monitor's native resolution: **1680 x 1050**.

To change the resolution in Windows:

1. Right-click on an empty area of your desktop.
2. Select "Screen resolution" or "Display settings".

3. Choose 1680 x 1050 from the resolution dropdown menu and apply the changes.

MAINTENANCE

Cleaning the Monitor

- Always unplug the monitor from the power outlet before cleaning.
- Use a soft, lint-free cloth lightly dampened with water or a mild, non-abrasive screen cleaner.
- Do not spray cleaner directly onto the screen. Apply it to the cloth first.
- Wipe the screen gently to remove dust and smudges.
- For the monitor casing, use a soft, dry cloth.

Storage

If storing the monitor for an extended period, disconnect all cables and store it in a cool, dry place, preferably in its original packaging to protect it from dust and physical damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No image on screen	Monitor not powered on. Video cable not connected properly. Incorrect input source selected. Computer is in sleep mode or off.	Press the monitor's power button. Check video cable connections at both the monitor and computer. Use the OSD menu to select the correct input (DVI/VGA). Wake up or power on the computer.
Image is blurry or distorted (VGA only)	Resolution not set to native. Auto-adjust not performed.	Set resolution to 1680 x 1050. Perform "Auto Adjust" from the OSD menu.
Colors appear incorrect	Color settings are misconfigured.	Adjust color settings in the OSD menu or reset to factory defaults.
"Input Not Supported" message	Resolution or refresh rate is outside monitor's supported range.	Restart computer in Safe Mode to adjust resolution to 1680 x 1050 @ 60Hz.

SPECIFICATIONS

Feature	Detail
Model Name	Acer P221Wd
Display Size	22-inch Wide
Panel Type	LCD
Native Resolution	1680 x 1050 @ 60Hz
Aspect Ratio	16:10 (based on native resolution)
Pixel Pitch	0.282mm

Feature	Detail
Contrast Ratio	2500:1 ACM
Brightness	300 cd/m²
Response Time	5 ms
Viewing Angle (H/V)	170°(H), 160°(V)
Input Signal	DVI w/HDCP, VGA
USB 2.0 Ports	1
Dimensions (LxWxH)	22.5 x 4.8 x 18.5 inches (57.15 x 12.19 x 46.99 cm)
Weight	13.6 pounds (6.17 kg)
Color	Black

Warranty Information

Acer products are covered by a limited warranty. Please refer to the warranty card included with your product or visit the official Acer website for detailed warranty terms and conditions specific to your region.

Important: Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support

If you encounter issues that cannot be resolved using the troubleshooting guide, or require further assistance, please contact Acer customer support.

- **Online Support:** Visit the official Acer support website for FAQs, drivers, and service information.
- **Telephone Support:** Refer to your product documentation or the Acer website for regional contact numbers.

When contacting support, please have your monitor's model name (P221Wd) and serial number ready.

Ask a Question About This Manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0017VGEJC>

More documents and user manuals: <https://manuals.plus/>