

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Aluratek](#) /

› [Aluratek 7-Inch LCD Digital Photo Frame \(ADPF07SF\) Instruction Manual](#)

## Aluratek ADPF07SF

# Aluratek 7-Inch LCD Digital Photo Frame (ADPF07SF) Instruction Manual

Model: ADPF07SF

[Overview](#) [Setup](#) [Operating](#) [Introduction](#) [What's in the Box](#) [Product](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## 1. INTRODUCTION

The Aluratek 7-inch LCD Digital Photo Frame (ADPF07SF) provides a convenient way to display your cherished digital photos. Featuring a true color LCD panel with a resolution of 1024 x 600 and a 16:9 aspect ratio, this frame brings your memories to life with vibrant clarity. Designed for ease of use, it supports automatic slideshows and various display modes, making it a versatile addition to any home or office environment. This manual will guide you through the setup, operation, and maintenance of your digital photo frame.

## 2. WHAT'S IN THE Box

Verify that all items are present in the package:

- Aluratek 7-Inch LCD Digital Photo Frame (ADPF07SF)
- Power Adapter
- Detachable Stand
- Instruction Manual



Figure 2.1: Box contents of the Aluratek Digital Photo Frame, showing the frame, power adapter, and user manual.

## 3. PRODUCT OVERVIEW

The Aluratek ADPF07SF features a sleek design with intuitive controls and multiple connectivity options for media input.

### 3.1 Front View

Figure 3.1: The front of the digital photo frame, showcasing the 7-inch LCD screen.

### 3.2 Rear and Side Views

The rear of the frame includes control buttons and mounting options, while the side provides ports for external media.



Figure 3.2: Rear view of the frame, displaying the power button, navigation controls, and wall-mount holes.

Figure 3.3: Side view of the frame, illustrating the SD/SDHC card slot and USB 2.0 port for media input.

## 4. SETUP

### 4.1 Attaching the Stand

1. Locate the detachable stand included in the box.
2. Insert the stand into the designated slot on the back of the photo frame.
3. Adjust the stand to achieve the desired viewing angle, supporting either vertical or horizontal orientation.

## 4.2 Powering On the Device

1. Connect the power adapter to the DC IN port on the frame.
2. Plug the power adapter into a standard electrical outlet.
3. Press the Power button on the back of the frame to turn it on. The frame will typically boot up and begin an automatic slideshow if media is present.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Loading Photos and Videos

The Aluratek ADPF07SF supports media playback directly from USB flash drives and SD/SDHC memory cards (up to 32 GB).

1. Insert a USB flash drive into the USB port or an SD/SDHC card into the SD card slot on the side of the frame.
2. The frame will automatically detect the inserted media and may begin a slideshow.
3. Use the navigation buttons on the back of the frame or the remote control (if applicable) to browse files, select specific photos/videos, or adjust settings.

### 5.2 Slideshow and Display Modes

The frame is designed to automatically start a photo slideshow upon power-on. You can customize the slideshow experience:

- **Display Modes:** Configure how photos are displayed (e.g., full screen, original aspect ratio).
- **Transition Modes:** Choose from various transition effects between photos.
- **Playback Order:** Set photos to play in order, or shuffle them randomly.
- **Video Autoplay:** Enable or disable automatic playback of videos within the slideshow.

Access these settings through the frame's menu system using the control buttons.

### 5.3 Using the Remote Control

While the product description states no remote control is included, some versions may come with one. If your unit includes a remote, it provides convenient access to various functions from a distance.

- **Power:** Turn the frame on/off.
- **Menu:** Access the main settings menu.
- **Navigation:** Use arrow keys to navigate menus and browse media.
- **Enter:** Confirm selections.
- **Photo/Music/Movie:** Switch between media types.
- **Volume:** Adjust audio volume for videos or background music.
- **Setup:** Directly access setup options.
- **Rotate:** Rotate the currently displayed image.

Video 5.1: A demonstration of a digital picture frame, showing unboxing, power-on, and basic navigation. Note: This video features a 10-inch frame, while your product is 7-inch, but the general operation principles are similar.

## 6. MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the screen and frame. Avoid abrasive cleaners or solvents.
- Storage:** When not in use for extended periods, unplug the frame and store it in a cool, dry place.
- Handling:** Handle the frame with care to prevent damage to the screen or internal components.

## 7. TROUBLESHOOTING

Problem	Possible Solution
Frame does not power on.	Ensure the power adapter is securely connected to both the frame and a working electrical outlet. Try a different outlet.
No photos or videos display.	Verify that the USB drive or SD card is inserted correctly and contains compatible media files (e.g., JPEG for photos, common video formats). Check the file system of the storage device.
Photos appear distorted or incorrect.	Ensure photos are in a supported format and resolution. The frame supports 1024 x 600 resolution. Large files may take longer to load or display.
Buttons are unresponsive.	Unplug the power adapter, wait 10 seconds, and plug it back in to perform a soft reset. If a reset button is available, use a thin object to press it.

## 8. SPECIFICATIONS

Feature	Detail
Screen Size	7 Inches
Resolution	1024 x 600 (16:9 aspect ratio)
Display Type	TFT True Color LCD
Connectivity	USB 2.0, SD/SDHC Card (up to 32 GB)
Color	Black
Product Dimensions	7.5 x 7.5 x 0.99 inches
Item Weight	8 ounces
Model Number	ADPF07SF
Manufacturer	Aluratek
Special Features	Auto Slideshow, Wall Mountable
Touch Screen	No
Built-in Memory	No
Built-in Battery	No

## 9. WARRANTY & SUPPORT

---

For detailed warranty information and technical support, please refer to the official Aluratek website or contact their customer service directly. Keep your purchase receipt for warranty claims.

**Online Support:** Visit [www.aluratek.com/support](http://www.aluratek.com/support)

**Contact:** Refer to the contact information provided on the Aluratek website or in your product packaging.

© 2026 Aluratek. All rights reserved.