

## Braun CombiMax K750/700/650/600 Type 3202, 3205

# Braun CombiMax Food Processor Bowl Instruction Manual

For Models K750, K700, K650, K600 (Type 3202, 3205)

## INTRODUCTION

---

This manual provides essential instructions for the proper use, installation, and maintenance of your Braun CombiMax food processor bowl. This replacement bowl is designed for specific Braun CombiMax food processor models, including K750, K700, K650, and K600 (Type 3202, 3205). Please read these instructions carefully before first use to ensure safe and efficient operation.

## SETUP AND INSTALLATION


---

Before installing the food processor bowl, ensure your Braun CombiMax motor unit is unplugged from the power outlet. Place the motor unit on a stable, flat surface.

- Inspect the Bowl:** Carefully examine the new bowl for any signs of damage from shipping. Ensure all components, including the central drive shaft and locking tabs, are intact.
- Position the Bowl:** Align the bowl with the motor unit base. The handle of the bowl should typically be positioned towards the front or side, depending on your specific CombiMax model.
- Secure the Bowl:** Gently lower the bowl onto the motor unit base. Rotate the bowl clockwise until it locks securely into place. You should feel a click or resistance, indicating it is properly seated. Do not force the bowl. If it does not lock, lift it, re-align, and try again.
- Attach Accessories:** Once the bowl is secured, you can insert the desired processing accessories (e.g., blade, grater disc) onto the central drive shaft inside the bowl. Refer to your main food processor manual for specific accessory installation.



This image displays the bowl on its side, illustrating the base with its locking tabs designed to securely attach to the food processor motor unit.

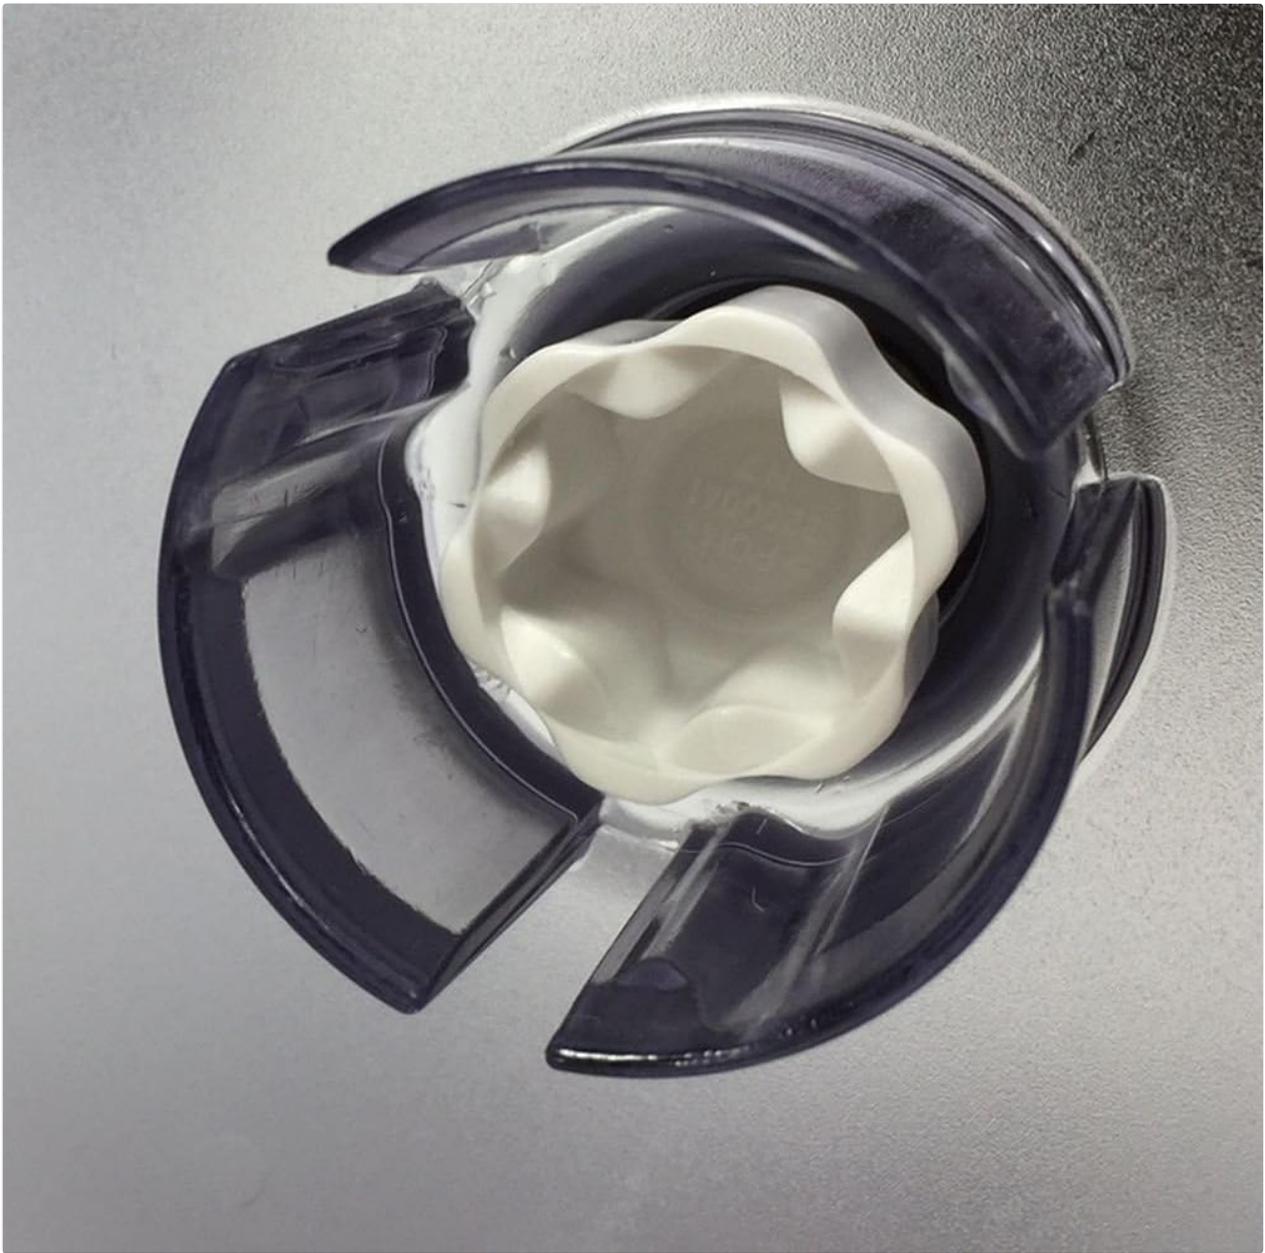


A detailed view of the bowl's underside, showing the coupling mechanism that engages with the food processor's motor base for operation.

## OPERATING INSTRUCTIONS

---

The food processor bowl serves as the primary container for processing ingredients. Its operation is directly linked to the main motor unit and accessories.


- **Ingredient Capacity:** Observe the measurement markings on the side of the bowl. Do not exceed the maximum fill lines indicated for liquids or dry ingredients to prevent spills and ensure efficient processing. The bowl features markings in milliliters (ml), US fluid ounces (US fl oz), and US cups.
- **Lid Placement:** Always ensure the food processor lid is correctly placed and locked onto the bowl before operating the appliance. Most CombiMax models have safety interlocks that prevent operation if the lid is not secured.
- **Processing:** For specific processing tasks (chopping, mixing, kneading, slicing), refer to the operating instructions provided with your original Braun CombiMax food processor motor unit and its accessories.

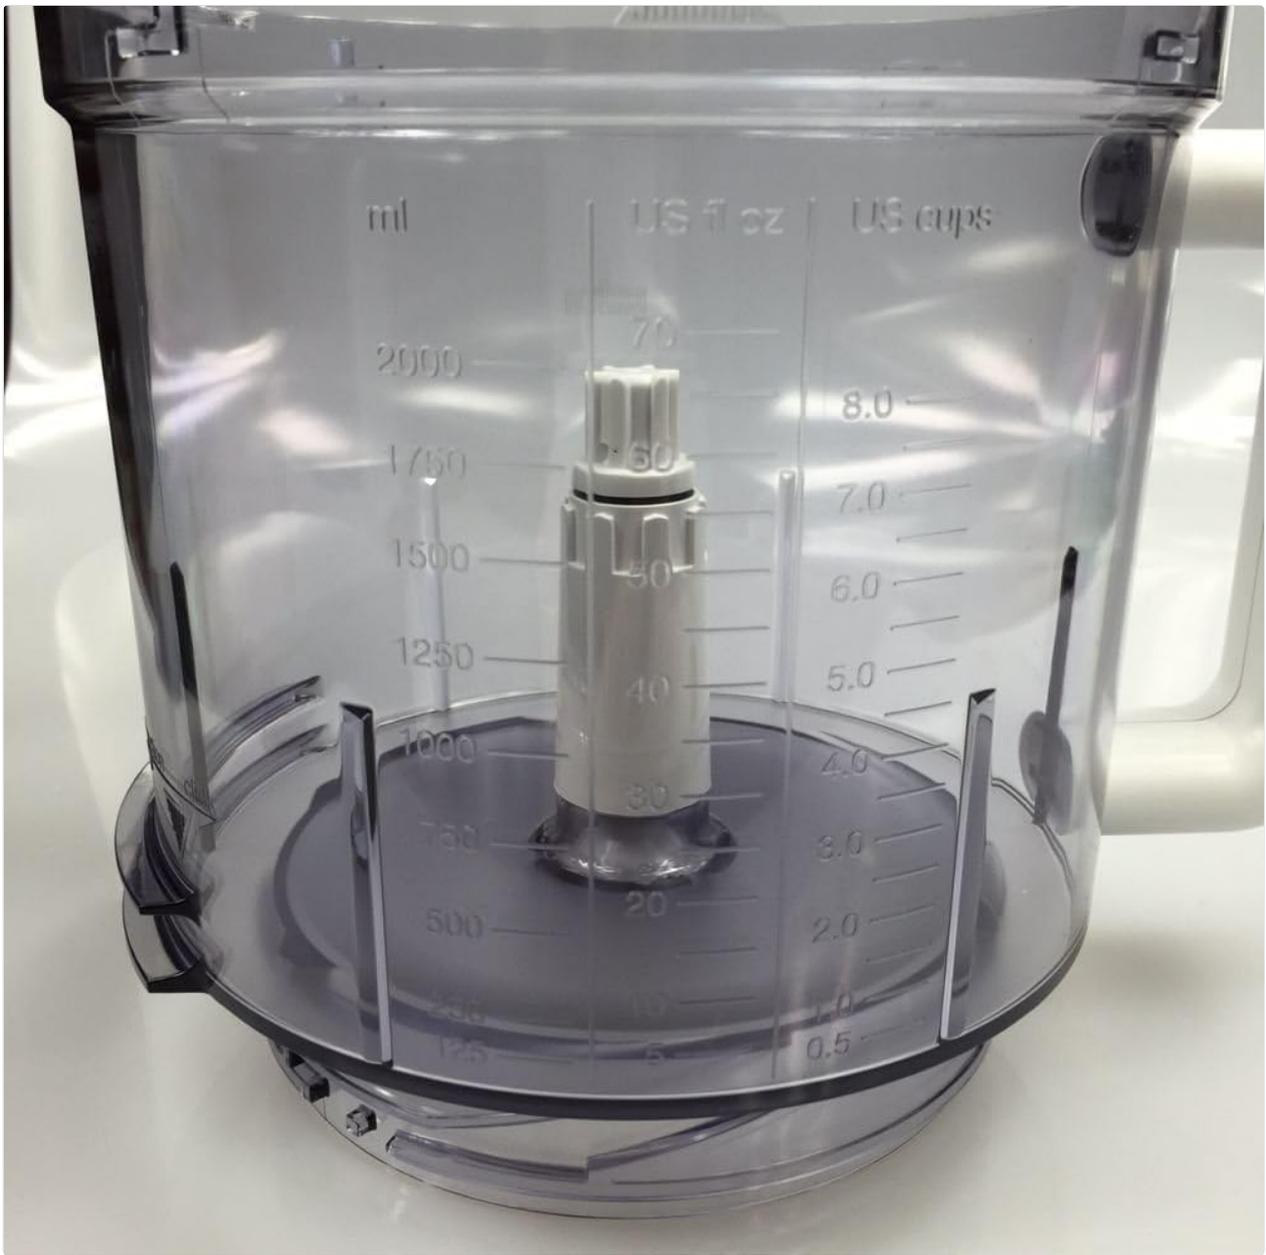

This image displays the transparent food processor bowl, featuring clear measurement markings in milliliters, US fluid ounces, and US cups. The central drive shaft, where accessories attach, is visible at the bottom.



A top-down view of the food processor bowl, highlighting its wide opening for adding ingredients and the internal design.

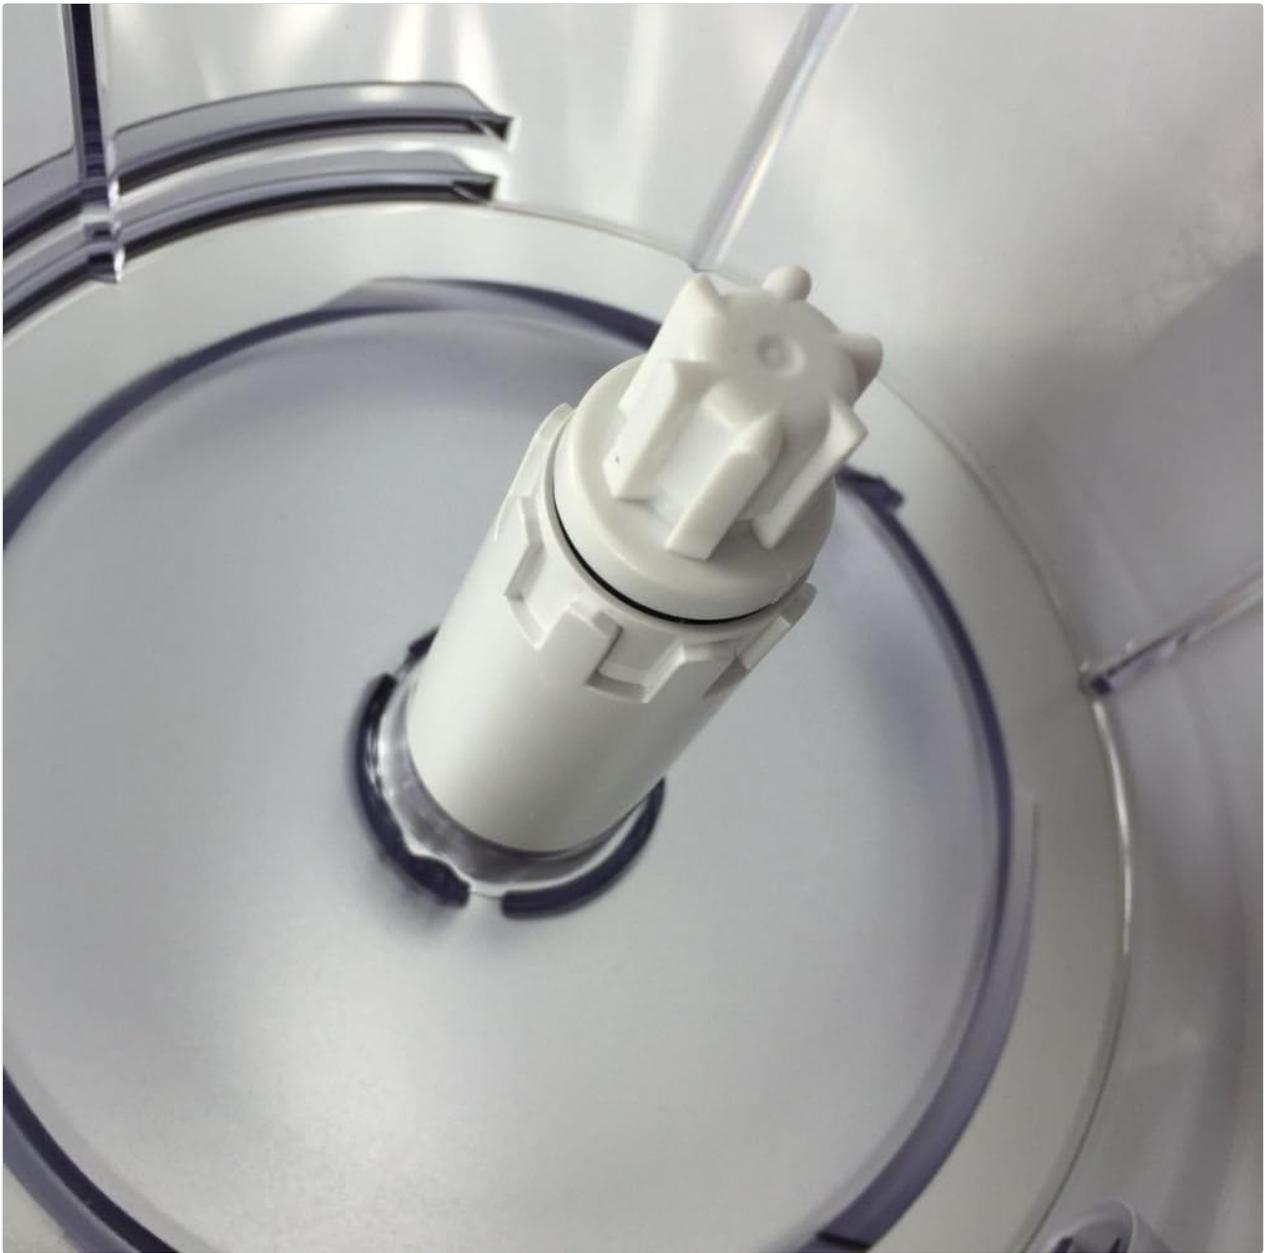

This close-up shows the central drive shaft within the bowl, where various processing attachments like blades or graters are mounted.

## MAINTENANCE AND CLEANING

---

Proper cleaning and maintenance will extend the life of your food processor bowl.

- **Immediate Cleaning:** Clean the bowl immediately after each use to prevent food residue from drying and becoming difficult to remove.
- **Hand Washing:** For best results and to preserve the clarity of the plastic, hand wash the bowl with warm water and a mild dish soap. Use a soft sponge or cloth. Avoid abrasive cleaners or scouring pads.
- **Dishwasher Cleaning:** The bowl is generally dishwasher safe. Place it on the top rack of your dishwasher to avoid excessive heat exposure, which can potentially warp plastic components over time.
- **Drying and Storage:** Ensure the bowl is completely dry before storing to prevent water spots or odors. Store in a clean, dry place.

## TROUBLESHOOTING

---

If you encounter issues with your food processor bowl, consider the following common solutions:

- **Bowl Not Locking Securely:**

- Ensure the bowl is correctly aligned with the motor unit base.
- Rotate the bowl firmly clockwise until it clicks into its locked position.
- Check for any food debris or obstructions on the base of the bowl or the motor unit that might prevent proper seating.

- **Leaks During Operation:**

- Verify that the bowl is securely locked onto the motor base.
- Ensure the lid is properly placed and locked onto the bowl.
- Check the condition of any seals or gaskets (if applicable to your specific food processor model's lid or accessories) for wear or damage.

- **Difficulty Attaching Accessories:**

- Ensure the bowl is empty and clean before attempting to attach accessories.
- Align the accessory correctly with the central drive shaft. Do not force it.

## SPECIFICATIONS

Feature	Detail
Brand	Braun
Compatible Models	Braun CombiMax K750, K700, K650, K600 (Type 3202, 3205)
Color	Transparent
Material	Plastic
Item Weight	680 grams
Package Dimensions	23.2 x 23 x 18.6 cm
Capacity Markings	Milliliters (ml), US Fluid Ounces (US fl oz), US Cups

## WARRANTY INFORMATION

This food processor bowl is a replacement part. For specific warranty terms and conditions, please refer to the original Braun CombiMax food processor manual that came with your appliance. Alternatively, you may contact Braun customer support directly for information regarding replacement parts.

## SUPPORT

Should you require further assistance, have questions about your Braun CombiMax food processor bowl, or need to report an issue, please contact Braun customer service. You can typically find contact information, including phone numbers and online support portals, on the official Braun website for your region.

Please have your food processor model number (e.g., K750, K700, K650, K600) and the bowl type (3202, 3205) ready when contacting support to facilitate a quicker resolution.

© 2024 Braun. All rights reserved.