

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sungale](#) /

› [Sungale AD801 8-Inch Digital Picture Frame User Manual](#)

## Sungale AD801

# Sungale AD801 8-Inch Digital Picture Frame User Manual

Model: AD801



## INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, and maintaining your Sungale AD801 8-Inch Digital Picture Frame. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.

The Sungale AD801 is designed to display photos, play videos, and audio, and supports various memory card formats. It features an 8-inch high-resolution screen (800x600) and 128MB of internal memory.

## PACKAGE CONTENTS

Please verify that all items are present in the package:

- Sungale AD801 Digital Picture Frame
- Power Adapter
- Remote Control
- User Manual (this document)

## PRODUCT OVERVIEW



**Figure 1:** Front view of the Sungale AD801 Digital Picture Frame. The frame is black with a matte finish, showcasing an 8-inch screen. The screen displays a vibrant image of a mother and child, highlighting the frame's primary function.



**Figure 2:** Angled view of the Sungale AD801 Digital Picture Frame. This perspective shows the frame's sleek design and how it can be positioned, displaying a group photo of a family outdoors.



**Figure 3:** Rear view of the Sungale AD801 Digital Picture Frame. This image highlights the various ports, including USB, and memory card slots, along with control buttons and the adjustable stand.



**Figure 4:** Alternative angled rear view of the Sungale AD801 Digital Picture Frame, providing a clearer look at the stand mechanism and ventilation grilles.



**Figure 5:** The remote control for the Sungale AD801 Digital Picture Frame. It features various buttons for power, navigation, volume, playback, and mode selection, enabling convenient operation from a distance.

## SETUP

### 1. Power Connection

1. Connect the provided power adapter to the DC IN port on the back of the digital picture frame.
2. Plug the other end of the power adapter into a standard electrical outlet.
3. The frame should automatically power on or enter standby mode.

### 2. Positioning the Frame

- Use the integrated stand on the back of the frame to position it on a flat surface such as a desk, shelf, or mantle.
- The frame can also be mounted on a wall using the appropriate mounting hardware (not included) and the wall-mount holes on the back.

### 3. Inserting Memory Cards / USB Devices

The AD801 supports various memory card formats (SD/MS/MMC/XD/CF/MD) and USB devices.

1. Locate the memory card slots and USB port on the side or back of the frame.
2. Insert your memory card or USB flash drive into the corresponding slot/port. Ensure it is inserted correctly.
3. The frame will automatically detect the inserted media and prompt you to select a viewing mode (Photo, Music, Video).

## OPERATING INSTRUCTIONS

### 1. Basic Navigation

Use the buttons on the back of the frame or the remote control for navigation.

- **Power Button:** Turns the frame on/off or puts it into standby.
- **Menu Button:** Accesses the main menu for settings and options.
- **Arrow Buttons (Up/Down/Left/Right):** Navigate through menus and select files.
- **Enter Button:** Confirms selections.
- **Exit Button:** Returns to the previous screen or exits a menu.

### 2. Photo Playback

1. Insert a memory card or USB device containing photos, or use the internal memory.
2. Select "Photo" from the main menu or when prompted.
3. Photos will begin playing in a slideshow format.
4. Use the remote control to pause, skip, rotate, or adjust slideshow settings (e.g., interval, transition effects).

### 3. Video Playback

1. Insert a memory card or USB device containing video files.
2. Select "Video" from the main menu.
3. Navigate to and select the desired video file to play.
4. Use the remote control for playback functions like play, pause, fast forward, and rewind.

### 4. Audio Playback

1. Insert a memory card or USB device containing audio files.
2. Select "Music" from the main menu.
3. Navigate to and select the desired audio file to play.
4. Adjust volume using the remote control.

### 5. Calendar, Clock, and Alarm Functions

The AD801 includes built-in calendar, clock, and alarm features.

- Access these functions through the main menu.
- Set the current date and time.
- Configure alarms as needed.

## 6. Transferring Files (USB 2.0)

The frame supports rapid file transfers via USB 2.0.

1. Connect the frame to a computer using a USB cable (not included).
2. The frame will appear as a removable disk on your computer.
3. Drag and drop files (photos, videos, music) to and from the frame's internal memory or inserted media.

## MAINTENANCE

### Cleaning the Frame and Screen

- Always power off and unplug the frame before cleaning.
- Use a soft, dry, lint-free cloth to gently wipe the screen and frame.
- For stubborn marks on the screen, slightly dampen the cloth with water or a screen-cleaning solution designed for electronics. Do not spray liquid directly onto the screen.
- Avoid using abrasive cleaners, solvents, or aerosol sprays, as they may damage the surface.

### Storage

- When not in use for extended periods, store the frame in a cool, dry place, away from direct sunlight and extreme temperatures.
- It is recommended to store it in its original packaging to protect it from dust and physical damage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty; power outlet not working.	Ensure power adapter is securely connected to the frame and a working electrical outlet. Try a different outlet.
No image displayed.	No memory card inserted; unsupported file format; frame in wrong mode.	Insert a memory card with supported files. Check file formats (JPEG for photos). Ensure the frame is in Photo/Video mode.
Remote control not working.	Batteries are dead or incorrectly inserted; remote not pointed at sensor.	Replace batteries in the remote control. Ensure the remote is pointed directly at the frame's IR sensor.
Cannot read memory card/USB.	Card/USB not inserted correctly; card/USB is corrupted or unsupported format.	Reinsert the card/USB. Try a different card/USB. Ensure the card/USB is formatted to a compatible file system (e.g., FAT32).

## SPECIFICATIONS

Feature	Detail
Model Number	AD801
Screen Size	8 Inches
Resolution	800x600 (SVGA)
Internal Memory	128MB (stores up to 800 photos)
Supported Memory Cards	SD, MS, MMC, XD, CF, MD
USB Port	USB 2.0
Multimedia Playback	Photo, Video, Audio, eBooks
Additional Functions	Calendar, Clock, Alarm
Product Dimensions	13.5 x 9.75 x 2.76 inches
Item Weight	2.65 pounds
Color	Black
Manufacturer	Sungale Group Inc.

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Sungale website or contact Sungale customer service directly. Contact details are typically found on the manufacturer's website or on the product packaging.

*Note: Specific warranty terms may vary by region and purchase date. Please retain your proof of purchase for warranty claims.*

© 2023 Sungale Group Inc. All rights reserved.  
For more information, visit [www.sungale.com](http://www.sungale.com)

## Related Documents - AD801

	<p><a href="#">Sungale Digital Photo Frame User Manual: Features, Setup, and Troubleshooting</a></p> <p>Comprehensive user manual for the Sungale Digital Photo Frame. Learn about setup, connecting to PC, photo, music, video playback, e-book, calendar, troubleshooting, specifications, and warranty.</p>
---	--

 <p><b>Sungale</b> Cloud Frame Quick Start Guide MODEL: CPF1032</p>	<p><a href="#"><u>Sungale Cloud Frame CPF1032 Quick Start Guide</u></a></p> <p>Get started quickly with the Sungale Cloud Frame CPF1032. This guide covers package contents, setup, Wi-Fi connection, Google account integration, online features like My Cloud Album, Online Photos/Videos, Dropbox, Social Media, local media playback, and support information.</p>
 <p><b>Sungale</b> Wireless Digital Photo Frame User's Manual MODEL: AD702</p> <p><small>For ongoing product support, visit the manual at <a href="http://www.sungale.com">www.sungale.com</a></small></p>	<p><a href="#"><u>Sungale AD702 Wireless Digital Photo Frame User Manual</u></a></p> <p>User manual for the Sungale AD702 Wireless Digital Photo Frame, covering setup, operation, features, specifications, and support.</p>
 <p><b>Sungale</b> WiFi Digital Photo Frame User's Manual MODEL: AD1501W</p> <p><small>For ongoing product support, visit the manual at <a href="http://www.sungale.com">www.sungale.com</a></small></p>	<p><a href="#"><u>Sungale AD1501W WiFi Digital Photo Frame User Manual</u></a></p> <p>Comprehensive user manual for the Sungale AD1501W WiFi Digital Photo Frame, covering setup, operation, features, safety, and support.</p>
 <p><b>Sungale</b> Cloud Frame QUICK START GUIDE Model: CPF1051+</p>	<p><a href="#"><u>Sungale Cloud Frame CPF1051+ Quick Start Guide</u></a></p> <p>A quick start guide for the Sungale Cloud Frame CPF1051+, covering setup, Wi-Fi connection, registration, software updates, and photo uploading.</p>
 <p><b>Sungale</b> Cloud Frame User's Manual MODEL: CPF1510+</p> <p><small>For ongoing product support, visit the manual at <a href="http://www.sungale.com">www.sungale.com</a></small></p>	<p><a href="#"><u>Sungale CPF1510+ Cloud Frame User Manual</u></a></p> <p>Comprehensive user manual for the Sungale CPF1510+ Cloud Frame, covering setup, operation, advanced features like Wi-Fi, Google integration, cloud services, and troubleshooting.</p>