

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Pioneer](#) /

› [Pioneer CLD-2080 CD CDV LaserDisc Player User Manual](#)

Pioneer CLD-2080

Pioneer CLD-2080 CD CDV LaserDisc Player User Manual

Model: CLD-2080

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Pioneer CLD-2080 CD CDV LaserDisc Player. Please read this manual thoroughly before using the unit and retain it for future reference. The Pioneer CLD-2080 is designed to play Compact Discs (CD), Compact Disc Videos (CDV), and LaserDiscs (LD), offering a versatile entertainment experience.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following precautions:

- **Power Supply:** Connect the unit only to the specified power supply voltage.
- **Ventilation:** Do not block ventilation openings. Ensure adequate space around the unit for proper airflow.
- **Moisture:** Do not expose the unit to rain or moisture. Avoid placing objects filled with liquids, such as vases, on the unit.
- **Foreign Objects:** Do not insert any metallic objects or foreign materials into the unit's openings.
- **Servicing:** Do not attempt to service the unit yourself. Refer all servicing to qualified service personnel.
- **Laser Radiation:** This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

3. PRODUCT OVERVIEW

The Pioneer CLD-2080 features a robust design for playing various disc formats. While specific images for this model are not available, typical LaserDisc players include:

3.1 Front Panel

The front panel typically includes the disc tray, power button, play/pause, stop, fast forward/rewind, track/chapter skip buttons, and a display showing playback status and track information. Some models may also feature a headphone jack with volume control.

3.2 Rear Panel

The rear panel houses the various input and output connections. For the CLD-2080, these include:

- **Video Output:** Composite video output (RCA yellow jack) for connecting to a television or monitor.
- **Audio Output:** Stereo analog audio outputs (RCA red/white jacks) for connecting to an amplifier or receiver.
- **AC Power Input:** For connecting the power cord.

3.3 Remote Control

A dedicated remote control (not pictured) provides convenient access to all playback functions, disc navigation, and system settings from a distance.

4. SETUP

4.1 Connecting to Audio/Video Systems

1. **Video Connection:** Connect a composite video cable (yellow RCA) from the 'VIDEO OUT' jack on the CLD-2080's rear panel to the 'VIDEO IN' jack on your television or monitor.
2. **Audio Connection:** Connect stereo RCA audio cables (red for right, white for left) from the 'AUDIO OUT' jacks on the CLD-2080's rear panel to the 'AUDIO IN' jacks on your amplifier or receiver.

4.2 Power Connection

After all audio and video connections are made, plug the AC power cord into the 'AC IN' receptacle on the rear of the CLD-2080, and then into a wall outlet.

5. OPERATING INSTRUCTIONS

5.1 Loading and Unloading Discs

1. Press the 'OPEN/CLOSE' button on the front panel or remote control to open the disc tray.
2. Carefully place the CD, CDV, or LaserDisc onto the tray with the label side facing up. Ensure the disc is centered.
3. Press the 'OPEN/CLOSE' button again to close the disc tray.

5.2 Basic Playback

- **Power On:** Press the 'POWER' button on the front panel or remote control.
- **Play:** After loading a disc, press the 'PLAY' button. Playback will begin automatically for most discs.
- **Pause:** Press the 'PAUSE' button to temporarily stop playback. Press 'PLAY' again to resume.
- **Stop:** Press the 'STOP' button to halt playback and return the disc to the beginning.
- **Skip Tracks/Chapters:** Use the 'SKIP' (▶▶ | | ◀◀) buttons to move to the next or previous track/chapter.
- **Fast Forward/Rewind:** Use the 'FF' (▶▶▶) and 'REW' (◀◀◀) buttons to scan through the disc quickly.

6. MAINTENANCE

6.1 Cleaning the Unit

Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. For stubborn dirt, use a cloth lightly dampened with a mild detergent solution, then wipe dry.

6.2 Cleaning Discs

Wipe discs gently from the center outwards using a soft, lint-free cloth. Do not use solvents or abrasive

cleaners. Store discs in their cases to prevent dust and scratches.

7. TROUBLESHOOTING

If you encounter problems with your CLD-2080, consult the following table before seeking service:

Problem	Possible Cause	Solution
No power	Power cord disconnected; Power outlet faulty	Check power cord connection; Try a different outlet
No audio	Audio cables disconnected; Amplifier/receiver input incorrect	Check audio cable connections; Select correct input on amplifier/receiver
No video	Video cable disconnected; TV input incorrect	Check video cable connection; Select correct input on TV
Disc does not play	Disc inserted incorrectly; Disc is dirty or damaged	Reinsert disc correctly; Clean or replace disc

8. SPECIFICATIONS

- **Disc formats:** CD, LD
- **Signal to Noise Ratio:** 107dB
- **Dynamic range:** 98dB
- **Channel separation:** 99dB
- **Total harmonic distortion:** 0.003%
- **Line output:** 0.2V
- **Video Connections:** Composite
- **Dimensions (W x D x H):** 420 x 439 x 132mm (16.54"W x 17.28"L x 5.2"H)
- **Weight:** 10.2kg (2.4 Pounds)
- **Year:** 1990
- **Media Type:** CD
- **Connector Type:** RCA
- **Connectivity Technology:** Composite
- **Audio Output Mode:** Stereo
- **Supported Audio Format:** CD
- **Video Encoding:** MPEG-2 (*Note: This specification may refer to a related product or general capability, as LaserDisc uses analog video.*)
- **Compatible Devices:** Television
- **Analog Video Format:** NTSC
- **Video Output Resolution:** 480i

9. IMPORTANT INFORMATION AND SUPPORT

Please inspect and test your device within 72 hours (3 days) upon delivery. Any claim after this period may not be validated. If your device is inoperable out of the box, inform the seller immediately with details (photos & short video).

Do not attempt to remove the cover, as there may be an anti-tamper/seal sticker. Removal of this sticker may void return and refund eligibility. All devices are typically photographed, serial numbers recorded, and tested before shipping.

This device is sold AS IS and without any warranty. A 20% restocking fee may apply for any returned item. These measures are in place to ensure fair transactions.

For further support or inquiries, please contact your retailer or the manufacturer directly.