

[Manuals.plus](#) /

› [Rayovac](#) /

› Rayovac Sportsman 3D LED Camping Lantern: User Manual

Rayovac SE3DLND

Rayovac Sportsman 3D LED Camping Lantern: User Manual

INTRODUCTION

The Rayovac Sportsman 3D LED Camping Lantern (Model SE3DLND) is designed to provide reliable and long-lasting illumination for various outdoor activities and emergency situations. This manual outlines the proper setup, operation, maintenance, and troubleshooting procedures to ensure optimal performance and longevity of your lantern.



Figure 1: Rayovac Sportsman 3D LED Camping Lantern

SETUP

Battery Installation

The lantern requires three (3) D-cell alkaline batteries (not included). Follow these steps to install the batteries:

1. Unscrew the base of the lantern by twisting it counter-clockwise.
2. Insert three D-cell batteries into the battery compartment, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Align the arrow on the battery compartment with the corresponding tab on the base. This alignment is crucial for proper contact and secure closure.
4. Twist the base clockwise until it is securely fastened. Ensure the base is fully tightened to maintain water resistance.



Figure 2: Battery compartment with alignment arrows

Note: Proper alignment of the arrows on the battery compartment and base is essential for the lantern to function. If the lantern does not turn on after battery installation, recheck the alignment and ensure the base is fully secured.

Initial Use

After installing the batteries, press the power button located on the front of the lantern to cycle through the light modes.

OPERATING INSTRUCTIONS

The Rayovac Sportsman 3D LED Camping Lantern features multiple lighting modes for various needs:

- **High Mode:** Press the power button once for maximum brightness (up to 305 lumens).
- **Energy Saving Mode:** Press the power button a second time to switch to a lower brightness setting, conserving battery life.
- **Off:** Press the power button a third time to turn the lantern off.
- **Strobe Mode:** To activate the strobe light feature, press and hold the power button for approximately three seconds. This mode is useful for signaling in emergency situations.

Versatile Placement

The lantern is designed for flexible use:

- **Carrying:** Use the sturdy handle for easy portability.
- **Hanging:** The base of the lantern includes an integrated hook, allowing it to be hung upside down for overhead illumination in tents or other spaces.



Figure 3: Lantern with top removed for alternative use



Figure 4: Lantern hanging from its base hook

Product Demonstration Video

Your browser does not support the video tag.

Video 1: A detailed demonstration of the Rayovac Sportsman LED Lantern's features and battery installation.

FEATURES

- **High Brightness:** Emits up to 305 lumens on high mode.
- **Extended Run Time:** Provides up to 70 hours of light on three D-cell alkaline batteries.
- **Water Resistant:** Designed to withstand various weather conditions, including rain.
- **Durable Construction:** Features a tough outer casing for rugged outdoor use.
- **Multiple Light Modes:** High, Energy Saving, and Strobe for diverse lighting needs.

- **Integrated Handle and Hook:** Offers versatile carrying and hanging options.



Figure 5: Lantern in use in an outdoor setting



Figure 6: Lantern illuminating a tent

MAINTENANCE

- **Cleaning:** Wipe the exterior of the lantern with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** For prolonged storage, remove the batteries from the lantern to prevent potential leakage and damage to the unit.
- **Storage:** Store the lantern in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lantern does not turn on.	Incorrect battery installation or depleted batteries.	Ensure batteries are inserted with correct polarity. Verify the base is securely tightened and the alignment arrows are matched. Replace batteries if necessary.

Problem	Possible Cause	Solution
Light is dim or flickers.	Low battery power.	Replace all three D-cell batteries with new ones.
Base is difficult to reattach.	Misalignment of the base and battery compartment.	Ensure the arrow on the battery compartment aligns precisely with the tab on the base before twisting to secure.
Small green LED blinks constantly.	This is a normal feature.	The blinking green LED is a locator light designed to help you find the lantern in the dark. It consumes minimal power and is not a fault.

SPECIFICATIONS

- **Model Number:** SE3DLND
- **Light Source:** LED
- **Lumen Output:** Up to 305 lumens (High Mode)
- **Power Source:** 3 D-cell Alkaline Batteries
- **Run Time:** Up to 70 hours
- **Material:** Plastic
- **Dimensions:** 3.35 x 3.35 x 7.28 inches
- **Weight:** 13.7 ounces
- **Water Resistance:** Yes

WARRANTY AND SUPPORT

The Rayovac Sportsman 3D LED Camping Lantern comes with a lifetime warranty. However, please note that the warranty typically does not cover the LED itself, and any returns for warranty service may require shipping the unit at your expense to the service center. For specific warranty details or support, please refer to the official Rayovac website or contact their customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details.](#)

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question