

[Manuals.plus](#) /

› [Magnavox](#) /

› Magnavox MPD845 8.5" Portable DVD Player User Manual

Magnavox mpd845

Magnavox MPD845 8.5" Portable DVD Player

User Instruction Manual

INTRODUCTION

Thank you for choosing the Magnavox MPD845 Portable DVD Player. This device is designed to provide entertainment on the go, featuring an 8.5-inch screen and versatile power options. This manual will guide you through the setup, operation, and maintenance of your portable DVD player to ensure a satisfying user experience.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package. If any items are missing or damaged, contact customer support.

- Magnavox MPD845 Portable DVD Player
- Remote Control
- AC Power Adapter
- Car Power Adapter
- AV Cable (RCA type)
- Carrying Case



Image: Contents of the Magnavox MPD845 Portable DVD Player package, including the player, remote, power adapters, AV cable, and carrying case.

PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your portable DVD player.



Image: The Magnavox MPD845 Portable DVD Player shown open, displaying its 8.5-inch screen and the disc tray area with control buttons.

Key Components:

- **8.5-inch TFT LCD Screen:** Displays video content.
- **Disc Tray:** For inserting DVDs and CDs.
- **Control Buttons:** Play/Pause, Stop, Skip, Menu, Volume, Power, Open.
- **Built-in Speakers:** For audio output.
- **Headphone Jack:** For private listening.
- **AV Output:** To connect to an external display or audio system.
- **DC Input:** For connecting power adapters.
- **USB Port:** For connecting compatible USB devices (e.g., flash drives for media playback).

SETUP

1. Charging the Battery

Before first use, fully charge the internal lithium battery. Connect the AC power adapter to the DC input port on the player and plug it into a standard wall outlet. The charging indicator light will illuminate. Charging typically takes several hours. The player can be used while charging.

2. Powering On/Off

Press and hold the **POWER** button located on the unit until the screen illuminates. To turn off, press and hold the **POWER** button again until the screen turns off.

3. Using Car Adapter

For in-car use, connect the car power adapter to the DC input port on the player and plug the other end into your vehicle's 12V accessory outlet (cigarette lighter socket).

OPERATING INSTRUCTIONS

1. Inserting a Disc

1. Open the disc tray by pressing the **OPEN** button.
2. Carefully place the DVD or CD onto the spindle with the label side facing up.
3. Gently press down on the center of the disc until it clicks into place.
4. Close the disc tray. The player will automatically begin reading the disc.

2. Basic Playback

- **Play/Pause:** Press the **PLAY/PAUSE** button to start or temporarily stop playback.
- **Stop:** Press the **STOP** button to end playback. Pressing it twice will return to the beginning of the disc.
- **Skip:** Use the **SKIP FORWARD** or **SKIP BACKWARD** buttons to navigate between chapters or tracks.
- **Fast Forward/Rewind:** Press and hold the **SKIP FORWARD** or **SKIP BACKWARD** buttons for fast playback.

3. Volume Control

Adjust the volume using the **VOLUME +** and **VOLUME -** buttons on the unit or the remote control.

4. Using the Remote Control

The included remote control provides full functionality from a distance. Ensure the remote's sensor is pointed towards the player. Insert 2 x AAA batteries (not included) into the remote control before use.

5. Connecting to External Devices

Use the supplied AV cable to connect the player's AV output to the AV input of a television or external audio system. This allows you to view content on a larger screen or listen through external speakers.

MAINTENANCE

Cleaning the Unit

- Wipe the exterior of the player with a soft, dry cloth. For stubborn marks, slightly dampen the cloth with water.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

- To clean the disc lens, use a specialized DVD lens cleaning disc. Do not attempt to clean the lens manually.

Disc Care

- Handle discs by their edges to avoid fingerprints on the playing surface.
- Store discs in their cases when not in use to prevent scratches and dust accumulation.
- Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.

Storage

When not in use for extended periods, store the player in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to fully charge the battery before long-term storage and recharge it every few months to maintain battery health.

TROUBLESHOOTING

If you encounter issues with your Magnavox MPD845, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Player does not power on.	Battery is depleted or power adapter is not connected properly.	Connect the AC adapter and ensure it is plugged into a working outlet. Allow battery to charge.
Disc does not play or 'No Disc' message appears.	Disc is dirty, scratched, or inserted incorrectly. Disc format is not supported.	Clean the disc. Ensure the disc is inserted correctly with the label side up. Verify the disc format (DVD-R, CD, CD-R, CD-RW are supported).
No sound.	Volume is too low or muted. Headphones are connected.	Increase the volume. Disconnect headphones if you want sound from the built-in speakers.
Poor picture quality.	Disc is dirty or damaged. Screen settings are incorrect.	Clean or replace the disc. Adjust screen brightness/contrast settings if available.
Remote control not working.	Batteries are dead or inserted incorrectly. Obstruction between remote and player.	Replace remote batteries. Ensure line of sight between remote and player's sensor.

SPECIFICATIONS

- **Model Number:** MPD845
- **Screen Size:** 8.5 Inches (diagonal)
- **Display Type:** LCD
- **Supported Media Types:** DVD-R, CD, CD-R, CD-RW

- **Connectivity Technology:** USB
- **Power Source:** AC Adapter, Car Adapter, Built-in Lithium Battery
- **Item Weight:** 4.05 pounds
- **Product Dimensions:** 144 x 96 x 48 inches (Note: These dimensions appear unusually large for a portable device and may refer to packaging or shipping dimensions. Please refer to product packaging for accurate device dimensions.)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Magnavox website. Keep your proof of purchase for warranty claims.