

Hasbro 62773

Nerf N-Strike Nite Finder EX-3 Blaster 2-Pack Instruction Manual

Brand: Hasbro | Model: 62773

1. INTRODUCTION AND OVERVIEW

The Nerf N-Strike Nite Finder EX-3 Blaster 2-Pack provides two blasters designed for target practice, especially in low-light conditions. These blasters feature light-beam targeting for enhanced precision.

2. SAFETY GUIDELINES

- **Ages 6+:** This product is intended for users aged 6 years and older.
- **Caution:** Do not aim at eyes or face.
- **Injury Prevention:** To avoid injury, use only darts designed for this product.
- **Modifications:** Do not modify darts or the dart blaster.

3. PACKAGE CONTENTS

Your Nerf N-Strike Nite Finder EX-3 Blaster 2-Pack includes the following items:

- 2 x Nerf N-Strike Nite Finder EX-3 Blasters
- 6 x MICRO DARTS™ Ammo
- 2 x Stand-up Targets



Image: The complete Nerf N-Strike Nite Finder EX-3 Blaster 2-Pack, showing both blasters, darts, and targets in their original packaging.

4. SETUP

4.1. Battery Installation (for Light-Beam Targeting)

Each Nite Finder EX-3 Blaster requires 2 AA batteries (not included) to power its light-beam targeting feature.

1. Locate the battery compartment on the blaster, usually on the side or bottom of the handle.
2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 2 fresh AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

4.2. Loading Darts

The Nite Finder EX-3 Blaster is a single-shot blaster. To load:

1. Insert one MICRO DARTS™ ammo into the front of the barrel until it is seated firmly.



**DON'T FORGET
THE DARTS!**



SWARMFIRE



QUICK 16



SPEEDLOAD 6



SHARP SHOT 6



OR



MAVERICK REV-6



NITE FINDER EX-3



VULCAN



BARRICADE RV-10



STAMPEDE ECS



DEPLOY CS-6



LONGSTRIKE CS-6



RECON CS-6



RAIDER CS-35

*BLASTERS ARE NOT SHOWN TO SCALE.
DART REFILL PACKS AND BLASTERS EACH SOLD SEPARATELY.

©2011 Hasbro.
All Rights Reserved.

Image: A Nerf N-Strike Nite Finder EX-3 Blaster, demonstrating the front-loading dart mechanism and overall design.

5. OPERATING INSTRUCTIONS

5.1. Firing the Blaster

Once a dart is loaded and batteries are installed for the light-beam:

1. **Prime the Blaster:** Pull back the priming handle located at the top of the blaster until it clicks into place.
2. **Activate Light-Beam:** Press the button or switch (if available) to activate the red light-beam for targeting.
3. **Aim:** Line up the red light beam with your target.
4. **Fire:** Pull the trigger to launch the dart.
5. To fire again, repeat steps 1-4.

6. MAINTENANCE

Proper care will ensure the longevity of your blasters:

- **Cleaning:** Wipe the blasters with a damp cloth to remove dust and dirt. Do not submerge in water.
- **Storage:** Store blasters and darts in a cool, dry place away from direct sunlight.
- **Darts:** Keep darts clean and free from damage to ensure optimal performance. Replace worn or damaged darts.
- **Batteries:** Remove batteries if the blaster will not be used for an extended period to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dart does not fire or fires weakly.	Blaster not fully primed; dart improperly loaded; dart is damaged.	Ensure priming handle is pulled back completely until it clicks. Re-insert dart firmly. Use only official, undamaged darts.
Light-beam not working.	Dead or incorrectly installed batteries.	Check battery polarity. Replace with fresh AA batteries.
Darts get stuck in the barrel.	Damaged or non-official darts; foreign object in barrel.	Use only official Nerf darts. Inspect barrel for obstructions and carefully remove if found. Do not modify darts.

8. PRODUCT SPECIFICATIONS

- **Brand:** Hasbro
- **Model Number:** 62773
- **Age Recommendation:** 6+ Years
- **Number of Blasters:** 2
- **Item Weight:** 1.2 Pounds (approximate, for the pack)
- **Item Dimensions (Packaging):** 14.02 x 10.87 x 2.24 inches
- **Batteries Required:** Yes, 2 x AA batteries per blaster (not included)
- **Toy Type:** Blaster Toy Gun
- **Operation Mode:** Manual (for firing mechanism)
- **Power Source:** Battery Powered (for light-beam targeting)
- **Material:** Plastic

9. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts and darts, please visit the official Hasbro website or contact their customer service department. Keep your purchase receipt as proof of purchase.

Hasbro Official Website: www.hasbro.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question