

Oster 006812-001-000

Oster Classic Series 16-Speed Blender User Manual

Model: 006812-001-000

[Introduction](#)

[Safety Instructions](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the safe and efficient use of your Oster Classic Series 16-Speed Blender, Model 006812-001-000. This appliance is designed for various kitchen tasks, including blending, chopping, and pureeing. Please read all instructions carefully before initial use and retain this manual for future reference.

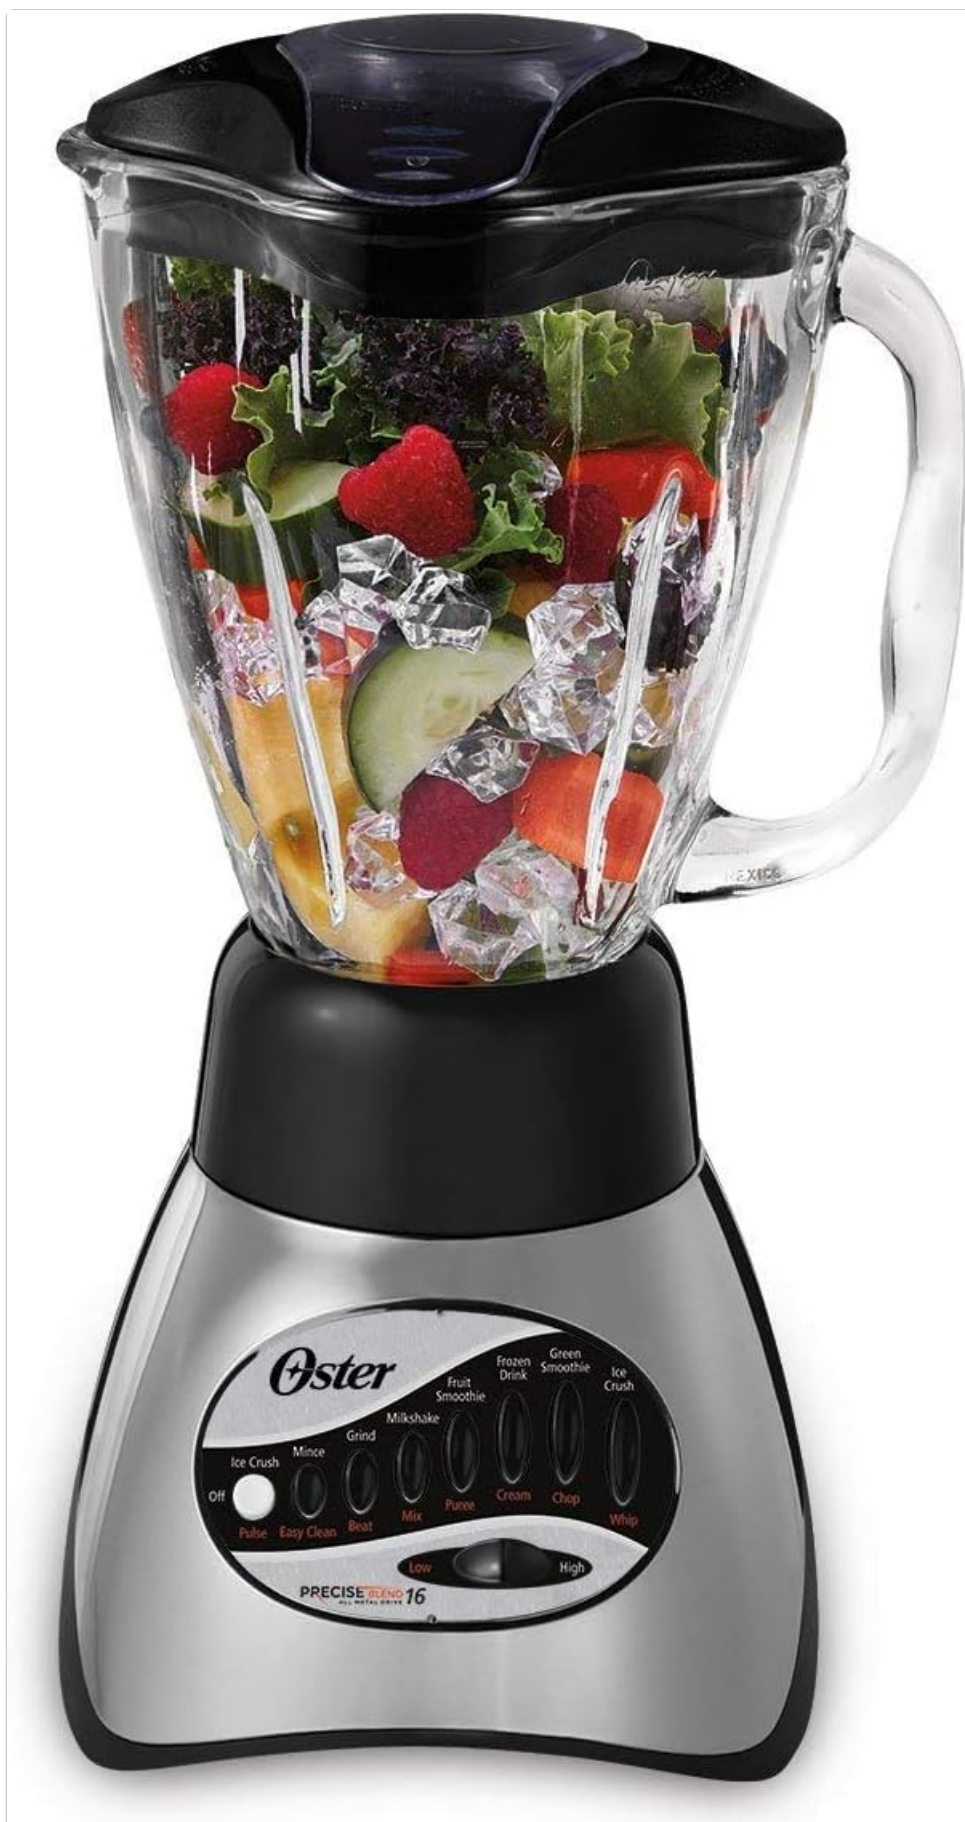


Figure 1: Oster Classic Series 16-Speed Blender with a 5-cup glass jar filled with fruits and vegetables, ready for blending.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the blender.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Keep hands and utensils out of container while blending to prevent the possibility of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle with care.
- Always operate blender with lid in place.
- When blending hot liquids, use caution; do not fill the jar to its maximum capacity.
- This appliance is for household use only.

3. SETUP AND ASSEMBLY

Before first use, wash the blending jar, lid, and blade assembly in warm, soapy water. Rinse thoroughly and dry.

1. **Place the Sealing Gasket:** Position the sealing gasket onto the blade assembly. Ensure it is seated correctly to prevent leaks.
2. **Attach Blade Assembly to Jar:** Insert the blade assembly through the opening at the bottom of the glass jar.
3. **Secure the Bottom Cap:** Screw the bottom cap onto the jar, twisting clockwise until it is securely tightened.
4. **Place Jar on Motor Base:** Invert the assembled jar and place it onto the motor base. Ensure the jar is seated firmly and correctly aligned with the base.
5. **Add Ingredients:** Place your desired ingredients into the glass jar. Do not overfill.
6. **Secure the Lid:** Place the lid firmly onto the glass jar. Ensure the filler cap is also in place.
7. **Connect Power:** Plug the blender into a standard 120-volt electrical outlet.



Oster
MAKE IT FRESH™

3-Year
Satisfaction
Guarantee
10-Year
All Metal Drive
Limited
Warranty

PERFECT FOR:

Smoothies

Sauces

Dips, Soups,
& SO MUCH MORE!

FRESH★EASY™
SERIES

PRECISE BLEND™ 300
BLENDER

CRUSH PRO 4™ BLADE
Super strong for smoothies
that pour chunk-free

ICE CRUSHING POWER
From cubed to crushed
in seconds

PRECISE BLEND™ 16

Figure 2: The Oster blender highlighting its Crush Pro 4" blade and ice crushing capabilities, essential for effective blending.

4. OPERATING INSTRUCTIONS

Your Oster Classic Series Blender features 16 speeds for versatile blending tasks.

4.1 Speed Selection

The control panel offers various speed settings and functions. Select the appropriate speed based on the ingredients and desired consistency.

- **OFF:** Turns the blender off.
- **PULSE:** Provides short bursts of power for controlled chopping or mixing. Release the button to stop.
- **LOW/HIGH:** Continuous blending at low or high speeds.
- **Specific Functions:** Buttons such as Ice Crush, Mince, Grind, Milkshake, Fruit Smoothie, Frozen Drink, Green Smoothie, Mix, Puree, Cream, Chop, Whip are pre-programmed settings for common tasks.

4.2 Blending Tips

- Always add liquids first when blending.
- Cut solid ingredients into small pieces (approximately 1-inch cubes) for optimal blending.
- Do not overload the blender. If the motor strains, reduce the amount of ingredients or add more liquid.
- For thick mixtures, use the PULSE function to help move ingredients around.
- When blending hot liquids, remove the filler cap from the lid to allow steam to escape and start with a low speed. Hold the lid firmly.
- The 700-watt motor and stainless steel blade are designed to crush ice cubes efficiently for smooth results.

5. CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your blender. Always unplug the blender before cleaning.

5.1 Cleaning the Blending Jar and Lid

- The 5-cup Boroclass glass blending jar is dishwasher safe. It can also be washed by hand with warm, soapy water.
- The lid and filler cap are also dishwasher safe (top rack) or can be hand-washed.
- For quick cleaning, add 2 cups of warm water and a drop of dish soap to the jar, secure the lid, and run on a low speed for 30 seconds. Rinse thoroughly.
- Handle the stainless steel blade assembly with care as the blades are sharp.

5.2 Cleaning the Motor Base

- Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
- Do not use abrasive cleaners or scouring pads, as they may scratch the surface.

6. TROUBLESHOOTING

If your blender experiences issues, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Blender does not start.	Not plugged in; power outlet not active; jar not correctly seated.	Ensure the blender is securely plugged into a working outlet. Check that the jar is properly assembled and seated on the motor base.
Motor stalls or struggles.	Overloaded with ingredients; ingredients are too large or too solid; insufficient liquid.	Reduce the amount of ingredients. Cut solid items into smaller pieces. Add more liquid. Use the PULSE function to break up contents.
Leaking from the bottom of the jar.	Blade assembly not tightened; gasket not properly seated or damaged.	Ensure the bottom cap is securely tightened. Check the sealing gasket for proper placement and any signs of damage. Replace if necessary.

Problem	Possible Cause	Solution
Ingredients not blending smoothly.	Not enough liquid; ingredients stuck; incorrect speed setting.	Add more liquid. Use the PULSE function or stop the blender and stir ingredients with a non-metallic utensil. Select a higher speed setting.

7. PRODUCT SPECIFICATIONS

- **Brand:** Oster
- **Model:** 006812-001-000
- **Color:** Black (Brushed Nickel finish on base)
- **Power:** 700 Watts
- **Number of Speeds:** 16
- **Jar Capacity:** 5-Cup (1.2 Liters)
- **Jar Material:** Boroclass Glass (Dishwasher Safe, Shatterproof)
- **Blade Material:** Stainless Steel
- **Drive System:** All-Metal Drive
- **Product Dimensions:** 9"D x 8"W x 14.25"H
- **Item Weight:** 6.2 pounds
- **Voltage:** 120 Volts
- **Material Type Free:** BPA Free
- **Included Components:** One Blender Base, One Blender Jar, One Blender Lid
- **UPC:** 034264415652



Figure 3: Illustration of the Duralast All Metal Drive system, emphasizing its durability and 10-year warranty on the metal drive components.

8. WARRANTY AND SUPPORT

Your Oster Classic Series 16-Speed Blender comes with a limited warranty.

- **All-Metal Drive Warranty:** The All-Metal Drive system is backed by a 10-year limited warranty, ensuring






long-lasting durability.


- **General Warranty:** Refer to the official user guide for complete warranty details and terms.

For further assistance, product registration, or to view the full user guide, please visit the official Oster website or refer to the provided documentation.

[Download Official User Guide \(PDF\)](#)

Related Documents - 006812-001-000

	<p>Oster BLSTDG Series Blender User Manual and Recipes</p> <p>Comprehensive user manual for the Oster BLSTDG Series Blender, covering important safeguards, features, operating instructions, cleaning, storage, recipes, and warranty information.</p>
	<p>Osterizer Blender Instruction Manual: Cube and Slope Models</p> <p>Comprehensive instruction booklet for Osterizer Cube and Slope blenders, detailing safety guidelines, parts, assembly, operation for various speed models, cleaning, and warranty information.</p>
	<p>Oster Pro Series Blender with High Performance Motor User Manual</p> <p>User manual for the Oster Pro Series Blender with High Performance Motor (Model BLSTEPH), providing detailed instructions on safety, operation, assembly, cleaning, maintenance, and warranty information.</p>
	<p>Oster Easy-to-Clean Blender with Dishwasher-Safe Glass Jar User Manual</p> <p>User manual for the Oster Easy-to-Clean Blender with Dishwasher-Safe Glass Jar (BLSTBCG Series), covering safety, operation, cleaning, and recipes. Visit www.oster.com for more information.</p>
	<p>Oster Texture Select Master Series Blender User Manual</p> <p>User manual for the Oster Texture Select Master Series Blender, providing instructions on operation, care, cleaning, troubleshooting, and recipes. Learn how to use pre-programmed settings and manual controls for optimal blending.</p>

	<p>Oster Ice Shaving Blender User Manual (Models BLSTET-B, BLSTET-C)</p> <p>User manual for the Oster Ice Shaving Blender, models BLSTET-B and BLSTET-C series.</p> <p>Provides essential safety instructions, detailed features, operation guides for automatic and manual drink making, cleaning and maintenance procedures, and warranty information.</p>
--	--