

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [HP](#) /
- › [HP LaserJet P2035 Laser Printer Instruction Manual](#)

HP CE461A

HP LaserJet P2035 Laser Printer Instruction Manual

Model: CE461A

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your HP LaserJet P2035 Laser Printer. The HP LaserJet P2035 is a monochrome laser printer designed for efficient and reliable printing in office environments. This renewed product has been thoroughly tested and certified to function like new, with necessary parts and consumables replaced to ensure optimal performance.

Please read this manual carefully before using the printer to ensure proper installation and to maximize its lifespan.

SETUP

- Unpacking and Inspection:** Carefully remove the printer from its packaging. Verify that all included components are present: the HP LaserJet P2035 printer unit and the power cord. *Note: Toner cartridge is not included and must be purchased separately.*
- Placement:** Place the printer on a stable, flat surface with adequate ventilation. Ensure there is enough space around the printer for paper input and output, and for accessing maintenance areas.
- Connect Power:** Connect the provided power cord to the printer's power input and then to a grounded electrical outlet.

- Install Toner Cartridge:**

The toner cartridge is installed through the front access panel. Press the release button on the front of the printer to open the access panel. Carefully insert the black toner cartridge into its designated slot until it clicks into place. Close the access panel securely.



Image: Front view of the HP LaserJet P2035 Laser Printer, showing its compact design and the main paper output tray.

5. Load Paper:

Open the paper input tray located at the bottom front of the printer. Adjust the paper guides to fit the size of your paper (e.g., Letter). Load a stack of paper into the tray, ensuring it is flat and aligned. Close the paper tray.



Image: Side view of the HP LaserJet P2035 Laser Printer, illustrating its dimensions (approximately 20 inches deep, 20 inches wide, and 16 inches high).

6. **Install Drivers:** Insert the provided CD-ROM into your computer's optical drive and follow the on-screen instructions to install the printer drivers. If you do not have an optical drive, visit the official HP support website to download the latest drivers for the LaserJet P2035.

OPERATING INSTRUCTIONS

- **Power On:** Press the power button, typically located on the front or side of the printer, to turn it on. Wait for the printer to initialize.
- **Printing a Document:** From your computer, open the document you wish to print. Select "Print" from the application's menu. Choose the "HP LaserJet P2035" from the list of available printers. Adjust print settings as needed (e.g., number of copies, paper size). Click "Print".
- **Duplex Printing (Two-Sided):** The HP LaserJet P2035 supports automatic duplex printing. To enable this feature, select the duplex or two-sided printing option within your print driver settings before sending the print job.
- **Paper Output:** Printed pages will exit from the top output tray of the printer. Ensure the output tray is clear to prevent paper jams.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your printer. This renewed printer has had key components like pickup rollers, separation rollers, and the fuser film replaced to minimize common issues.

- **Toner Cartridge Replacement:** When the print quality degrades or the printer indicates a low toner level, it's time to replace the toner cartridge. Open the front access panel (as described in the Setup section), remove the old cartridge, and insert a new one.

- **Clearing Paper Jams:**

If a paper jam occurs, the printer's control panel may indicate the location. The most common access points for clearing jams are the front access panel and the rear access panel. Gently pull out any jammed paper in the direction of the paper path. Avoid tearing the paper, as small pieces can cause further jams.

Your browser does not support the video tag.

Video: A demonstration of accessing the front panel and paper tray for maintenance on an HP LaserJet printer. This video illustrates how to open the front flap to clear potential paper jams and how to access the toner cartridge for replacement. It also shows the paper feed tray at the bottom front of the printer.

- **Cleaning:** Periodically wipe the exterior of the printer with a soft, damp, lint-free cloth. Do not use abrasive cleaners or solvents. For internal cleaning, refer to the detailed instructions in the full user manual (if available) or consult HP support.

TROUBLESHOOTING

This section addresses common issues you might encounter with your HP LaserJet P2035 printer.

- **Printer Not Responding:**
 - Ensure the printer is powered on and properly connected to the computer via USB.
 - Check if the power cord is securely plugged into both the printer and the wall outlet.
 - Restart both the printer and your computer.
 - Verify that the correct printer driver is installed and selected.
- **Paper Jams:**
 - Refer to the "Clearing Paper Jams" sub-section under Maintenance for detailed steps.
 - Ensure paper is loaded correctly and not overfilled in the tray.
 - Use paper that meets the printer's specifications.
- **Poor Print Quality:**
 - Check the toner cartridge level and replace if low.
 - Ensure the toner cartridge is properly installed.
 - Perform a print quality diagnostic test from your computer's printer settings.
 - Clean the printer's internal components if recommended by HP support.
- **Printer Offline:**
 - In your computer's printer settings, ensure the printer is not set to "Use Printer Offline".
 - Check the USB cable connection between the printer and the computer.

SPECIFICATIONS

Feature	Detail
Brand	HP

Model Name	CE461A
Printing Technology	Monochrome Laser
Max Print Speed (Monochrome)	30 ppm
Max Print Resolution (Monochrome)	600 x 600 dpi
Duplex Printing	Automatic
Max Input Sheet Capacity	300 sheets
Maximum Media Size	Letter
Print Media Types	Card stock, Envelopes, Fabric, Labels, Paper (plain), Transparencies
Connectivity Technology	Wired (USB)
Hardware Interface	USB
Memory Storage Capacity	16 MB
Power Consumption	550 Watts (On-mode)
Product Dimensions	14.49 x 14.37 x 10.55 inches
Item Weight	22 pounds
UPC	883585946228

WARRANTY AND SUPPORT

This renewed HP LaserJet P2035 printer comes with **aminimum 90-day warranty**. For warranty claims or technical support, please refer to the support flyer included with your product or contact the seller directly. Additional support resources may be available on the official HP support website.