

## Universal Security Instruments SS-770-3P

# Universal Security Instruments Battery Powered Ionization Smoke and Fire Alarm User Manual

Model: SS-770-3P (3-Pack)

## 1. INTRODUCTION

---

This manual provides essential information for the proper installation, operation, and maintenance of your Universal Security Instruments SS-770-3P Battery Powered Ionization Smoke and Fire Alarm. This 3-pack of alarms is designed to provide early warning of smoke and fire, enhancing the safety of your home. Please read these instructions thoroughly before installation and retain this manual for future reference.

## 2. IMPORTANT SAFETY INFORMATION

---

**WARNING:** This smoke alarm is designed to detect smoke particles produced by combustion. It will not sense heat, flame, or carbon monoxide.

- Never paint the smoke alarm. Paint can clog the sensing chambers and prevent the alarm from operating correctly.
- Do not install in areas with high humidity, extreme temperatures, or excessive dust.
- Ensure the battery is properly installed and not dead. The alarm will not operate if the battery is dead, disconnected, or improperly installed.
- Test the alarm weekly to ensure proper function.
- Familiarize yourself with the sound of the alarm and practice escape routes with all family members.

## 3. PRODUCT FEATURES

---

- 9-Volt Battery Powered Ionization Smoke and Fire Alarm (3-Pack)
- User-Friendly Test Button for easy testing
- Loud 85dB Alarm to alert occupants
- Mounting Hardware Included for convenient installation
- Compact Micro Profile Size for discreet placement
- Low battery notification feature

## 4. SETUP AND INSTALLATION

---

The SS-770-3P smoke alarms are designed for easy installation. Each unit comes with the necessary mounting hardware.

### 4.1 Battery Installation

Each smoke alarm requires one 9-volt battery (included).

1. Remove the mounting bracket from the back of the alarm by twisting counter-clockwise.
2. Locate the battery compartment.
3. Connect the 9-volt battery to the battery clip, ensuring correct polarity (+ to + and - to -).
4. Place the battery into the compartment.
5. Reattach the mounting bracket.

### 4.2 Mounting Location

For optimal protection, install smoke alarms in every sleeping room and on every level of your home, including the basement.

### 4.3 Mounting the Alarm

Use the provided mounting hardware (screws and anchors) to secure the mounting bracket to the ceiling or wall. Once the bracket is secure, align the alarm with the bracket and twist clockwise until it locks into place.



Image: Three Universal Security Instruments SS-770-3P smoke alarms, showing their compact design and the "DO NOT PAINT" warning on the front. These alarms are lightweight and blend well with white walls.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Testing the Alarm

Test your smoke alarm weekly.

- Press and hold the test button located on the front of the alarm.
- The alarm will sound a loud, piercing tone (approximately 85dB).
- Release the button. The alarm should stop sounding.
- If the alarm does not sound during testing, refer to the Troubleshooting section.

## 5.2 Silence Feature

In case of a nuisance alarm (e.g., from cooking smoke), you can temporarily silence the alarm.

- Press the test/silence button once.
- The alarm will enter a temporary silence mode for several minutes.
- If the smoke is still present after the silence period, the alarm will reactivate.

## 5.3 Low Battery Warning

The alarm will chirp approximately once every 30-40 seconds to indicate a low battery. Replace the battery immediately when this occurs.

# 6. MAINTENANCE

---

## 6.1 Battery Replacement

Replace the 9-volt battery at least once a year, or immediately when the low battery warning chirp sounds. Follow the battery installation steps in Section 4.1.

## 6.2 Cleaning Your Smoke Alarm

Clean your smoke alarm at least once a month to remove dust and debris.

- Gently vacuum the exterior of the alarm using the soft brush attachment of your vacuum cleaner.
- Do not use cleaning solvents or spray directly onto the alarm.

# 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Alarm does not sound during test.	Dead, disconnected, or improperly installed battery.	Check battery connection and polarity. Replace battery if necessary.
Alarm chirps every 30-40 seconds.	Low battery.	Replace the 9-volt battery immediately.
Alarm sounds frequently without apparent smoke.	Dust or debris in the sensing chamber; high humidity; cooking fumes.	Clean the alarm (see Section 6.2). Relocate if nuisance alarms persist due to environmental factors. Use silence feature for cooking fumes.
Alarm sounds continuously.	Presence of smoke/fire.	<b>EVACUATE IMMEDIATELY.</b> Call emergency services.

# 8. SPECIFICATIONS

---

Specification	Detail
Model Number	SS-770-3P
Sensor Type	Ionization
Power Source	9-Volt Battery (included)

Specification	Detail
Alarm Loudness	85dB at 10 feet
Color	WHITE
Material	ABS, Aluminum
Item Weight	Approximately 1 Pound per unit
Average Battery Life	4380 Hours (approx. 6 months, varies with usage)
Certification	SMOKE AND FIRE ALARM
UPC	042741337700

## 9. WARRANTY AND SUPPORT

---

Specific warranty details for the Universal Security Instruments SS-770-3P Smoke and Fire Alarm are not provided within this manual. For information regarding warranty coverage, technical support, or customer service, please refer to the original product packaging, the manufacturer's official website, or contact Universal Security Instruments directly.

*Universal Security Instruments is committed to providing reliable home safety products.*