

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER BLC12650H Cyclone 12-Speed Blender Instruction Manual](#)

BLACK+DECKER BLC12650H

BLACK+DECKER BLC12650H Cyclone 12-Speed Blender

Instruction Manual

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions before using the appliance.
- To protect against electrical hazards, do not immerse the blender base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Keep hands and utensils out of container while blending to prevent the possibility of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle with care.
- Always operate blender with lid in place.
- Do not blend hot liquids.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

Familiarize yourself with the components of your BLACK+DECKER Cyclone 12-Speed Blender.



Image: The BLACK+DECKER BLC12650H Cyclone 12-Speed Blender, featuring its main components: the motor base, the 48-ounce glass blending jar, and the lid with a removable measuring cup insert. The blender is white with a clear glass jar.

1. **Measuring Cup Insert:** Removable insert in the lid for adding ingredients during blending.
2. **Lid:** Secures to the blending jar to prevent spills during operation.

3. **48-oz Glass Blending Jar:** The main container for ingredients, designed for durability.
4. **Blade Assembly:** Multi-level stainless steel blades for efficient blending.
5. **Blender Base:** Houses the motor and control panel.
6. **Control Panel:** Features 12 speed settings and a pulse function.

SETUP

Before first use, follow these steps to prepare your blender:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Wash Parts:** Wash the blending jar, lid, and blade assembly in warm, soapy water. Rinse thoroughly and dry. The lid is dishwasher safe. The blender base should be wiped with a damp cloth.
3. **Assemble Blade:** Ensure the blade assembly is securely attached to the bottom of the glass blending jar.
4. **Place Jar on Base:** Place the assembled blending jar onto the blender base, ensuring it is seated correctly and locked into position if applicable.
5. **Position:** Place the blender on a stable, flat, and dry surface.

OPERATING INSTRUCTIONS

Follow these steps for safe and effective blending:

1. **Add Ingredients:** Place ingredients into the glass blending jar. For best results, add liquids first, then soft solids, and finally ice or frozen ingredients. Do not fill above the 48-ounce maximum fill line.
2. **Secure Lid:** Place the lid firmly onto the blending jar. Ensure the measuring cup insert is in place.
3. **Place Jar:** Position the blending jar onto the motor base.
4. **Plug In:** Plug the blender into a standard electrical outlet.
5. **Select Speed:** Choose your desired speed setting from the 12 available options. For short bursts of power, use the Pulse function.
6. **Blend:** Press the selected speed button or hold the Pulse button to begin blending. Blend until desired consistency is achieved.
7. **Stop:** Release the Pulse button or press the OFF button to stop blending.
8. **Unplug:** Always unplug the blender from the outlet after use and before removing the jar or cleaning.

Tips for Blending:

- If ingredients stick to the sides, turn off the blender, remove the lid, and use a spatula to push ingredients towards the blades. Replace the lid before continuing.
- For thicker mixtures, use the Pulse function to break down ingredients gradually.
- Do not operate the blender continuously for more than 60 seconds at a time. Allow a short rest period between cycles.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and performance of your blender.

1. **Unplug:** Always unplug the blender before cleaning.
2. **Disassemble:** Remove the blending jar from the base. Carefully detach the blade assembly from the bottom of the jar. Remove the lid and measuring cup insert.
3. **Wash Jar and Lid:** The glass blending jar, lid, and measuring cup insert are dishwasher safe (top rack recommended) or can be washed by hand in warm, soapy water. Rinse thoroughly.
4. **Wash Blade Assembly:** Carefully wash the blade assembly by hand in warm, soapy water. Use a brush to clean

around the blades. *Caution: Blades are sharp.*

5. **Clean Base:** Wipe the blender base with a damp cloth. Do not immerse the base in water or any other liquid.
6. **Dry:** Ensure all parts are completely dry before reassembling or storing.
7. **Storage:** Store the blender assembled or disassembled in a dry place. The cord can be stored neatly around the base.

TROUBLESHOOTING

If you encounter issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet not working; jar not properly seated.	Ensure blender is securely plugged into a working outlet. Check if the blending jar is correctly placed on the base.
Ingredients are not blending smoothly.	Too many ingredients; not enough liquid; ingredients are too large.	Reduce the amount of ingredients. Add more liquid. Cut ingredients into smaller pieces. Use the Pulse function to break down larger items.
Blender leaks from the bottom of the jar.	Blade assembly not tightened; gasket missing or damaged.	Ensure the blade assembly is securely tightened onto the jar. Check if the gasket is properly in place and not damaged.
Motor smells or overheats.	Overloading; continuous operation for too long.	Reduce the load. Do not operate continuously for more than 60 seconds. Allow the motor to cool down for at least 10-15 minutes before resuming use.

SPECIFICATIONS

Key technical details for the BLACK+DECKER BLC12650H Cyclone 12-Speed Blender:

Brand: BLACK+DECKER

Model: BLC12650H

Power: 650 Watts (Peak)

Capacity: 48 Fluid Ounces (Glass Jar)

Number of Speeds: 12 + Pulse Function

Blade Material: Stainless Steel

Dimensions (L x W x H): 11.25 x 7.88 x 13 inches

Item Weight: 1 pounds

Power Source: Corded Electric

UPC: 050875535640

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official BLACK+DECKER website. Do not attempt to repair the appliance yourself. Any servicing other than cleaning should be performed by an authorized service representative.

