

## Walker 44066

# Walker 44066 Exhaust Pipe Instruction Manual

Model: 44066 | Brand: Walker

## 1. PRODUCT OVERVIEW

The Walker 44066 Exhaust Pipe is engineered for durability and precise fitment, ensuring a straightforward installation process. Constructed from aluminized steel, this premium pipe is designed to inhibit corrosion and promote long-lasting performance within your vehicle's exhaust system.

### What's in the Box:

- 1 x Walker 44066 Exhaust Pipe

## 2. VEHICLE COMPATIBILITY

This exhaust pipe is specifically designed for the following Toyota Pickup models:

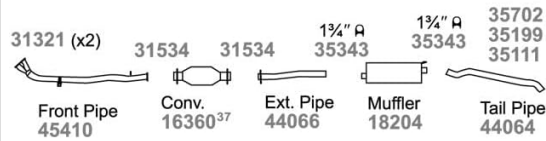
- 1989-1995 Toyota Pickup

It is crucial to verify compatibility with your specific vehicle before installation. Please refer to your vehicle's year, make, model, engine, and trim to ensure proper fitment. This pipe is ideal for weld or clamp installations.

# TOYOTA

Pickup - 4 Cyl.

1995-89 4 CYL. PICKUP w/2.4L ENG., 4 W.D.  
w/XTRA CAB - 121" W.B.  
(14222) FEDERAL EMISSIONS



For 16360: Univ. Conv. 15036#

For 18204: Univ. SoundFX 17864# or 18135<sup>566</sup>

31321 Gskt.	31534 Gskt.	35111 Insl.	35199 Hngr.	35702 Hngr.										

FEDERAL/EPA CONVERTERS ARE NOT LEGAL FOR SALE IN THE STATE OF CALIFORNIA.  
RESTRICTIONS MAY APPLY IN OTHER STATES. CONSULT YOUR STATE'S REGULATION PERTAINING  
TO AFTERMARKET REPLACEMENT CONVERTERS PRIOR TO INSTALLATION.

# Modifications and/or additional parts required.  
37 Fits All Emissions Vehicles.

566 Requires 35209 Hanger.

**Figure 2.1:** Exhaust system component diagram for Toyota Pickup (1995-89 4 Cyl. Pickup w/2.4L Eng., 4 W.D. w/Xtra Cab - 121" W.B. Federal Emissions). This diagram illustrates the placement of various exhaust components, including the extension pipe (Ext. Pipe 44066).

## 3. INSTALLATION INSTRUCTIONS

### 3.1 General Guidelines

- Always ensure the vehicle is cool before beginning work on the exhaust system.
- Use appropriate safety gear, including eye protection and gloves.
- Support the vehicle securely on jack stands or a lift. Never work under a vehicle supported only by a jack.
- Apply penetrating oil to rusted fasteners prior to removal to ease the process.
- Ensure proper ventilation if working in an enclosed space.

### 3.2 Step-by-Step Installation

1. **Preparation:** Locate the existing exhaust pipe section that needs replacement. Identify all connection points, hangers, and clamps.
2. **Removal of Old Pipe:** Carefully remove the old exhaust pipe. This may involve unbolting flanges, cutting pipes, or loosening clamps. Be mindful of any sensors or wires attached to the exhaust system.
3. **Fitment Check:** Before final installation, dry-fit the new Walker 44066 exhaust pipe to ensure it aligns correctly with the existing exhaust components and hangers. The pipe is manufactured with precision bends and OE-style routings for a direct fit.
4. **Installation:** Secure the new pipe using appropriate clamps or by welding, depending on your preferred installation method. Ensure all connections are tight and leak-free.
5. **Secure Hangers:** Attach the pipe to all factory hangers to ensure proper support and prevent rattling.
6. **Final Inspection:** After installation, start the vehicle and check for any exhaust leaks. Listen for unusual noises or vibrations.



**Figure 3.1:** The Walker 44066 Exhaust Pipe, designed for direct-fit installation.

## 4. MAINTENANCE

To ensure the longevity and optimal performance of your Walker exhaust pipe, regular inspection is recommended. Periodically check the following:

- **Corrosion:** Inspect the pipe for signs of rust or corrosion, especially in areas exposed to road salt or moisture.
- **Leaks:** Check all connections (welds, clamps, flanges) for exhaust leaks, which can indicate loose fittings or cracks.
- **Hangers:** Ensure all exhaust hangers are intact and securely holding the pipe in place to prevent excessive movement and rattling.
- **Damage:** Look for any physical damage, such as dents or cracks, which could compromise the pipe's integrity.

Addressing minor issues promptly can prevent more significant problems and extend the life of your exhaust system.

## 5. TROUBLESHOOTING

This section addresses common issues you might encounter with an exhaust pipe.

### 5.1 Common Issues and Solutions

- **Loud Exhaust Noise:** This often indicates an exhaust leak. Inspect all connections and the pipe itself for cracks or holes. Tighten clamps or repair/replace damaged sections.
- **Rattling or Vibrations:** This can be caused by loose or broken exhaust hangers, or the exhaust pipe making contact with the vehicle's undercarriage. Check all hangers and adjust the pipe's position if necessary.
- **Exhaust Fumes in Cabin:** This is a serious issue and requires immediate attention. It typically points to a significant exhaust leak. Do not drive the vehicle until the leak is identified and repaired.

If you are unable to resolve an issue, it is recommended to consult a qualified automotive technician.

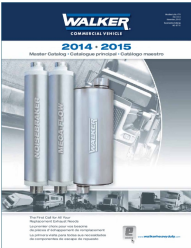
## 6. PRODUCT SPECIFICATIONS

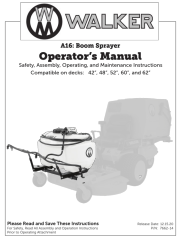
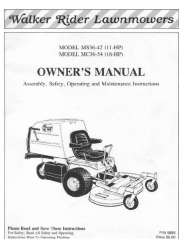

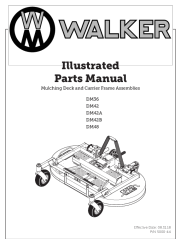

Feature	Specification
Brand	Walker
Model Number	44066
Installation Type	Clamp-On
Material	Alloy Steel (Aluminized)
Item Weight	3.49 pounds
Product Dimensions	42 x 4 x 4 inches
Country of Origin	USA
UPC	086387440660
Global Trade Identification Number	00086387440660
Vehicle Service Type	Car
Shape	Round

## 7. WARRANTY AND SUPPORT

Walker products are manufactured to high standards and typically come with a manufacturer's warranty against defects in materials and workmanship. For specific warranty details, including coverage period and terms, please refer to the documentation provided with your purchase or visit the official Walker website. For technical assistance, installation queries, or warranty claims, please contact Walker customer support directly. Contact information can usually be found on the manufacturer's website or product packaging.

### Related Documents - 44066

	<p><a href="#">Walker Commercial Vehicle 2014-2015 Master Catalog</a></p> <p>Comprehensive catalog from Walker featuring exhaust system components for commercial vehicles, including mufflers, flex pipes, and accessories. Covers heavy-duty, medium-duty trucks, buses, and agricultural applications with model identification and technical specifications.</p>
---	--

 <p>The cover of the Walker A16 Boom Sprayer Operator's Manual features the Walker logo at the top. Below it, the title 'A16 Boom Sprayer Operator's Manual' is prominently displayed. Underneath the title, it lists 'Safety, Assembly, Operating, and Maintenance Instructions' and 'Compatible on decks: 42", 48", 52", 60", and 62"'. A photograph of the boom sprayer is shown in the center. At the bottom, there is a small note: 'Please Read and Save These Instructions'.</p>	<p><a href="#">Walker A16 Boom Sprayer Operator's Manual: Safety, Assembly, Operation, Maintenance</a></p> <p>Comprehensive operator's manual for the Walker A16 Boom Sprayer, covering safety instructions, assembly procedures, operating guidelines, maintenance tips, troubleshooting, and parts lists. Compatible with various Walker mower decks.</p>
 <p>The cover of the Walker Rider Lawnmowers Owner's Manual has the title 'Walker Rider Lawnmowers' at the top. Below it, it specifies 'MODEL MS36-42 (11-HP)' and 'MODEL MC36-54 (16-HP)'. The main title is 'OWNER'S MANUAL', followed by 'Assembly, Safety, Operating and Maintenance Instructions'. A photograph of a riding lawn mower is in the center. At the bottom, it says 'Please Read and Save These Instructions'.</p>	<p><a href="#">Walker Rider Lawnmower Owner's Manual MS36-42 MC36-54</a></p> <p>Owner's manual for Walker Rider Lawnmower models MS36-42 (11-HP) and MC36-54 (16-HP), detailing assembly, safety, operation, and maintenance. Includes specifications and troubleshooting.</p>
 <p>The cover of the Walker C19 Illustrated Parts Manual features the Walker logo at the top. Below it, the title 'Illustrated Parts Manual' is shown, followed by 'C19'. A photograph of the C19 riding mower is in the center. At the bottom, it says 'Please Read and Save These Instructions'.</p>	<p><a href="#">Walker C19 Illustrated Parts Manual</a></p> <p>Detailed illustrated parts manual for the Walker C19 riding mower, providing comprehensive lists and diagrams for all components, including chassis, engine, drive systems, and accessories. Essential for maintenance and repair.</p>
 <p>The cover of the Walker Illustrated Parts Manual for mulching decks and carrier frames features the Walker logo at the top. Below it, the title 'Illustrated Parts Manual' is shown, followed by 'Mulching Decks and Carrier Frames'. A list of models is provided: DM36, DM42, DM42A, DM42B, and DM48. A photograph of a mulching deck assembly is in the center. At the bottom, it says 'Please Read and Save These Instructions'.</p>	<p><a href="#">Walker Illustrated Parts Manual for DM36, DM42, DM42A, DM42B, DM48 Mulching Decks and Carrier Frames</a></p> <p>This illustrated parts manual provides detailed information for Walker DM36, DM42, DM42A, DM42B, and DM48 mulching decks and carrier frame assemblies. It includes part numbers, descriptions, diagrams, and assembly instructions to help identify and order replacement components for Walker lawn mowers.</p>
 <p>The cover of the Walker T23 Illustrated Parts Manual features the Walker logo at the top. Below it, the title 'Illustrated Parts Manual' is shown, followed by 'T23'. A photograph of the T23 commercial rider mower is in the center. At the bottom, it says 'Please Read and Save These Instructions'.</p>	<p><a href="#">Walker T23 Illustrated Parts Manual</a></p> <p>Comprehensive illustrated parts manual for the Walker T23 commercial rider mower. Includes detailed diagrams, part numbers, and assembly information for maintenance and repair of all major components, including the Rehlko/Kohler engine.</p>