

[Manuals.plus](#) /

› [Rabbit](#) /

› Rabbit Original Vertical Lever Corkscrew Wine Opener Instruction Manual

Rabbit R1-06206

Rabbit Original Vertical Lever Corkscrew Wine Opener

INSTRUCTION MANUAL

Introduction

The Rabbit Original Vertical Lever Corkscrew Wine Opener is designed for effortless and quick uncorking of wine bottles. Its innovative lever mechanism and ergonomic design ensure a smooth and efficient wine opening experience. This manual provides detailed instructions for the proper use, care, and maintenance of your wine opener.



Image: The Rabbit Original Vertical Lever Corkscrew Wine Opener in Candy Apple Red, showcasing its sleek design.

What's Included

Your Rabbit Original Vertical Lever Corkscrew Wine Opener package includes the following components:

- **Rabbit Original Vertical Lever Corkscrew Wine Opener:** The main device for uncorking wine bottles.
- **Foil Cutter:** A tool with stainless steel blades for cleanly removing wine bottle foil.
- **Extra Non-Stick Coated Spiral:** A replacement corkscrew spiral for extended use.

Foil cutter & extra spiral included



Image: The Rabbit wine opener displayed with its accompanying foil cutter and an extra corkscrew spiral.

Setup

The Rabbit Original Vertical Lever Corkscrew Wine Opener requires minimal setup. Ensure all components are present and free from damage before first use.

1. **Unpack:** Carefully remove the wine opener, foil cutter, and extra spiral from their packaging.
2. **Inspect:** Check all parts for any signs of damage or manufacturing defects.
3. **Familiarize:** Before operating, familiarize yourself with the lever mechanism and the foil cutter.

1. Removing the Foil

1. Take the included **Foil Cutter**.
2. Place the foil cutter over the top of the wine bottle, ensuring it grips the foil securely.
3. With a firm grip, **squeeze** the foil cutter and **rotate** it around the bottle's neck a few times until the foil is cleanly cut.
4. Remove the foil cutter and discard the separated foil.

2. Opening the Wine Bottle

1. Ensure the lever of the wine opener is in the **fully raised position**.
2. Place the wine opener firmly over the neck of the wine bottle, ensuring the corkscrew is centered over the cork. The rubberized grips should securely hold the bottle neck.
3. With one hand holding the wine opener firmly on the bottle, use your other hand to **push the lever down** smoothly and completely. The corkscrew will automatically insert into the cork.
4. Once the lever is fully down, **pull the lever back up** smoothly and completely. The cork will be extracted from the bottle and remain on the corkscrew.

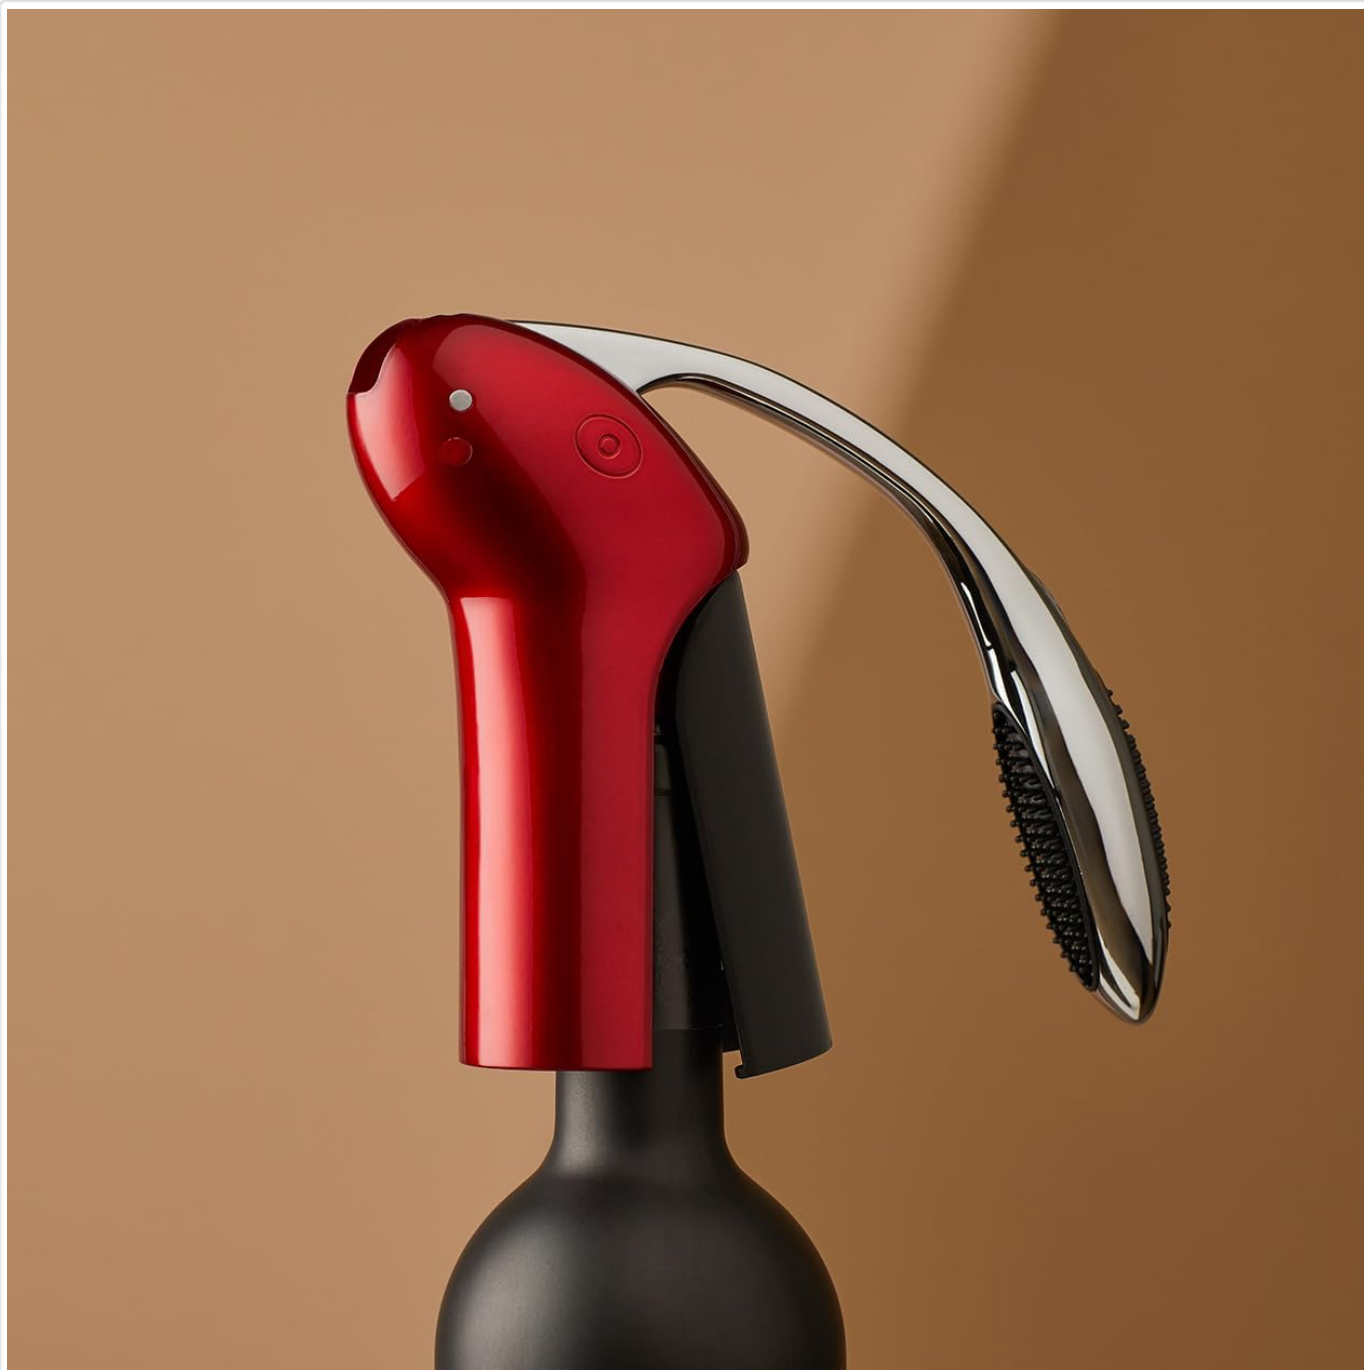


Image: The Rabbit wine opener securely placed over the neck of a wine bottle, ready for operation.

Ergonomic handles allow for comfort and control



Image: A close-up view highlighting the ergonomic handles of the Rabbit wine opener, designed for comfortable and controlled leverage.

3. Releasing the Cork

1. Once the cork is extracted and on the corkscrew, **release the grip** on the bottle.
2. Hold the wine opener with the cork still attached.
3. To release the cork, **push the lever down** again, then **pull it back up**. The cork will automatically detach from the spiral.
4. Discard the cork.

Maintenance

- **Cleaning:** Wipe the wine opener and foil cutter with a damp cloth after each use. Do not immerse the entire unit in water.
- **Drying:** Ensure all parts are thoroughly dried before storage to prevent rust or damage.
- **Storage:** Store the wine opener and its accessories in a dry place, preferably in its original packaging or a designated drawer, to protect it from dust and damage.
- **Spiral Replacement:** If the corkscrew spiral becomes dull or damaged, replace it with the provided extra spiral. To replace, consult the specific instructions for spiral removal and insertion (usually involves unscrewing a collar or pin).

Troubleshooting

Problem	Possible Cause	Solution
Cork not extracting fully.	Insufficient force applied to the lever; corkscrew not fully inserted.	Ensure the lever is pushed down completely and pulled up with firm, continuous motion. Verify the corkscrew is centered.
Cork stuck on the spiral after extraction.	Cork not fully released from the spiral.	Push the lever down and pull it back up firmly to eject the cork. Repeat if necessary.
Foil not cutting cleanly.	Foil cutter not properly positioned or blades are dull.	Ensure the foil cutter is pressed firmly against the bottle and rotated completely. If blades are dull, consider replacing the foil cutter.
Difficulty pushing or pulling the lever.	Corkscrew may be dry or mechanism needs lubrication.	Apply a small amount of food-grade lubricant to the moving parts of the lever mechanism if resistance is consistent.

Specifications

Feature	Detail
Model Number	R1-06206
Brand	Rabbit
Color	Candy Apple Red

Feature	Detail
Material	Metal
Finish Type	Polished
Item Weight	1 Pounds
Product Dimensions	2.5"L x 5.5"W
Manufacturer	Lifetime Brands Inc.
UPC	022578000329

Pulls a cork in 3 seconds



Image: A visual representation of the Rabbit wine opener's dimensions, indicating its height and width.

Warranty and Support

The Rabbit Original Vertical Lever Corkscrew Wine Opener is designed for durability and performance, independently tested for 20,000 cork pulls. For specific warranty information or support inquiries, please refer to the manufacturer's official website or contact Lifetime Brands Inc. directly.

Manufacturer: Lifetime Brands Inc.

For further assistance, please visit the [Rabbit Store on Amazon](#).

© 2023 Rabbit. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question