

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Wik](#) /

› **Wik 9531STA-W Brita Filter Kettle User Manual**

Wik 9531STA-W

Wik 9531STA-W Brita Filter Kettle User Manual

Model: 9531STA-W

INTRODUCTION

Thank you for choosing the Wik 9531STA-W Brita Filter Kettle. This innovative appliance combines the functionality of an electric kettle with an integrated Brita water filter, providing filtered water for your hot beverages. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new kettle.

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the voltage indicated on the appliance corresponds to your mains voltage before connecting.
- Do not immerse the kettle, power base, cord, or plug in water or any other liquid.
- Always place the kettle on a firm, flat, heat-resistant surface, away from the edge of the worktop.
- Do not operate the kettle if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Keep the appliance and its cord out of reach of children.
- Do not fill the kettle above the maximum fill line to prevent boiling water from overflowing.
- Always ensure the lid is securely closed before operating the kettle.
- Exercise caution when pouring hot water.
- The kettle features an automatic shut-off mechanism when water boils or if the kettle is empty. Do not attempt to override this safety feature.
- Only use Brita Maxtra filters with this appliance.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Wik Brita Filter Kettle.



Figure 1: The Wik 9531STA-W Brita Filter Kettle, showing the stainless steel kettle unit and the white filtration station.



Figure 2: Close-up view of the Brita Maxtra filter compartment within the filtration station, where the water is purified before entering the kettle.



Figure 3: The digital display on the kettle lid, which indicates the remaining filter life and prompts for filter replacement.

Components:

- **Stainless Steel Kettle:** 1-liter capacity, with internal water level indicator.
- **Filtration Station:** Houses the Brita Maxtra filter and collects filtered water.
- **Brita Maxtra Filter:** Included for water purification.
- **Digital Filter Indicator:** Located on the lid, displays filter status.
- **Hinged Safety Lid:** For secure closing and easy filling.
- **Removable Pouring Filter:** Located at the spout.
- **On/Off Switch:** With indicator light.
- **Stainless Steel Heating Plate:** Integrated into the power base.

SETUP

1. **Unpack:** Carefully remove all packaging materials and ensure all components are present.
2. **Clean:** Before first use, wipe the exterior of the kettle with a damp cloth. Fill the filtration station with water, allow it to filter, and then boil the water in the kettle. Discard this first boiled water. Repeat this process twice to ensure cleanliness.
3. **Install Filter:**



Figure 4: A Brita Maxtra filter cartridge, designed for optimal water filtration.

- Remove the new Brita Maxtra filter from its packaging.
- Submerge the filter in cold water and gently shake to remove any air bubbles.
- Insert the filter firmly into the designated compartment in the filtration station (refer to Figure 2). Ensure it is seated correctly.

4. **Activate Filter Indicator:** Press and hold the "START" button on the digital filter indicator (Figure 3) for a few seconds until the display shows 100%. This resets the timer for the new filter.

OPERATING INSTRUCTIONS

1. **Fill the Filtration Station:** Open the hinged lid and pour cold tap water into the filtration station. The water will pass through the Brita Maxtra filter into the kettle reservoir.



Figure 5: Demonstrates pouring water into the filtration station, where it will be filtered before entering the kettle.

Do not exceed the maximum fill line (1 liter) indicated inside the kettle.

2. **Close the Lid:** Ensure the hinged lid is securely closed.
3. **Place on Power Base:** Position the kettle firmly on its power base.
4. **Connect to Power:** Plug the power cord into a suitable 230V electrical outlet.
5. **Start Boiling:** Press the On/Off switch. The indicator light will illuminate, signifying that the kettle is heating.
6. **Automatic Shut-off:** The kettle will automatically switch off once the water has boiled. The indicator light will extinguish.
7. **Pouring:** Carefully lift the kettle from its base and pour the hot water.
8. **Switching Off Manually:** You can switch off the kettle manually at any time by pressing the On/Off switch again.

MAINTENANCE AND CLEANING

General Cleaning:

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle and filtration station with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- The removable pouring filter can be detached and rinsed under running water. Ensure it is dry before

reattaching.

- Do not immerse the kettle or power base in water.

Descaling:

Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. Regular descaling is recommended to maintain performance and prolong the life of your appliance.

- Use a commercially available descaling solution suitable for kettles, following the manufacturer's instructions.
- Alternatively, you can use a solution of white vinegar and water (e.g., 1 part vinegar to 2 parts water). Fill the kettle with the solution, bring it to a boil, and let it stand for an hour before emptying and rinsing thoroughly several times with fresh water.
- Ensure all descaling solution is completely rinsed out before using the kettle for beverages.

FILTER REPLACEMENT

The digital filter indicator on the lid will show the remaining life of your Brita Maxtra filter. When the indicator reaches 0% or prompts for replacement, follow these steps:

1. Remove the old Brita Maxtra filter from the filtration station. Dispose of it responsibly.
2. Prepare a new Brita Maxtra filter as described in the "Setup" section (submerge in cold water and shake).
3. Insert the new filter firmly into the filtration station.
4. Reset the digital filter indicator by pressing and holding the "START" button until it displays 100%.
5. For optimal performance, it is recommended to replace the filter approximately every 4 weeks or after filtering 100 liters of water, whichever comes first.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat.	Not plugged in; power switch not pressed; no water in kettle; automatic shut-off activated.	Ensure plug is securely in outlet; press On/Off switch; fill kettle with water (above minimum); allow kettle to cool if recently boiled.
Water tastes unusual.	New filter not properly prepared; filter needs replacement; kettle needs cleaning/descaling.	Prepare new filter as per instructions; replace filter; clean and descale kettle.
Digital filter indicator not working.	Battery depleted; not reset after filter change.	Consult manufacturer for battery replacement; reset indicator by pressing "START" button.
Kettle switches off too soon.	Limescale build-up; faulty sensor.	Descale the kettle thoroughly. If problem persists, contact customer support.

If you experience any issues not listed here, or if the problem persists after attempting the solutions, please contact Wik customer support.

SPECIFICATIONS

Brand	Wik
Model Number	9531STA-W
Capacity	1 Liter
Power	2000 Watts
Voltage	230 Volts
Material	Stainless Steel (Kettle), Plastic (Filtration Station)
Features	Automatic shut-off, Boil-dry protection, Brita Maxtra filter system, Digital filter indicator, On/Off switch with indicator light, Removable pouring filter.
Weight	Approximately 2.39 kg

WARRANTY AND SUPPORT

This Wik 9531STA-W Brita Filter Kettle comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

The warranty covers defects in materials and workmanship under normal household use. It does not cover damage resulting from misuse, neglect, accident, alteration, or unauthorized repair.

For technical support, warranty claims, or spare parts inquiries, please contact your retailer or the official Wik customer service department. Contact information can typically be found on the manufacturer's website or on the product packaging.