

[Manuals.plus](#) /

› [ERICO](#) /

› Erico EM58 Instruction Manual


ERICO EM58

Erico EM58 Instruction Manual

Comprehensive guide for the Erico EM58 clamp, detailing its specifications, proper setup, operation, and maintenance.

PRODUCT OVERVIEW

The Erico EM58 is a robust metallic clamp, part of the Erico product line, designed for secure fastening in various applications. Manufactured from high-quality steel, this component ensures durability and reliable performance. Its compact design makes it suitable for installations where space might be a consideration.

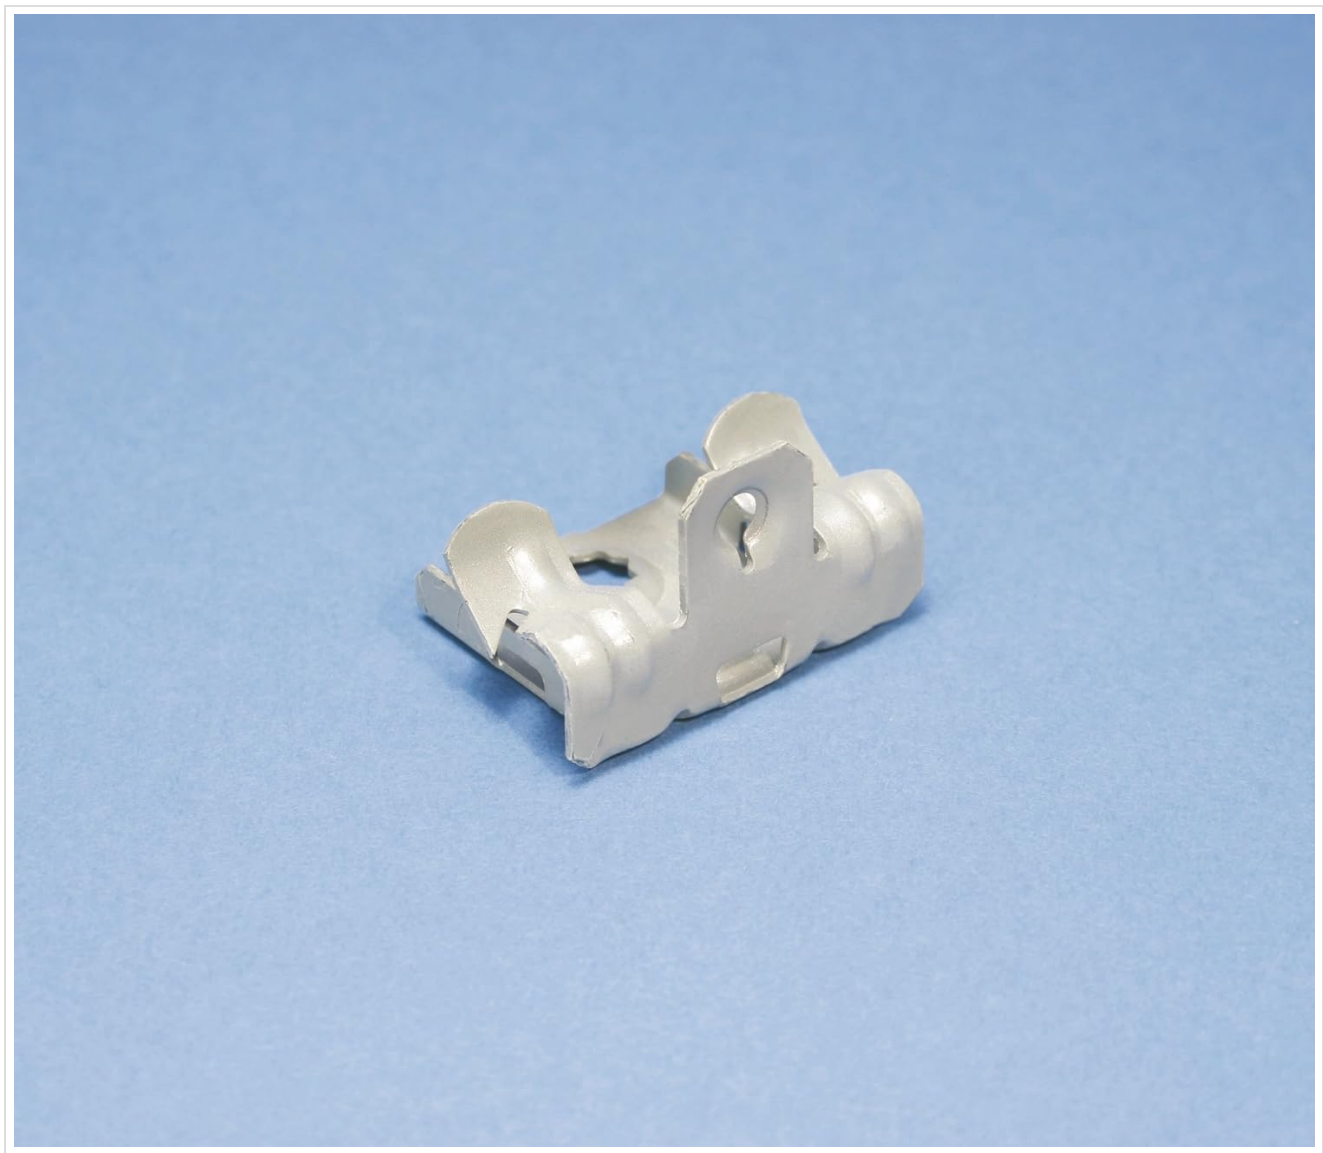

This image displays the Erico EM58 clamp, a compact metallic component designed for secure fastening. It is made of steel and features a robust construction suitable for various applications.

SPECIFICATIONS

Attribute	Detail
Brand	ERICO
Model Name	EM58
Model Number	170060
Material Type	Alloy Steel
Color	Metallic
Item Weight	20 g
Package Dimensions	4 x 3.9 x 2.8 cm
First Available Date	February 21, 2020

SETUP

The Erico EM58 clamp is designed for straightforward installation. Ensure the surface or component you intend to attach the clamp to is clean and free from obstructions. Position the clamp securely, ensuring a firm grip on the intended material. For optimal performance, verify that the clamp is fully engaged and stable before applying any load or completing the installation.

Steps for Installation:

1. Identify the attachment point: Determine the exact location where the EM58 clamp needs to be installed.
2. Prepare the surface: Ensure the surface is clean and dry to allow for a secure fit.
3. Position the clamp: Place the EM58 clamp over the component or structure it is intended to secure.
4. Engage the clamp: Apply appropriate pressure to fully engage the clamp, ensuring it locks into place.
5. Verify stability: Gently test the clamp's hold to confirm it is securely fastened and will not dislodge under normal operating conditions.

OPERATING

Once properly installed, the Erico EM58 clamp functions as a static fastening device. It is designed to hold components securely in place, preventing movement or displacement. No active operation is required after installation; its function is passive and continuous. Ensure that the load applied to the clamped components does not exceed the structural integrity of the clamp or the materials it is securing.

The clamp maintains its grip through its inherent design and material properties. It is not adjustable once installed, so precise positioning during setup is crucial for effective operation.

MAINTENANCE

The Erico EM58 clamp requires minimal maintenance due to its durable steel construction. Regular inspection is recommended to ensure its continued integrity and performance.

- **Visual Inspection:** Periodically check the clamp for any signs of corrosion, deformation, or damage. Ensure it remains firmly attached to its intended position.
- **Cleaning:** If exposed to dust or debris, gently wipe the clamp with a dry or slightly damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the metallic surface.
- **Environmental Considerations:** While designed for durability, prolonged exposure to extreme corrosive environments may accelerate wear. If used in such conditions, more frequent inspections are advised.

No lubrication or specific adjustments are necessary for this product.

TROUBLESHOOTING

The Erico EM58 clamp is a simple, passive component, and issues are typically related to improper installation or external factors. Here are common scenarios and their solutions:

- **Clamp is Loose:**
 - *Cause:* Not fully engaged during installation or incorrect size for the application.
 - *Solution:* Remove the clamp and re-install, ensuring it snaps or locks firmly into place. Verify that the clamp's specifications match the dimensions of the components it is intended to secure.
- **Signs of Corrosion:**

- *Cause:* Exposure to moisture or corrosive agents over time.
 - *Solution:* Clean the affected area with a rust inhibitor or a fine-grade abrasive if minor. For significant corrosion, consider replacement to ensure structural integrity.
- **Clamp is Deformed/Damaged:**
 - *Cause:* Excessive force during installation, impact, or overloading.
 - *Solution:* The clamp is not designed to be repaired if deformed. Replace the damaged clamp immediately to maintain safety and functionality.

If issues persist or you encounter problems not listed here, please refer to the support section.

WARRANTY AND SUPPORT

The Erico EM58 clamp is manufactured by ERICO, a reputable brand known for quality components. While specific warranty details for this particular item are not provided in the product information, standard manufacturer warranties typically cover defects in materials and workmanship for a reasonable period from the date of purchase.

For support regarding product inquiries, technical assistance, or warranty claims, please contact the manufacturer or your point of purchase. Keep your purchase receipt or proof of purchase handy as it may be required for warranty services.

Return Policy: This product typically has a 30-day return policy from the date of purchase, allowing for refunds or replacements if the item is unsatisfactory or defective, subject to the seller's terms and conditions.

Manufacturer: ERICO

ASIN: B001B3482G

© 2024 ERICO. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question