

Robern MP24D4ARE

Robern MP24D4ARE Arch Mirrored Door Instruction Manual

Model: MP24D4ARE

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before installing or operating this product. Failure to follow these instructions may result in electric shock, fire, or serious injury. Keep this manual for future reference.

- **Electrical Safety:** All electrical work must be performed by a qualified electrician in accordance with all applicable local and national electrical codes. Ensure power is disconnected at the circuit breaker before installation or servicing.
- **Mounting:** The cabinet must be securely mounted to structural framing or blocking capable of supporting its weight. Do not mount to drywall alone.
- **Glass Handling:** Handle glass components with care to prevent breakage and injury.
- **Ventilation:** Ensure adequate ventilation around the cabinet, especially if installed in a confined space.
- **Water Exposure:** This product is designed for bathroom environments but should not be directly exposed to water spray or submersion.

PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, do not proceed with installation and contact Robern customer service.

- Robern MP24D4ARE Arch Mirrored Door Cabinet
- Adjustable Glass Shelves (Quantity: Varies by model)
- Mounting Hardware Kit
- Instruction Manual (This document)

INSTALLATION (SETUP)

This section outlines the steps for installing your Robern Arch Mirrored Door cabinet. It is recommended that two people perform the installation.

Tools Required:

- Tape Measure
- Level
- Pencil
- Drill with appropriate bits
- Screwdriver (Phillips and Flathead)
- Stud Finder
- Wire Strippers/Cutters (for electrical connection)

Pre-Installation Steps:

1. **Unpack:** Carefully remove all components from the packaging and inspect for damage.
2. **Power Off:** Locate the circuit breaker controlling the bathroom power and turn it OFF. Verify power is off using a voltage tester.
3. **Location:** Determine the desired mounting location. Ensure there are wall studs or adequate blocking for secure attachment. The cabinet dimensions are 23-1/4"W x 43-3/8"H.

Mounting the Cabinet:

1. **Marking:** Hold the cabinet in the desired position and use a level to ensure it is straight. Mark the mounting hole locations on the wall with a pencil.
2. **Drilling:** Drill pilot holes at the marked locations. If mounting into studs, use appropriate wood screws. If mounting into blocking, ensure screws are long enough to penetrate securely.
3. **Secure Cabinet:** With assistance, lift the cabinet and align the mounting holes with the pilot holes. Secure the cabinet to the wall using the provided mounting hardware. Do not overtighten.

Electrical Connection (for Electric Outlet Shelf and Door Defogger):

This step must be performed by a qualified electrician.

1. **Access Wiring:** Route the electrical supply wires from the wall opening to the cabinet's electrical junction box.
2. **Connect Wires:** Connect the cabinet's electrical wires to the household wiring (Black to Black, White to White, Green/Bare to Ground) using appropriate wire connectors.
3. **Secure Connections:** Ensure all connections are secure and properly insulated. Close the junction box cover.

Door Hinge Adjustment (Right Hand Hinge):

The MP24D4ARE model features a right-hand hinge. If adjustment is needed for proper door alignment:

- **Horizontal Adjustment:** Use the screw closest to the cabinet frame on each hinge to move the door left or right.
- **Vertical Adjustment:** Use the mounting screws on the hinge plate to adjust the door up or down. Loosen slightly, adjust, then retighten.
- **Depth Adjustment:** Use the screw furthest from the cabinet frame to adjust the door's depth relative to the cabinet.

OPERATION

Once installed and power is restored, your Robern Arch Mirrored Door cabinet is ready for use.

Door Operation:

- Gently open and close the mirrored door. The right-hand hinge allows the door to swing open from the left side.
- Avoid slamming the door to prevent damage to hinges and mirror.

Electric Outlet Shelf:

- The integrated electric outlet shelf provides convenient power for small appliances such as electric toothbrushes, shavers, or hair dryers.
- Ensure appliances are rated for the outlet's voltage and current capacity. Do not overload the outlet.
- Always unplug appliances when not in use.

Door Defogger:

- The door defogger activates automatically or via a dedicated switch (depending on installation wiring) to prevent condensation on the mirror surface.
- Allow a few minutes for the defogger to reach optimal operating temperature.
- The defogger is designed for intermittent use. Turn off when not needed to conserve energy.

MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your Robern cabinet.

Cleaning the Mirror and Cabinet:

- **Mirror:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray cleaner onto the cloth, not directly onto the mirror, to prevent liquid from seeping into edges.
- **Cabinet Surfaces:** Wipe with a soft, damp cloth. For stubborn spots, use a mild, non-abrasive household cleaner. Avoid harsh chemicals, abrasive pads, or solvents.
- **Electrical Outlets:** Ensure power is off before cleaning around electrical outlets. Use a dry cloth.

Hinge Maintenance:

- Periodically check hinge screws for tightness. Tighten if necessary, but do not overtighten.
- If hinges become stiff, apply a small amount of silicone-based lubricant to the pivot points.

Shelf Adjustment:

- To adjust shelf height, carefully remove items from the shelf. Lift the shelf slightly, slide it out of its supports, and reposition the supports to the desired height. Reinsert the shelf.
- Ensure shelves are securely seated before placing items on them.

TROUBLESHOOTING

Refer to this section for common issues and their solutions. If the problem persists, contact Robern customer service.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power to electric outlet/defogger.	• Circuit breaker tripped. • Loose electrical connection. • Faulty outlet/defogger.	• Check and reset the circuit breaker. • <i>(Qualified Electrician Only)</i> Inspect and tighten connections. • Contact Robern customer service for replacement parts.
Mirror fogs up despite defogger.	• Defogger not activated. • Insufficient warm-up time. • Defogger malfunction.	• Ensure defogger is switched on (if applicable) and power is supplied. • Allow 5-10 minutes for the defogger to work. • Contact Robern customer service.
Door is misaligned or sags.	• Loose hinge screws. • Hinge adjustment needed.	• Tighten hinge screws. • Refer to "Door Hinge Adjustment" in the Installation section.

SPECIFICATIONS

Feature	Detail
Model Number	MP24D4ARE
Dimensions (W x H x D)	23-1/4" x 43-3/8" x 4"
Hinge Side	Right Hand Hinge
Features	Electric Outlet Shelf, Door Defogger
Electrical Requirements	120V AC, 60Hz (Dedicated circuit recommended)
Mounting Type	Wall-mounted (Recessed or Surface, consult installation guide for specific model)
Material	Anodized Aluminum Frame, Glass Mirror

WARRANTY AND CUSTOMER SUPPORT

Robern products are manufactured to the highest quality standards and are backed by a limited warranty. For specific warranty details, please refer to the warranty card included with your product or visit the official Robern website. For technical assistance, replacement parts, or any questions regarding your Robern MP24D4ARE Arch Mirrored Door, please contact Robern Customer Service:

- **Website:** www.robern.com
- **Phone:** Refer to Robern's official website for current contact numbers.
- **Email:** Refer to Robern's official website for current contact email.

When contacting support, please have your model number (MP24D4ARE) and purchase date available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question