

TIMEX T5K200SU

Timex Ironman T5K200SU Digital Watch User Manual

Model: T5K200SU

1. INTRODUCTION

Welcome to the user manual for your Timex Ironman T5K200SU Digital Watch. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your watch to ensure optimal performance and longevity. Please read these instructions carefully before using your watch.

2. PRODUCT OVERVIEW

The Timex Ironman T5K200SU is a robust digital watch designed for active lifestyles. It features a clear digital display, durable resin case and band, and is built to withstand various conditions. Key features include water resistance and a scratch-resistant crystal.



Figure 2.1: Front view of the Timex Ironman T5K200SU Digital Watch, showing its digital display and button layout.

3. SETUP

3.1 Initial Battery Activation

Your watch comes with a pre-installed Lithium Ion battery. If the display is not active, press any button to wake the watch. No special activation is typically required for initial use.

3.2 Setting Time and Date

1. Press and hold the **SET** or **MODE** button (refer to watch specific button labels) until the time display begins to flash.
2. Use the **START/STOP** or **ADJUST** button to increment the flashing digit (hours, minutes, seconds).
3. Press the **MODE** button again to move to the next setting (e.g., minutes, then year, month, day).
4. Once all settings are correct, press the **SET** or **MODE** button to exit the setting mode.

4. OPERATING INSTRUCTIONS

4.1 Basic Time Display

In normal timekeeping mode, the watch displays the current time (hours, minutes, seconds) and often the day of the week and date. Pressing the **MODE** button cycles through different functions.

4.2 Mode Functions

Your Ironman watch typically includes several modes:

- **Time Mode:** Displays current time, date, and day.
- **Stopwatch Mode:** For timing events. Press **START/STOP** to begin/pause, **LAP/RESET** to record laps or reset.
- **Timer Mode:** For countdowns. Set the desired time, then press **START/STOP**.
- **Alarm Mode:** Set daily alarms.

4.3 INDIGLO Night-Light

Press the **INDIGLO** button (usually located on the top left of the watch face) to illuminate the display for easy viewing in low-light conditions.

4.4 Water Resistance

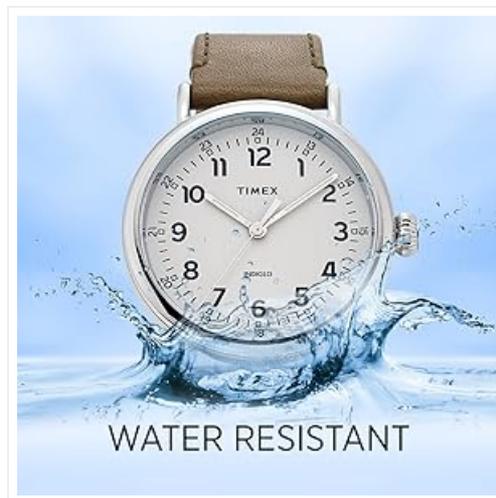


Figure 4.1: Illustration of the watch's water resistance feature.

Your Timex Ironman T5K200SU is rated as waterproof. This means it is suitable for swimming, showering, and general water activities. However, avoid pressing buttons underwater, as this can compromise the water seal. Always ensure the crown (if present) is pushed in completely before exposure to water.

5. MAINTENANCE

5.1 Cleaning Your Watch

To clean your watch, wipe it with a soft, damp cloth. For resin bands, mild soap and water can be used. Avoid harsh chemicals or abrasive materials that could damage the watch's finish or crystal.



Figure 5.1: Close-up of the watch's scratch-resistant crystal.

5.2 Battery Replacement

When the display dims or functions become erratic, it may be time to replace the battery. It is recommended to have the battery replaced by an authorized Timex service center to ensure the watch's water resistance is maintained. *Note: Replacing the battery yourself or by an unauthorized service may compromise the watch's water-resistant properties.*

5.3 Storage

Store your watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

6. TROUBLESHOOTING

- **Watch Not Working / Blank Display:**

Check if the battery needs replacement. If recently replaced, ensure it was installed correctly.

- **Incorrect Time Display:**

Refer to Section 3.2 for instructions on setting the time and date. Ensure you are in the correct 12-hour or 24-hour format if applicable.

- **Buttons Not Responding:**

Ensure the watch is not in a locked mode (if applicable). If the issue persists, a battery replacement might be necessary, or contact customer support.

- **Water Inside Watch:**

If moisture appears inside the watch, stop using it immediately and take it to an authorized service center. This indicates a compromised seal.

7. SPECIFICATIONS

Feature	Specification
Model Number	T5K200SU
Display Type	Digital
Case Diameter	42 Millimetres
Band Width	20 Millimetres
Case Thickness	14 Millimetres

Feature	Specification
Water Resistance Level	Waterproof
Band Material Type	Resin
Case Material Type	Resin
Power Source Type	Battery Powered (1 Lithium Ion battery included)
Item Weight	113 g
Closure Type	Buckle (Tang Buckle)

8. WARRANTY AND SUPPORT

Your Timex watch is covered by a manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Timex website.

For service, repairs, or technical assistance, please contact an authorized Timex Service Centre. Using unauthorized service may void your warranty.

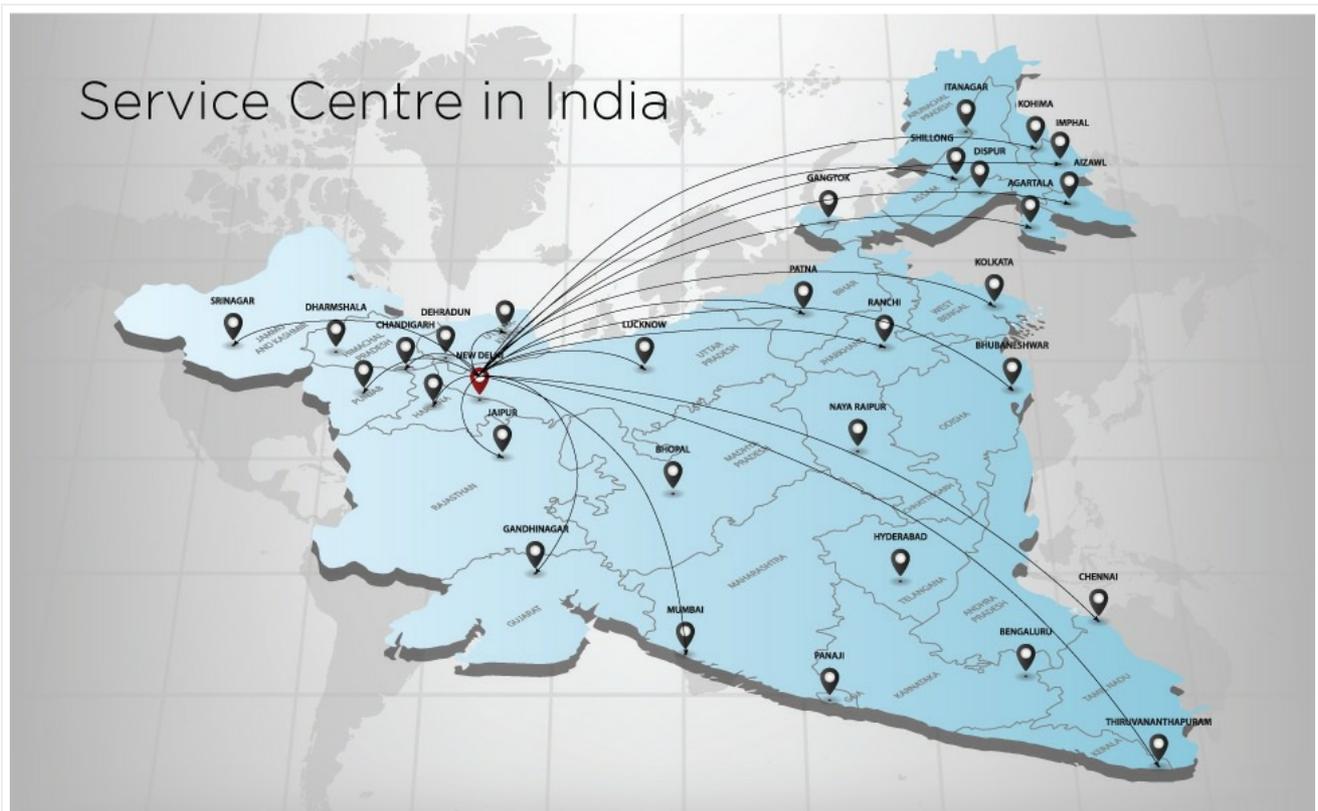


Figure 8.1: Information regarding Timex Service Centres.