

Technics SL-PD807

Technics SL-PD807 MASH 5 Disc CD Player User Manual

Model: SL-PD807

INTRODUCTION

Thank you for purchasing the Technics SL-PD807 MASH 5 Disc CD Player. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new audio component. Please read this manual thoroughly before using the unit to ensure optimal performance and longevity.

The SL-PD807 features a 5-disc carousel changer, allowing for extended playback without interruption, and incorporates MASH (Multi-stage Noise Shaping) D/A conversion for high-quality audio reproduction.

IMPORTANT SAFETY INFORMATION

- **Power Source:** Ensure the unit is connected to an AC 120V, 60Hz power supply.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the unit for proper airflow to prevent overheating.
- **Moisture:** Do not expose the unit to rain or moisture. Do not place objects filled with liquids, such as vases, on the unit.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a dry cloth for cleaning.
- **Servicing:** Do not attempt to service this unit yourself. Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Please check that all items are present in the package:

- Technics SL-PD807 MASH 5 Disc CD Player
- Power Cord
- RCA Audio Cables

Note: A remote control is not included with this unit.

SETUP

1. Unpacking

Carefully remove the CD player and all accessories from the packaging. Retain the packaging materials for future transport or storage.

2. Placement

Place the CD player on a stable, level surface away from direct sunlight, heat sources, and excessive dust or vibrations. Ensure there is sufficient space around the unit for proper ventilation.



Figure 1: Front view of the Technics SL-PD807 CD Player with included RCA cables.

3. Connections

Connect the CD player to your amplifier or receiver using the supplied RCA audio cables.

1. Connect one end of the RCA audio cables (red and white plugs) to the 'LINE OUT' jacks on the rear of the SL-PD807.
2. Connect the other end of the RCA audio cables to an available 'CD IN' or 'AUX IN' input on your amplifier/receiver. Match the red plug to the 'R' (right) input and the white plug to the 'L' (left) input.

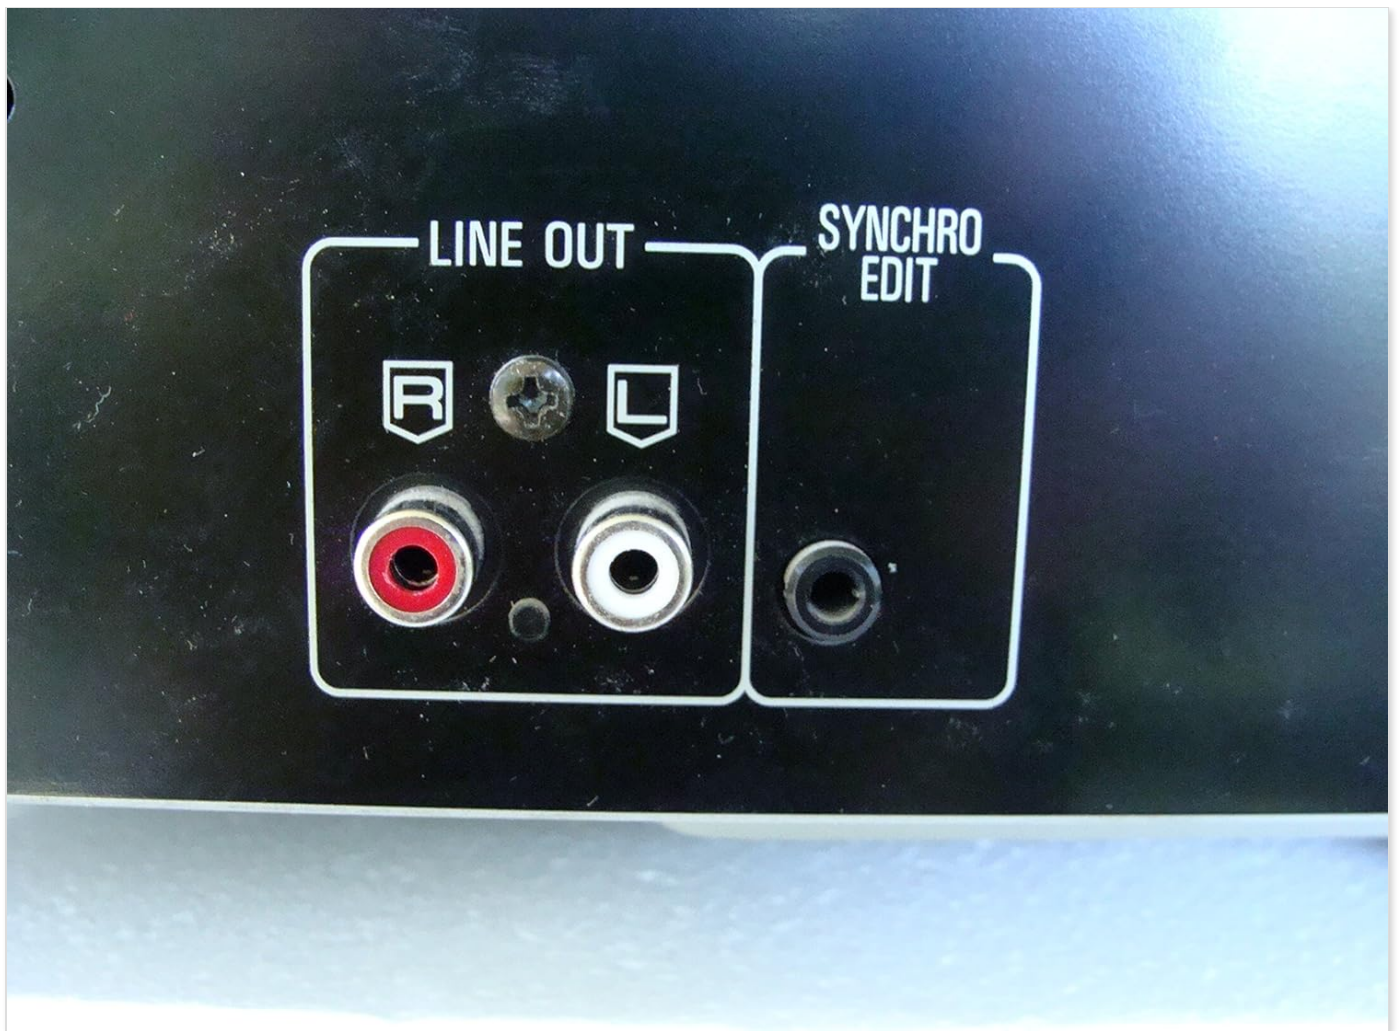


Figure 2: Rear panel connections, highlighting the 'LINE OUT' (RCA) and 'SYNCHRO EDIT' ports.

3. Plug the power cord into the AC inlet on the rear of the CD player, then plug the other end into a standard AC wall outlet.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the **POWER** button located on the front left of the unit to turn the CD player on or off.

2. Loading Discs

The SL-PD807 features a 5-disc carousel. Press the **OPEN/CLOSE** button to open the disc tray. Place up to five CDs onto the numbered disc slots with the label side facing up. Press **OPEN/CLOSE** again to close the tray.



Figure 3: Front panel controls including disc tray, display, and playback buttons.

3. Basic Playback

- **Play:** Press the **PLAY** button (▶) to start playback.
- **Pause:** Press the **PAUSE** button (⏸) to temporarily stop playback. Press again to resume.
- **Stop:** Press the **STOP** button (■) to stop playback.
- **Skip Tracks:** Press the **SKIP** buttons (⏮ / ⏭) to skip to the next or previous track.
- **Search:** Hold down the **SEARCH** buttons (⏮ / ⏭) to fast forward or rewind within a track.

4. Disc Exchange

You can exchange discs while another disc is playing. Press the **DISC SKIP** button to rotate the carousel to an empty slot or a disc you wish to remove/replace. The currently playing disc will continue to play until you select a new disc to play.

5. Playback Modes

- **Random Play:** Press the **RANDOM** button to play tracks on the current disc or all loaded discs in a random order.
- **Program Play:** Use the **PROGRAM** button to create a custom playback sequence of tracks from the loaded discs. Refer to the on-screen display for programming steps.
- **Repeat Play:** Press the **REPEAT** button to repeat the current track, current disc, or all discs.

MAINTENANCE

1. Cleaning the Unit

Wipe the exterior of the unit with a soft, dry cloth. For stubborn stains, slightly dampen the cloth with water and a mild detergent, then wipe dry. Do not use abrasive cleaners, benzene, thinner, or alcohol, as these can damage the finish.



Figure 4: Top surface of the unit, illustrating areas that may require cleaning or show wear.

2. Disc Care

- Handle discs by their edges to avoid fingerprints on the playing surface.
- Keep discs clean. Wipe from the center outwards with a soft, lint-free cloth if necessary.
- Store discs in their cases to protect them from dust and scratches.

TROUBLESHOOTING

If you experience problems with your CD player, please consult the following table before seeking service.

| Problem | Possible Cause | Solution |
|-------------------------------|--|--|
| No power | Power cord not securely connected. | Check power cord connection to the unit and wall outlet. |
| No sound | RCA audio cables not connected correctly. Amplifier/receiver input not selected. | Ensure RCA cables are securely connected to both the CD player and amplifier. Select the correct input on your amplifier/receiver. |
| Disc does not play / Skipping | Disc is dirty or scratched. Disc is inserted incorrectly. | Clean the disc with a soft, lint-free cloth. Ensure the disc is placed label-side up in the tray. Try another disc. |
| Carousel does not rotate | Obstruction in the disc tray. | Ensure no foreign objects are obstructing the carousel mechanism. |

SPECIFICATIONS

The following are the technical specifications for the Technics SL-PD807 MASH 5 Disc CD Player:

| Feature | Specification |
|-------------------------|----------------------|
| Model Name | SL-PD807 |
| Manufacturer | Technics |
| Disc Capacity | 5 Discs |
| Power Requirements | AC 120V, 60Hz, 13W |
| Package Dimensions | 17 x 17 x 5 inches |
| Item Weight | 15.02 pounds |
| Connectivity Technology | Auxiliary, Infrared |
| Special Feature | Anti-Skip Protection |







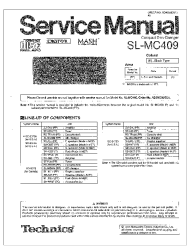

Figure 5: Product label displaying model number and power specifications.

WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support for your Technics SL-PD807 CD Player, please refer to the warranty card included with your purchase or visit the official Technics website. If you require further assistance, please contact Technics customer service.

© 2024 Technics. All rights reserved.

Related Documents - SL-PD807

| | |
|---|--|
|  | <p>Technics SL-P520 Compact Disc Player Service Manual</p> <p>Comprehensive service manual for the Technics SL-P520 Compact Disc Player, detailing specifications, operation, safety precautions, maintenance, troubleshooting, and parts.</p> |
|  | <p>Technics SL-P990 Compact Disc Player Service Manual</p> <p>Detailed service manual for the Technics SL-P990 Compact Disc Player. Includes specifications, disassembly instructions, measurements, adjustments, and troubleshooting information.</p> |
|  <p>Owner's Manual Network/ Super Audio CD Player SL-G700</p> | <p>Technics SL-G700 Owner's Manual: Network/Super Audio CD Player</p> <p>Discover the Technics SL-G700 Owner's Manual for comprehensive guidance on your Network/Super Audio CD Player. Learn about setup, features, playback options, and troubleshooting.</p> |
|  | <p>Technics SL-EH570 Service Manual</p> <p>Comprehensive service manual for the Technics SL-EH570 Compact Disc Player, detailing technical specifications, handling precautions, troubleshooting, and repair procedures for experienced technicians.</p> |
|  | <p>Technics SL-MC409 Compact Disc Changer Service Manual</p> <p>Service manual for the Technics SL-MC409 Compact Disc Changer, detailing component line-up, placement, front panel controls, equipment connections, and changes in replacement parts compared to the SL-MC400 model.</p> |
|  | <p>Technics Grand Class SL-1200G Direct Drive Turntable System</p> <p>Discover the Technics Grand Class SL-1200G, a direct drive turntable system engineered for superior analogue sound. Explore its advanced features, rich heritage, and meticulous Japanese craftsmanship.</p> |