

[Manuals.plus](#) /

› [Pampered Chef](#) /

› Pampered Chef Quick Stir 2 Quart Pitcher Instruction Manual

Pampered Chef CECOMINHK07452

Pampered Chef Quick Stir 2 Quart Pitcher Instruction Manual

INTRODUCTION

The Pampered Chef Quick Stir 2 Quart Pitcher is designed for efficient mixing of beverages. Its unique plunger mechanism allows for effortless stirring of juices, concentrates, iced tea, lemonade, and powdered mixes without needing to open the lid. This manual provides essential information for the proper setup, operation, and maintenance of your pitcher.



Image: The Pampered Chef Quick Stir 2 Quart Pitcher, a transparent plastic pitcher with a lid and an integrated plunger for stirring.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Ensure you have the pitcher, lid, and plunger assembly.
2. **Initial Cleaning:** Before first use, wash the pitcher, lid, and plunger assembly with warm, soapy water. Rinse thoroughly and dry completely.
3. **Assembly:** Insert the plunger into the designated opening in the lid, ensuring it moves freely up and down. Place the lid securely onto the pitcher.

OPERATING INSTRUCTIONS

- Add Ingredients:** Pour your desired liquids and powdered mixes into the pitcher. Do not exceed the 2-quart capacity mark.
- Secure Lid:** Place the lid with the assembled plunger firmly onto the pitcher. Ensure it is properly seated to prevent spills.
- Stirring:** Use the handle on the plunger to move it up and down. This action will effectively mix the contents of the pitcher. Continue until the beverage is thoroughly combined and any powders are dissolved.
- Serving:** The pitcher features a convenient spout for easy pouring.

MAINTENANCE AND CLEANING

- Disassembly:** Remove the lid and plunger from the pitcher. Separate the plunger from the lid for thorough cleaning.
- Washing:** Wash all parts by hand with warm, soapy water. A soft brush may be used for hard-to-reach areas, especially around the plunger mechanism.
- Rinsing:** Rinse all components thoroughly with clean water to remove any soap residue.
- Drying:** Allow all components to air dry completely before reassembly or storage to prevent water spots and odors.
- Storage:** Store the pitcher in a clean, dry place.

TROUBLESHOOTING

- Issue: Plunger is stiff or difficult to move.**
Solution: Ensure all parts are clean and free of beverage residue or foreign objects that might obstruct the plunger's movement. Lubrication is not required or recommended.
- Issue: Beverage not mixing thoroughly.**
Solution: Ensure the plunger is fully inserted and moved up and down with sufficient force and range of motion. For thicker mixes or larger quantities of powder, allow more time for stirring and ensure the plunger reaches the bottom of the pitcher.

SPECIFICATIONS

Brand	Pampered Chef
Model Number	CECOMINHK07452
Material	Plastic
Capacity	2 Quarts
Color	Transparent
Special Features	Ergonomic Handle, Integrated Plunger Stirring Mechanism
Included Components	Pitcher, Lid, Plunger
Item Weight	12.8 ounces

WARRANTY INFORMATION

This product is covered by the manufacturer’s standard warranty. For detailed warranty terms, conditions, and registration information, please refer to the original product packaging or visit the official Pampered Chef website.

CUSTOMER SUPPORT

For further assistance, product inquiries, or to report any issues, please contact Pampered Chef customer service directly. Contact information can typically be found on the product packaging or on the official Pampered Chef website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question