

RCA RP8075-RS

RCA RP8075-RS 5-Disc CD Player Instruction Manual

Model: RP8075-RS

INTRODUCTION

Thank you for purchasing the RCA RP8075-RS 5-Disc CD Player. This manual provides important information regarding the setup, operation, and maintenance of your new audio system. Please read it thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been

damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

PACKAGE CONTENTS

Please check that all items are present:

- RCA RP8075-RS 5-Disc CD Player Unit
- Remote Control (with batteries)
- Audio Cable (RCA type)
- Instruction Manual (this document)
- Power Cord

SETUP

1. Unpacking

Carefully remove the CD player from its packaging. Retain the packaging materials for future transport or storage.

2. Placement

Place the CD player on a stable, level surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.

3. Connecting to an Amplifier/Receiver

1. Connect one end of the supplied audio cable to the **AUDIO OUT** jacks (red for right, white for left) on the back of the CD player.
2. Connect the other end of the audio cable to an available audio input on your amplifier or receiver (e.g., **CD IN, AUX IN**). Match the red and white connectors.

4. Power Connection

Plug the power cord into the **AC IN** socket on the back of the CD player, then plug the other end into a standard AC wall outlet (120V AC, 60Hz).

5. Remote Control Batteries

Open the battery compartment on the back of the remote control and insert the supplied batteries, observing the correct polarity (+/-).

OPERATING INSTRUCTIONS

1. Loading Discs

1. Press the **OPEN/CLOSE** button on the front panel or remote control to open the disc tray.
2. Place up to five CDs onto the disc carousel, label side up. Ensure discs are seated correctly in their respective trays.
3. Press the **OPEN/CLOSE** button again to close the disc tray. The player will scan the discs.

2. Basic Playback

1. Press the **POWER** button to turn on the unit.
2. Press the **PLAY/PAUSE** (▶/||) button to start playback of the first loaded disc.
3. To pause, press **PLAY/PAUSE** (▶/||) again. Press again to resume.
4. To stop playback, press the **STOP** (■) button.
5. To skip tracks, use the **SKIP FORWARD** (▶▶) or **SKIP BACKWARD** (◀◀) buttons.
6. To select a specific disc, press the corresponding **DISC 1-5** button on the remote control or front panel.

3. Advanced Features

Program Play

Allows you to create a custom playlist of up to 32 tracks from any loaded disc.

1. With the player stopped, press the **PROGRAM** button.
2. Use the **DISC 1-5** buttons to select the desired disc.
3. Use the **SKIP FORWARD/BACKWARD** buttons to select the desired track.
4. Press **PROGRAM** again to add the track to the program list.
5. Repeat steps 2-4 to add more tracks.
6. Press **PLAY** to start program playback.

Repeat Play

Press the **REPEAT** button during playback to cycle through repeat modes: Repeat Track, Repeat Disc, Repeat All, Repeat Program (if programmed).

Random Play

Press the **RANDOM** button during playback to play tracks in a random order.

MAINTENANCE

Cleaning the Unit

Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. For stubborn stains, use a slightly damp cloth and then dry thoroughly.

Cleaning Discs

Wipe discs from the center outwards with a soft, lint-free cloth. Do not use solvents or abrasive materials. Avoid touching the playing surface of the disc.

Laser Lens Care

The laser lens should not require cleaning under normal use. If playback issues persist, consult a qualified service technician. Do not attempt to clean the lens yourself with cotton swabs or other objects.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected	Ensure power cord is securely plugged into the unit and a live AC outlet.
No sound	Audio cables not connected correctly	Check audio cable connections between the CD player and amplifier/receiver. Ensure correct input is selected on amplifier.

Problem	Possible Cause	Solution
Disc not playing	Disc inserted incorrectly or dirty/damaged	Ensure disc is inserted label side up. Clean disc if dirty. Try a different disc.
Remote control not working	Batteries depleted or incorrect polarity	Replace batteries, ensuring correct +/- polarity. Ensure line of sight to the player's sensor.
Skipping or distorted sound	Dirty or scratched disc, or unit vibration	Clean disc. Place unit on a stable surface away from vibrations.

SPECIFICATIONS

- **Model:** RP8075-RS
- **Disc Capacity:** 5 CDs
- **Disc Compatibility:** Audio CD, CD-R/RW
- **Frequency Response:** 20Hz - 20kHz
- **Signal-to-Noise Ratio:** >90dB
- **Power Requirements:** AC 120V, 60Hz
- **Power Consumption:** 15W (approx.)
- **Dimensions (W x H x D):** 430 x 100 x 300 mm (approx.)
- **Weight:** 4.5 kg (approx.)

WARRANTY AND SUPPORT

RCA products are designed for reliability and performance. This product is covered by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official RCA website.

For technical support, service, or replacement parts, please contact RCA Customer Service:

- **Website:** www.rca.com
- **Phone:** 1-800-336-5000
- **Email:** support@rca.com

Please have your model number (RP8075-RS) and purchase date available when contacting support.