Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Hotpoint-Ariston /
- > Hotpoint-Ariston FQ 103 GP.1 Electric Built-in Oven User Manual

Hotpoint-Ariston FQ 103 GP.1

Hotpoint-Ariston FQ 103 GP.1 Electric Built-in Oven User Manual

Model: FQ 103 GP.1 ICE F/HA

1. Introduction

This manual provides essential information for the safe and efficient operation of your Hotpoint-Ariston FQ 103 GP.1 ICE F/HA electric built-in oven. Please read these instructions carefully before using the appliance and keep them for future reference.

The Hotpoint-Ariston FQ 103 GP.1 is a 58-liter multi-function electric oven featuring pyrolytic self-cleaning, a cool-touch door, and 10 cooking modes, designed for seamless integration into your kitchen.



This image displays the Hotpoint-Ariston FQ 103 GP.1 ICE F/HA electric built-in oven. The control panel is located at the top, featuring a digital display and various function icons. Below the control panel is the oven door with a horizontal handle, revealing the oven interior with rack supports. The Hotpoint-Ariston logo is visible on the lower part of the door.

2. SAFETY INSTRUCTIONS

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- Ensure the oven is correctly installed by a qualified technician before use.
- · Do not allow children to operate or play with the oven.
- The oven becomes hot during operation. Avoid touching heating elements or interior surfaces. Use oven mitts.
- Do not store flammable materials in or near the oven.
- Always disconnect the appliance from the power supply before cleaning or maintenance.
- Do not use abrasive cleaners or sharp metal scrapers to clean the oven door glass, as they can scratch the surface, potentially leading to shattering.
- Ensure proper ventilation during and after cooking.

3. Installation

The Hotpoint-Ariston FQ 103 GP.1 is designed as a built-in appliance. Installation should only be performed by a qualified professional in accordance with local regulations and the provided installation template (not included in this manual). Ensure adequate clearance for ventilation and proper electrical connection.

Dimensions: The oven measures approximately 54.5 cm (depth) x 59.5 cm (width) x 59.5 cm (height). Refer to the installation guide for precise cutout dimensions.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The oven features a digital display and touch controls for selecting functions, setting temperature, and managing timers. Familiarize yourself with the icons on the control panel.

4.2 Setting the Clock and Timer

- Setting the Clock: Upon initial power-up or after a power outage, the clock will flash. Use the appropriate buttons (refer to your specific model's control panel icons) to set the current time. Confirm the setting.
- **Using the Minute Minder:** The minute minder functions as a kitchen timer and does not control oven operation. Set the desired duration, and an audible signal will sound when the time expires.
- **Programming Cooking Duration:** For automatic cooking, select a cooking mode and temperature, then use the programmer function to set the desired cooking time. The oven will switch off automatically when the time elapses.

4.3 Cooking Modes

This oven offers **10 distinct cooking modes** to suit various culinary needs. Refer to the icons on your control panel to select the desired mode. Common modes include:

- Convection: Ideal for even cooking and baking on multiple levels.
- Grill: For browning, toasting, and grilling smaller items.
- Fan-assisted Grill: Combines grilling with fan circulation for faster, more even grilling.
- Bottom Heat: For dishes requiring more heat from the base.
- Defrost: Gentle thawing of frozen foods.
- · Consult your oven's specific icon guide for a full description of all 10 modes.

4.4 Using the Grill

To use the grill function, select the grill mode from the control panel. Place food on the grill rack, ensuring adequate distance from the heating element. Monitor food closely to prevent burning.

5. MAINTENANCE AND CLEANING

5.1 Pyrolytic Self-Cleaning

The pyrolytic cleaning cycle heats the oven to a very high temperature (approximately 500°C), incinerating food residues into a fine ash. This ash can then be easily wiped away once the oven has cooled.

- Remove all accessories (racks, trays, side supports) from the oven before starting a pyrolytic cycle.
- Wipe away any large spills or loose debris.
- Ensure the kitchen is well-ventilated during the cycle.
- The oven door will automatically lock during the pyrolytic cycle and remain locked until the temperature has dropped to a safe level.
- After the cycle, once the oven is cool, wipe the interior with a damp cloth to remove the ash.

5.2 Cool Door Feature

This oven is equipped with a cool door feature, maintaining the external door temperature at approximately 60°C during operation, enhancing safety, especially in households with children.

5.3 General Cleaning

- Clean the oven regularly to prevent food residue buildup.
- Use mild detergents and a soft cloth. Avoid abrasive cleaners.
- Clean the exterior surfaces with a damp cloth and dry thoroughly.
- The glass door can be cleaned with a non-abrasive glass cleaner.

6. Troubleshooting

If you encounter issues with your oven, consult the following common troubleshooting tips before contacting service.

Problem	Possible Cause	Solution
Oven does not heat	No power supply; incorrect settings; fuse tripped.	Check power connection; verify cooking mode and temperature settings; check household fuse box.
Food not cooking evenly	Incorrect rack position; oven overloaded; door not fully closed.	Adjust rack position; avoid overloading; ensure door is sealed.
Pyrolytic cycle not starting	Oven door not closed properly; accessories still inside.	Ensure door is fully closed and latched; remove all internal accessories.
Display shows an error code	Internal fault.	Note the error code and consult the Hotpoint-Ariston service center.

If the problem persists after attempting these solutions, contact qualified service personnel.

7. SPECIFICATIONS

Brand	Hotpoint-Ariston
Model Number	FQ 103 GP.1 ICE F/HA (FQ103GP)
Туре	Electric Built-in Oven
Volume	58 Litres
Energy Efficiency Class	А
Dimensions (L x W x H)	54.5 x 59.5 x 59.5 cm
Weight	38.9 Kilograms
Material	Glass
Heating Method	Convection
Special Features	10 cooking modes, Pyrolytic self-cleaning, Grill, Clock/Timer, 60°C Cool Door, Programmer, Display

8. WARRANTY AND SUPPORT

This Hotpoint-Ariston oven comes with a **1-year commercial warranty on parts**. For warranty claims, technical support, or to purchase spare parts, please contact your retailer or the official Hotpoint-Ariston service center. Keep your proof of purchase for warranty validation.

Information regarding the availability of spare parts is not provided in the product data.

Related Documents - FQ 103 GP.1



Hotpoint Ariston FID 834 H MR HA Built-in Oven: Safety and Installation Guide

Comprehensive safety, installation, and usage guide for the Hotpoint Ariston FID 834 H MR HA built-in oven. Includes essential warnings, step-by-step installation procedures, electrical safety precautions, cleaning and maintenance advice, and disposal information.



 
Hotpoint Ariston FI9 891 SP IX HA Built-in Oven: Safety, Installation, and User Guide

Comprehensive safety instructions, installation guide, electrical warnings, cleaning, maintenance, and energy-saving tips for the Hotpoint Ariston FI9 891 SP IX HA built-in oven. Ensure safe operation and proper installation.



Hotpoint Ariston FA3 841 H IX HA Oven Installation and Safety Manual

Comprehensive safety instructions, installation guide, usage guidelines, maintenance, and energy-saving tips for the Hotpoint Ariston FA3 841 H IX HA oven. This document provides essential information for safe operation and installation.

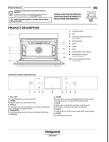


Hotpoint-Ariston Oven User Manual

Comprehensive user manual for the Hotpoint-Ariston oven, detailing product description, control panel functions, various cooking modes (Microwave, Grill, Crisp, Conventional, Forced Air, etc.), special functions (Keep Warm, Rising, Yogurt, Dehydration), auto modes, and detailed cooking tables for meat, fish, vegetables, and bakery items. Includes instructions on using the touch display, setting preferences, and initial heating.



Hotpoint Ariston Dishwasher: Daily Reference Guide

 This guide provides essential information for using and maintaining your Hotpoint Ariston dishwasher, including program details, troubleshooting tips, and care instructions.

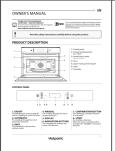

Hotpoint Ariston Built-in Microwave Oven Owner's Manual

Comprehensive owner's manual for Hotpoint Ariston built-in microwave ovens, covering product description, accessories, functions, daily use, cleaning, troubleshooting, and technical specifications. Learn how to operate your appliance safely and efficiently.

Documents - Hotpoint-Ariston - FQ 103 GP.1



[pdf]

Vincent Télécharger la fiche produit HOTPOINT ARISTON FQ 103 GP 1 FHAICE Four Encastrable Villatech 1000015920 villatech fr media |||

LIGNE QUARTZ FOUR MULTIFONCTION PYROLYSE **FQ 103 GP.1** ICE F/HA Indesit Company France SAS Fiche du 02/11/07 Commandes par touches sensitives Multifonction Pyrolyse 10 fonctions de cuisson dont 4 automatiques Programmateur lectronique avec dure / fin de cuisson Prconisation de la temprature Classe ... lang:fr score:33 filesize: 145.34 K page_count: 2 document date: 2010-08-10



[pdf] Documentation Decleration of Conformity

Microsoft Word Couverture notice 1 page doc IS97411 HOTPOINT ARISTON REFERENCE FQ 103 GP
MARQUE ICE F HA CODIC 3449564 NOTCOMP fc darty notices DOCUMENTATION |||
MARQUE: HOTPOINT / ARISTON REFERENCE: FO 103 GP 1 ICE F/HA CODIC:

MARQUE: HOTPOINT / ARISTON REFERENCE: **FQ 103 GP.1** ICE F/HA CODIC: 3449564 Mode demploi IT Italiano, 1 GB English,14 .R .ranais, 27 ES PT Espanol, 40 Portugus, 53 .Q 103 GP.1 ./HA .Z 103 GP.1 ./HA .Z 103 GP.1 IX ./HA .Q 103 GP.1 /HA .Z 103 GP.1 IX .HA .Z 103 GP.1 IX ...

lang:fr score:18 filesize: 2.15 M page_count: 14 document date: 2011-06-08