

SINGER 2250 Tradition

SINGER 2250 Tradition Zig-Zag Sewing Machine

USER INSTRUCTION MANUAL

Model: 2250 Tradition

Product Overview

The Singer 2250 Tradition Zig-Zag Sewing Machine is designed for ease of use and versatility, offering 10 built-in stitches and 23 stitch functions. It features a powerful 70W motor and a heavy-duty metal frame for durability. This machine is suitable for various sewing projects, from basic repairs to creative endeavors.



Image: Front view of the Singer 2250 Tradition sewing machine, showcasing its compact design and control dials.

Key Features:

- **Built-in Stitches:** 9 basic stitches for various sewing needs.
- **Stitch Functions:** 70 stitch functions for creative versatility.
- **Sewing Speed:** Up to 800 stitches per minute (SPM).
- **Buttonhole Styles:** 4-step buttonhole for consistent results.

- **Reverse Sewing:** Allows for reinforcing seams.
- **Extra High Presser Foot Lifter:** Accommodates thicker fabrics.
- **Heavy Duty Metal Frame:** Provides long-lasting durability and stability.
- **Accessory Storage:** Convenient built-in storage for accessories.

What's in the Box

Your Singer 2250 Tradition sewing machine package includes the following components:

- Zig-Zag machine with foot pedal
- Free accessories kit
- Dust cover
- User manual
- Warranty card

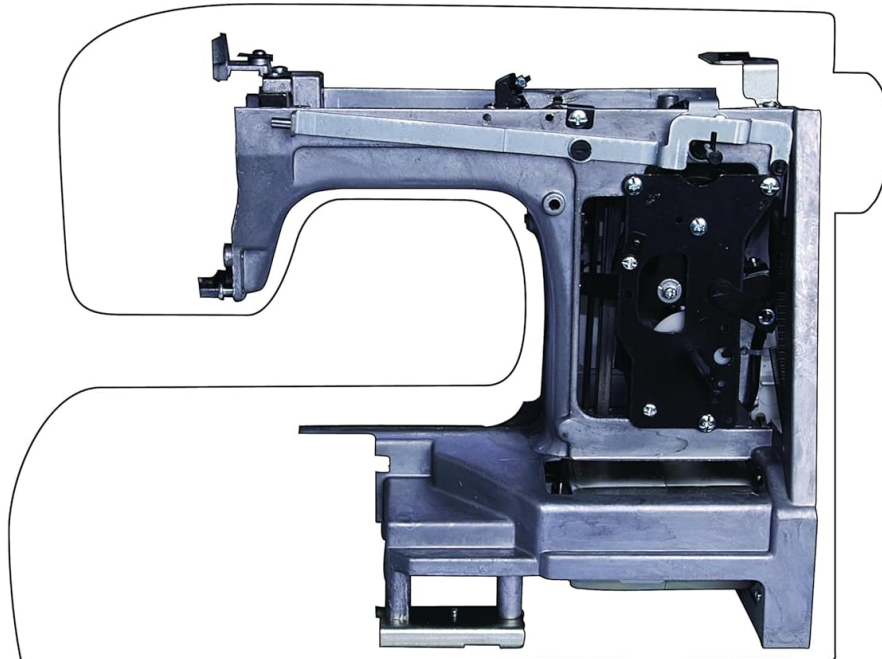


Image: Included accessories such as bobbins, needles, and various presser feet, stored in the machine's accessory compartment.

Setup

1. Unpacking and Placement

Carefully remove the machine from its packaging. Place the machine on a stable, flat surface with adequate lighting. Ensure there is enough space around the machine for comfortable operation.

2. Power Connection

Connect the power cord to the machine's power input and then plug it into a suitable electrical outlet. Ensure the machine's power switch is in the 'OFF' position before plugging it in.

3. Threading the Machine

Proper threading is crucial for smooth operation and good stitch quality. Follow these general steps:

1. Place the spool of thread on the spool pin.
2. Guide the thread through the upper thread guides, following the numbered path indicated on the machine.
3. Pass the thread through the tension discs.
4. Bring the thread up through the take-up lever.
5. Thread the needle from front to back.
6. Insert a wound bobbin into the bobbin case and ensure the bobbin thread is correctly positioned.
7. Turn the handwheel towards you to lower the needle and pick up the bobbin thread. Pull both threads under the presser foot.



Image: Front view of the machine, showing the upper threading path and tension dial.



Image: Side view of the machine, highlighting the tension adjustment dial and the bobbin winder.



Image: Close-up of the needle and presser foot area, essential for correct threading.

1. Stitch Selection

Rotate the stitch selector dial to choose your desired stitch pattern. The machine offers a variety of utility and decorative stitches.



Image: The stitch selection dial on the front of the machine, showing various stitch patterns.

2. Stitch Length and Width Adjustment

Adjust the stitch length and width using the corresponding dials to suit your fabric and project requirements. Shorter lengths create denser stitches, while longer lengths create looser stitches. Zig-zag width can be adjusted for different effects.

3. Reverse Sewing

To reinforce seams at the beginning and end of your stitching, press and hold the reverse lever. The machine will sew in reverse as long as the lever is held down.

4. Buttonhole Function

The 4-step buttonhole feature allows you to create professional-looking buttonholes. Attach the buttonhole foot and follow the steps indicated on the stitch selector dial for each segment of the buttonhole.



Image: A close-up of the buttonhole presser foot, designed for creating uniform buttonholes.

5. Using the Foot Pedal

Control the sewing speed by applying pressure to the foot pedal. Press gently for slower speeds and increase pressure for faster sewing. Always start slowly to maintain control.

Maintenance

1. Cleaning

Regular cleaning helps maintain your machine's performance. Use a small brush to remove lint and dust from the bobbin area, feed dogs, and tension discs. It is recommended to clean after every few hours of use, especially when working with linty fabrics.

2. Lubrication

Refer to the detailed user manual for specific lubrication points and recommended oiling frequency. Use only high-quality sewing machine oil. Over-oiling can attract more lint and dust.

3. Needle Replacement

Replace the needle regularly, typically after 8-10 hours of sewing or when it becomes dull or bent. A dull needle can cause skipped stitches, fabric damage, or thread breakage. Ensure the flat side of the needle faces the back of the machine when inserting.



Image: Rear view of the sewing machine, showing the handwheel and the area where the needle is inserted.

Troubleshooting

This section addresses common issues you might encounter and provides potential solutions. For more complex problems, consult the full user manual or contact customer support.

Problem: Thread Breaking

Possible Causes & Solutions:

- **Incorrect Threading:** Re-thread the machine carefully, ensuring the thread passes through all guides and tension discs correctly.
- **Incorrect Tension:** Adjust the upper thread tension dial. Too tight or too loose can cause issues.
- **Dull or Bent Needle:** Replace the needle with a new, sharp one of the correct type and size for your fabric.
- **Poor Quality Thread:** Use good quality thread that is suitable for machine sewing.

Problem: Skipped Stitches

Possible Causes & Solutions:

- **Bent or Incorrect Needle:** Replace the needle. Ensure it is inserted correctly and is the right type for the fabric.
- **Improper Threading:** Check both upper and bobbin threading.
- **Needle Inserted Incorrectly:** Ensure the flat side of the needle is facing the back of the machine

and it is pushed up as far as it can go.

Problem: Fabric Puckering

Possible Causes & Solutions:

- **Incorrect Tension:** Adjust the tension settings.
- **Stitch Length Too Short:** Increase the stitch length for the fabric type.
- **Incorrect Presser Foot Pressure:** Adjust the presser foot pressure if your machine has this feature (refer to full manual).

Problem: Machine Jamming

Possible Causes & Solutions:

- **Tangled Thread in Bobbin Case:** Remove the bobbin case and clear any tangled threads. Reinsert the bobbin correctly.
- **Fabric Caught:** Gently pull the fabric out. If stuck, raise the needle and presser foot, then try to remove. Do not force.

Specifications

| Attribute | Detail |
|-------------------------|----------------------------|
| Brand | SINGER |
| Model Number | 2250 Tradition |
| Item Weight | 6 kg |
| Item Dimensions (LxWxH) | 43 x 22 x 35.2 Centimeters |
| Built-in Stitches | 9 |
| Stitch Functions | 70 |
| Motor Wattage | 70W |
| Buttonhole Style | 4-step |
| Frame Material | Heavy Duty Metal |

Warranty and Support

The Singer 2250 Tradition Zig-Zag Sewing Machine comes with a**2-year warranty** from the date of purchase. Please retain your purchase invoice for warranty claims.

Free Home Demo: Singer offers a free home demonstration service. To avail this, register your purchase details on the official Singer website or contact customer support.

Customer Support:

 
- **Manufacturer:** Singer India Limited
- **Address:** A-26/4, 2nd Floor, Mohan Cooperative Ind. Estate, New Delhi-110044, India
- **Toll-Free Number:** 1800-103-3474
- **Mobile:** 8860118855

- **Email:** customersupport@singerindia.com
- **Website:** www.singerindia.com

For detailed troubleshooting or service requests, please contact Singer customer support directly.

© 2024 SINGER. All rights reserved.


Documents - SINGER – 2250 Tradition

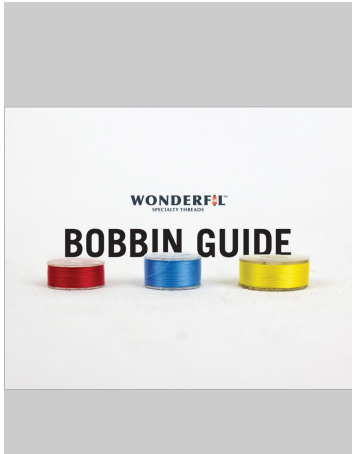

[\[pdf\]](#) Guide

Bobbin Machine Guide Size Resources WonderFil Europe 9172681024553398784 cdn shopify s files 1 1618 9609 |||

 TM TM BOBBIN GUIDE DISCLAIMER This bobbin guide is made available for use by WonderFil Specialty T ... 00 1507WC 1512 Promise II 1525 1725 1732 1748 188K 191D300A 2010 Superb 206K 206K25 20U 20U13 20U33 **2250 Tradition** 2259 Tradition 2263 2263 Simple 2273 Esteem II 2277 Tradition 2282 Tradition 237 239... lang:en **score:22** filesize: 1.28 M page_count: 19 document date: 2017-02-14

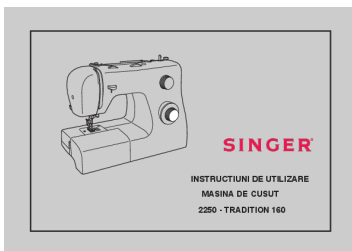

[\[pdf\]](#) User Manual

untitled manual masina de cusut 2250 2259 2263 i dedeman ro media file m a |||

INSTRUCTIUNI DE UTILIZARE MASINA DE CUSUT 2250 - TRADITION 160 MASURI DE SECURITATE La folosirea unui aparat electric trebuie respectate permanent anumite masuri de securitate, inclusiv cele de mai jos. Inainte de folosirea masinii cititi toate instructiunile. PERICOL - Pentru reducerea riscului d... lang:it **score:17** filesize: 1.62 M page_count: 43 document date: 2014-02-11



[\[pdf\]](#) Accessories

2250 1 singer it 80 assets files schede tecniche

2250 I Punti Giusti per Iniziare. Nuova SINGER Tradition. Una macchina che ti permette di regolar ... tempi. Cucire non mai stato cos semplice. Guarda come facile con la tua nuova Tradition. Nuova **2250 Tradition** Giusta per Imparare Semplicemente Perfetta. 2250 Caratteristiche 10 Punti essenzial... lang:it **score:17** filesize: 429.64 K page_count: 2 document date: 2010-06-21



[\[pdf\]](#) Decleration of Conformity Accessories

Just the Right stitches Introducing new SINGER® Tradition™ A machine that has variable stitch length
easy selection and a 4 step automatic buttonhole sewing never been so tradition 2250 eng
symaskinswebbshopen se Portals 0 Public Doc |||

Just the Right stitches to get you Started. Introducing the new SINGER Tradition™.
A machine that ... n so simple. See how easy it is to start your own traditions. New
4106_SVP_2250SalesSheet.indd 1 **2250 Tradition** Just Learning Just Perfect. 4/4/08
3:21:53 PM 2250 Features 10 Essential stitches...
lang:en **score:15** filesize: 3.21 M page_count: 2 document date: 2008-04-04