

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [PIONEER](#) /

› PIONEER DV-410VK Multi-Region DVD Player Instruction Manual

PIONEER DV-410VK

PIONEER DV-410VK Multi-Region DVD Player Instruction Manual

Model: DV-410VK

1. INTRODUCTION

Thank you for purchasing the PIONEER DV-410VK Multi-Region DVD Player. This manual provides essential information for the safe and efficient operation of your new device. Please read it thoroughly before use and retain it for future reference.

Key Features:

- Plays All Region DVDs
- HDMI Output with Upconversion (720p/1080i/1080p)
- USB Input for media playback
- Supports DVD-Audio and SACD playback
- 5.1 channel audio output
- Compatible with WMV, DivX (Ultra), JPEG, HD JPEG, MPEG-4 AAC, MP3, WMA formats
- PHOTO + MUSIC MIX (JPEG Slideshow with Music)
- Built-in DTS 96/24, DTS 5.1-Channel, and Dolby Digital 5.1-Channel Decoders



Figure 1: Front view of the PIONEER DV-410VK DVD Player.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent electric shock, fire, or damage to the unit.

- **Power Source:** Connect the unit only to an AC outlet of the voltage indicated on the rear panel.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings. Avoid placing the unit on soft surfaces that may block vents.
- **Water and Moisture:** Do not expose the unit to rain or moisture. Do not place objects filled with liquids, such as vases, on the unit.
- **Foreign Objects:** Do not insert any foreign objects into the unit's openings.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a dry cloth only.
- **Servicing:** Do not attempt to service the unit yourself. Refer all servicing to qualified service personnel.

3. SETUP

3.1 Connecting to a Television

For the best picture quality, connect the DVD player to your television using an HDMI cable.

1. Connect one end of an HDMI cable to the HDMI OUT port on the rear of the DVD player.
2. Connect the other end of the HDMI cable to an HDMI input port on your television.
3. Turn on your television and select the corresponding HDMI input.

Alternatively, you can use composite video or component video cables if your TV does not have an HDMI input. Refer to your TV's manual for connection details.

3.2 Audio Connections

The DV-410VK offers various audio output options for connecting to an amplifier or home theater system.

- **HDMI Audio:** If using HDMI for video, audio will also be transmitted via the HDMI cable to your TV or HDMI-compatible receiver.
- **Digital Audio (Optical/Coaxial):** For multi-channel audio to a compatible receiver, use the optical or coaxial digital audio output. Connect a digital audio cable from the player's DIGITAL OUT (OPTICAL or COAXIAL) to the corresponding input on your receiver.
- **Analog Audio (5.1 Channel):** For direct connection to a 5.1 channel amplifier, use the dedicated 5.1 channel analog audio outputs. Connect RCA cables from each output (Front L/R, Center, Surround L/R, Subwoofer) to the corresponding inputs on your amplifier.

4. OPERATING INSTRUCTIONS

4.1 Basic Disc Playback

1. Press the **POWER** button to turn on the DVD player.
2. Press the **OPEN/CLOSE** button to open the disc tray.
3. Place a disc (DVD, CD, SACD, DVD-Audio) gently onto the disc tray with the label side facing up.
4. Press the **OPEN/CLOSE** button again to close the disc tray.
5. Playback will usually start automatically. If not, press the **PLAY** button.
6. Use the **STOP**, **PAUSE**, **FAST FORWARD**, and **REWIND** buttons on the remote control for playback control.

4.2 USB Media Playback

The DV-410VK supports playback of various media files from a USB storage device.

1. Insert a USB storage device into the USB port on the front panel of the player.
2. The player should automatically detect the USB device and display a menu. If not, select the USB input using the **INPUT** or **FUNCTION** button on the remote.
3. Navigate through the folders and files using the arrow keys and **ENTER** button on the remote control.
4. Select the desired file (WMV, DivX, JPEG, MP3, WMA) and press **PLAY** to start playback.

Note: Not all USB devices or file formats may be compatible. Ensure your USB device is formatted to FAT16 or FAT32.

4.3 System Settings

Access the system settings menu to configure various player options, including video output, audio settings, and language preferences.

1. Press the **SETUP** button on the remote control.
2. Use the arrow keys to navigate through the menu options.
3. Press **ENTER** to select an option or confirm a setting.
4. Press **SETUP** again to exit the menu.

5. MAINTENANCE

5.1 Cleaning the Unit

To maintain the appearance and performance of your DVD player:

- Wipe the exterior surfaces with a soft, dry cloth.
- For stubborn stains, dampen the cloth with a mild detergent solution and wipe gently, then dry thoroughly.
- Do not use abrasive cleaners, benzene, thinners, or other volatile solvents, as they may damage the finish.

5.2 Disc Care

Handle discs by their edges to avoid fingerprints. Keep discs clean and free from scratches. Store discs in their cases when not in use.

6. TROUBLESHOOTING

If you experience problems with your DVD player, refer to the following table for possible solutions.

Problem	Possible Cause	Solution
No power	Power cord not connected securely.	Check power cord connection to the unit and wall outlet.
No picture	Incorrect video input selected on TV. Video cable not connected properly.	Select the correct input on your TV. Check HDMI or other video cable connections.
No sound	Audio cables not connected. TV/receiver volume too low or muted. Incorrect audio output setting.	Check audio cable connections. Adjust volume. Verify audio output settings in the player's menu.
Disc does not play	Disc is dirty, scratched, or inserted incorrectly. Incompatible disc format.	Clean the disc. Ensure it's inserted label-side up. Check if the disc format is supported.
USB device not recognized	Incompatible USB format or file system. Device draws too much power.	Ensure USB is FAT16/FAT32. Try a different USB device. Use a powered USB hub if necessary.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	PIONEER
Model	DV-410VK

Feature	Detail
Media Type	CD, DVD (DVD/SVCD/VCD/CD/DVD-Audio/SACD/CD-R/-RW/DVD-R/-R DL/-RW/DVD+R/+R DL/+RW)
Special Feature	Compact, Multi-Region Playback
Resolution (Upconversion)	Up to 1920x1080 (1080p) via HDMI
Connector Types	HDMI, USB, Analog Audio (5.1ch), Digital Audio (Optical, Coaxial), Composite Video, Component Video
Connectivity Technology	HDMI, USB
Color	Black
Item Weight	3.8 Pounds (1.7 kg)
Product Dimensions (L x W x H)	16.54" x 8.48" x 1.95" (420 x 215.5 x 49.5 mm)
Audio Output Mode	Surround (5.1 Channel)
Analog Video Format	NTSC (Dual System PAL/NTSC compatible)
Number of Audio Channels	6 (for 5.1 channel output)
D/A Converter	192 kHz/24-bit (6ch)
Supported Compressed Formats	WMV, DivX (Ultra), JPEG, HD JPEG, MPEG-4 AAC, MP3, WMA

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official PIONEER website. Keep your purchase receipt as proof of purchase.

[PIONEER Official Website \(Example Link\)](#)

